

I32R

Spare parts

Ersatzteile

Pièces détachées

 
Reserve onderdelen

Repuestos



Reservdelar

A

*compl 502 18 06-01

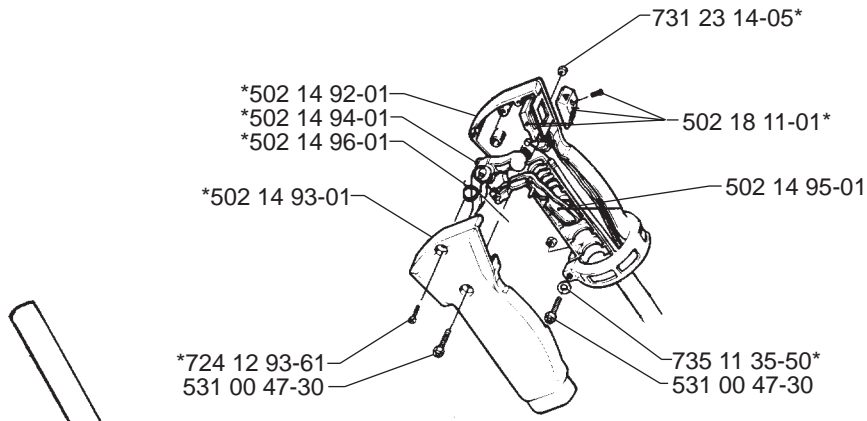





**compl 502 18 12-01


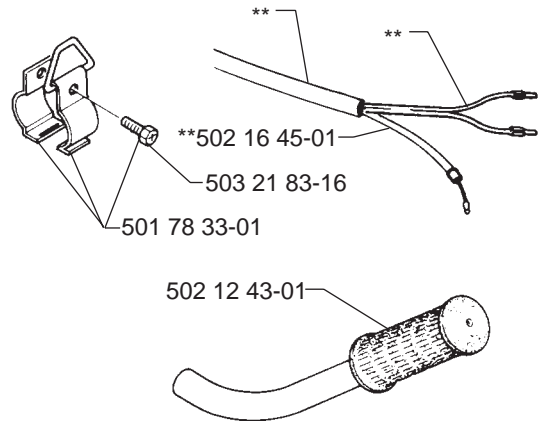 
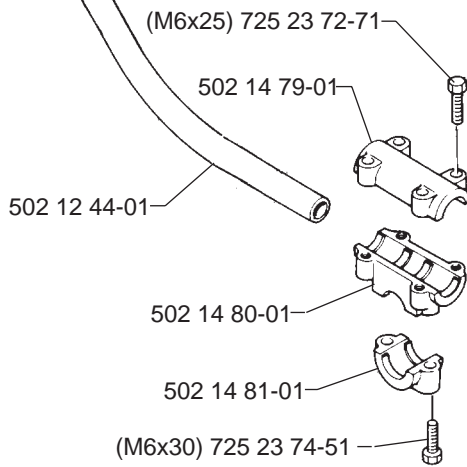 


H

    
*compl 531 00 47-34
**compl 502 19 11-01

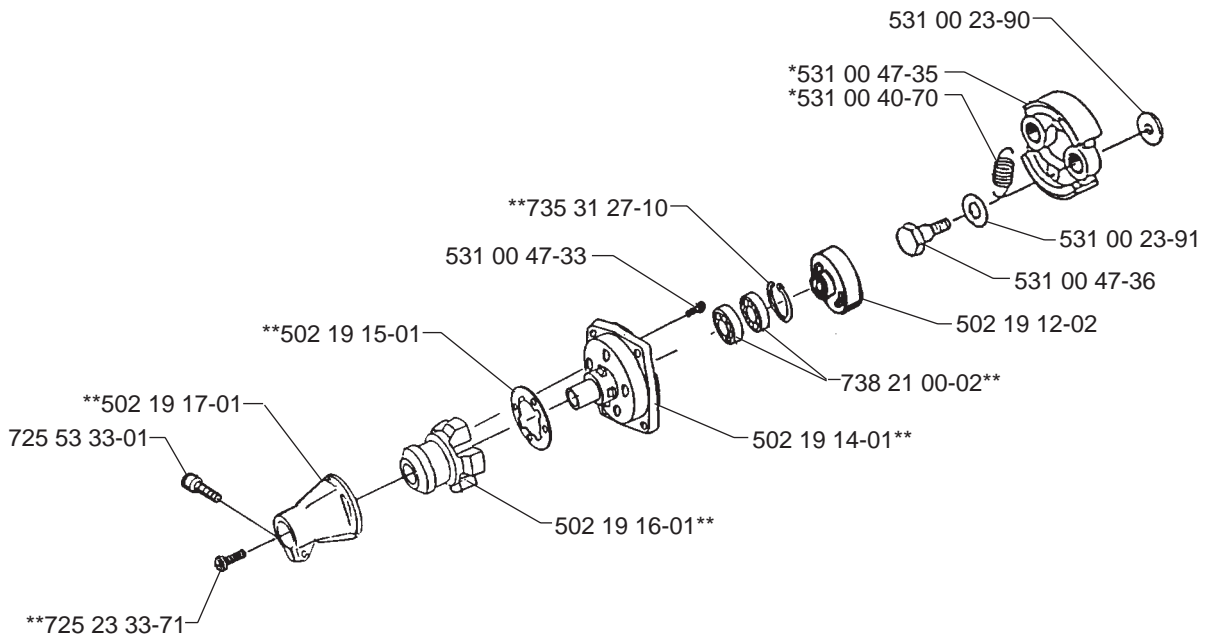

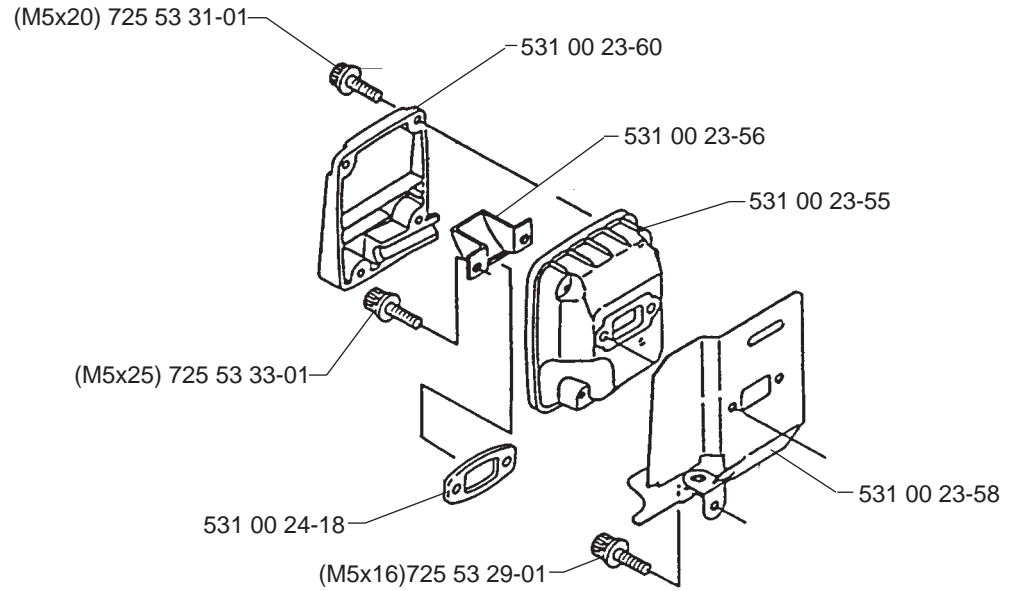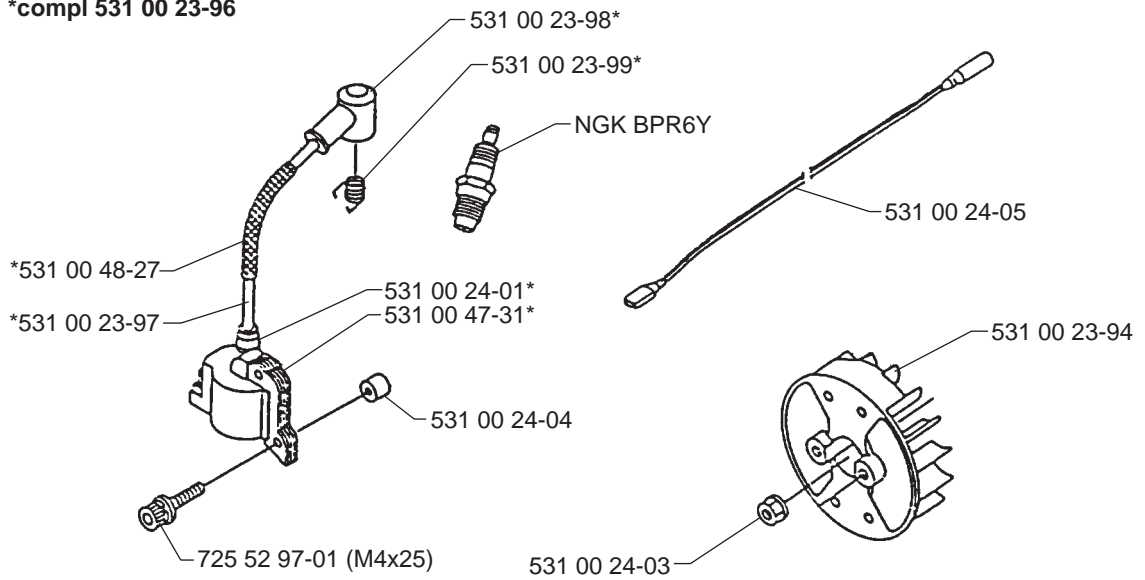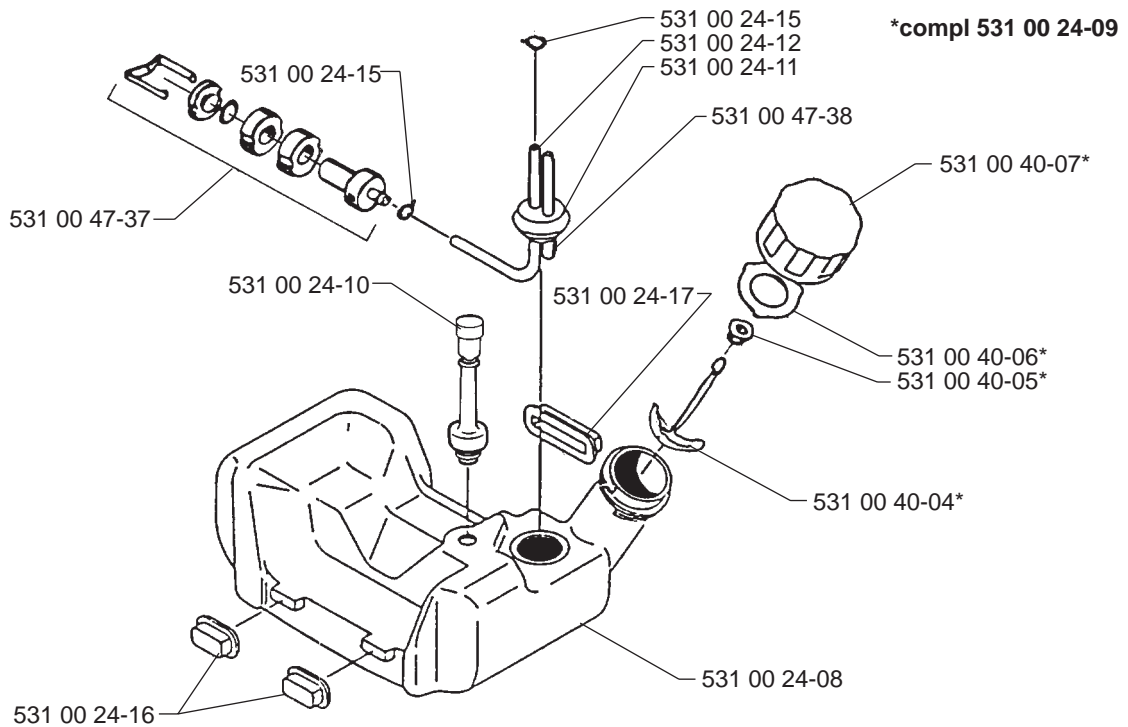
B**E*****compl 531 00 23-96****J**

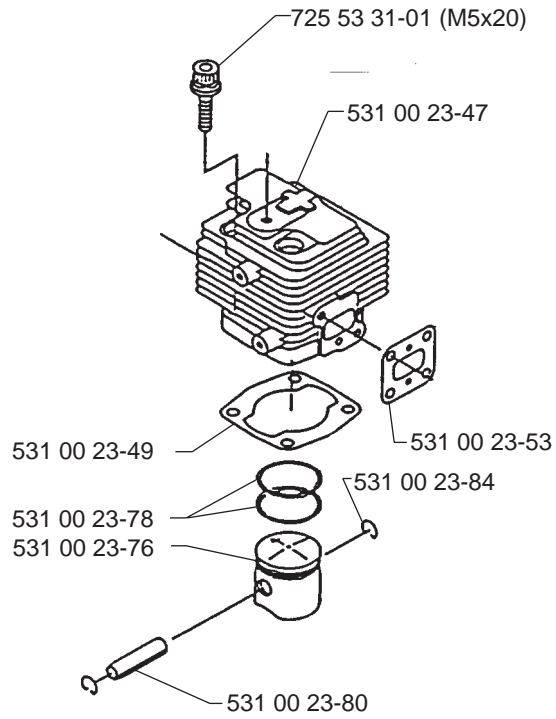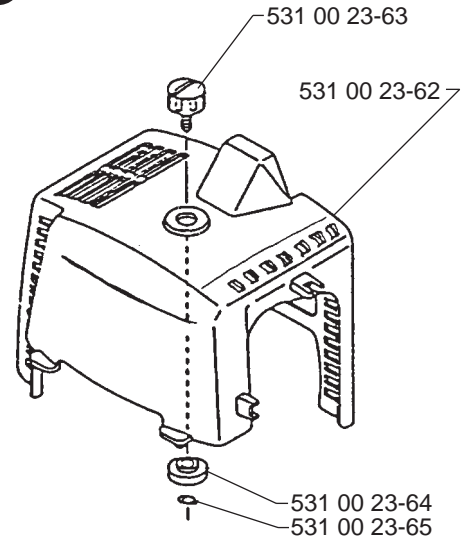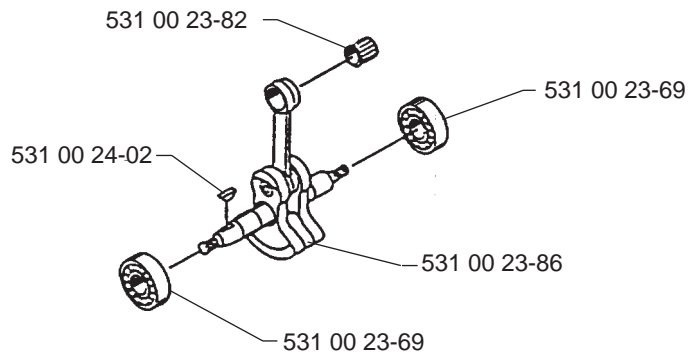   C**D****F****K**

 
*compl 531 00 23-67

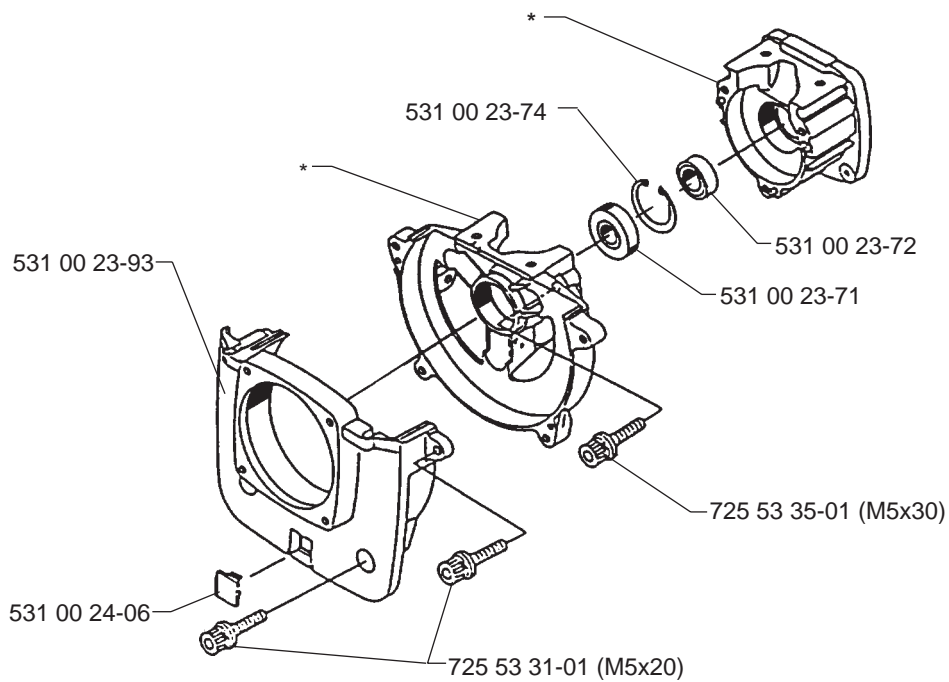


G

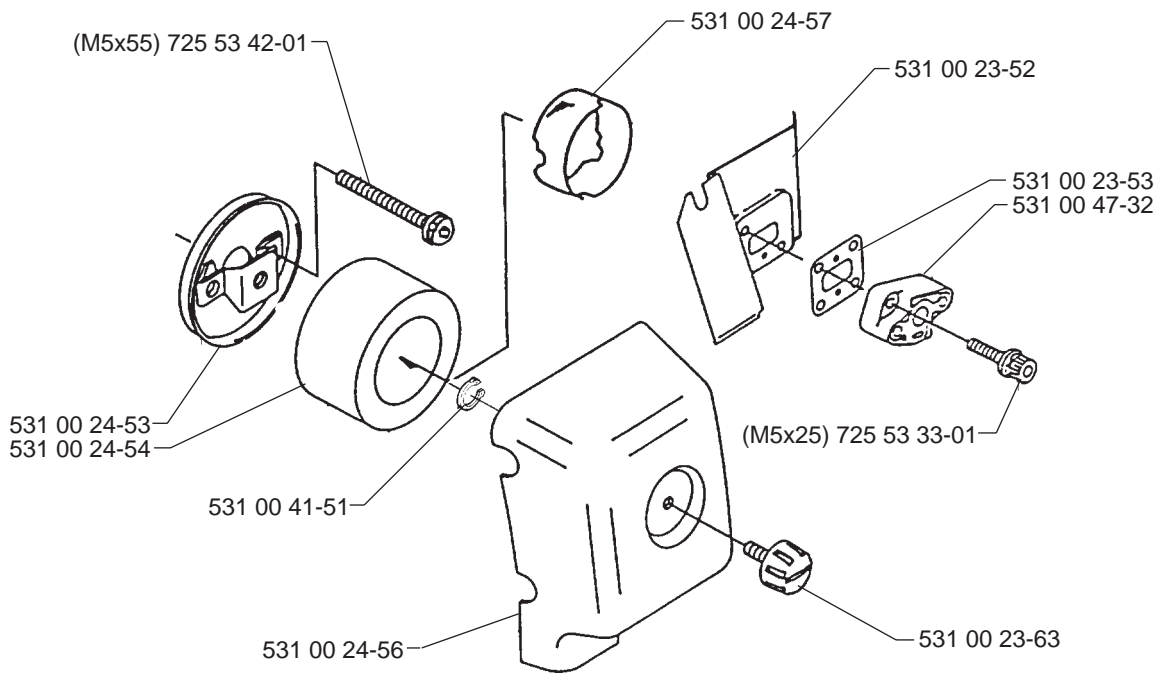 

L

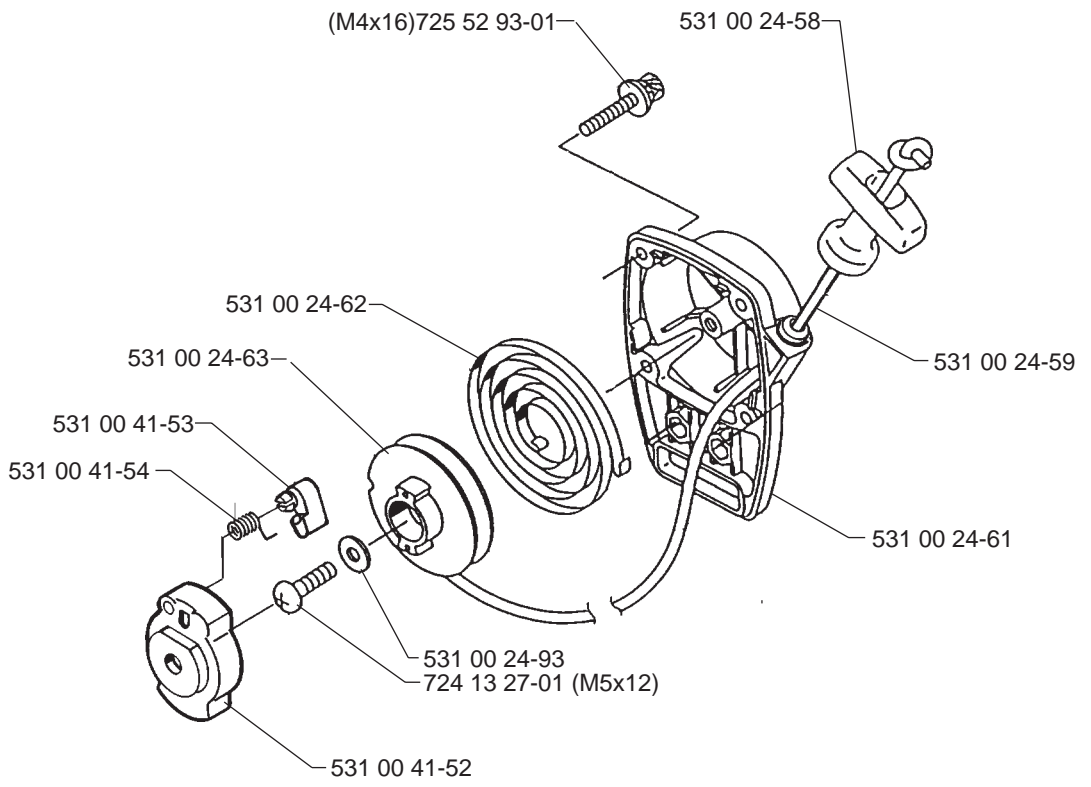 


M

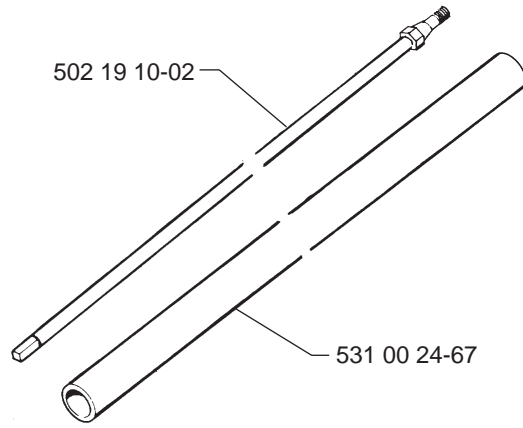 


S

 *compl 531 00 40-26

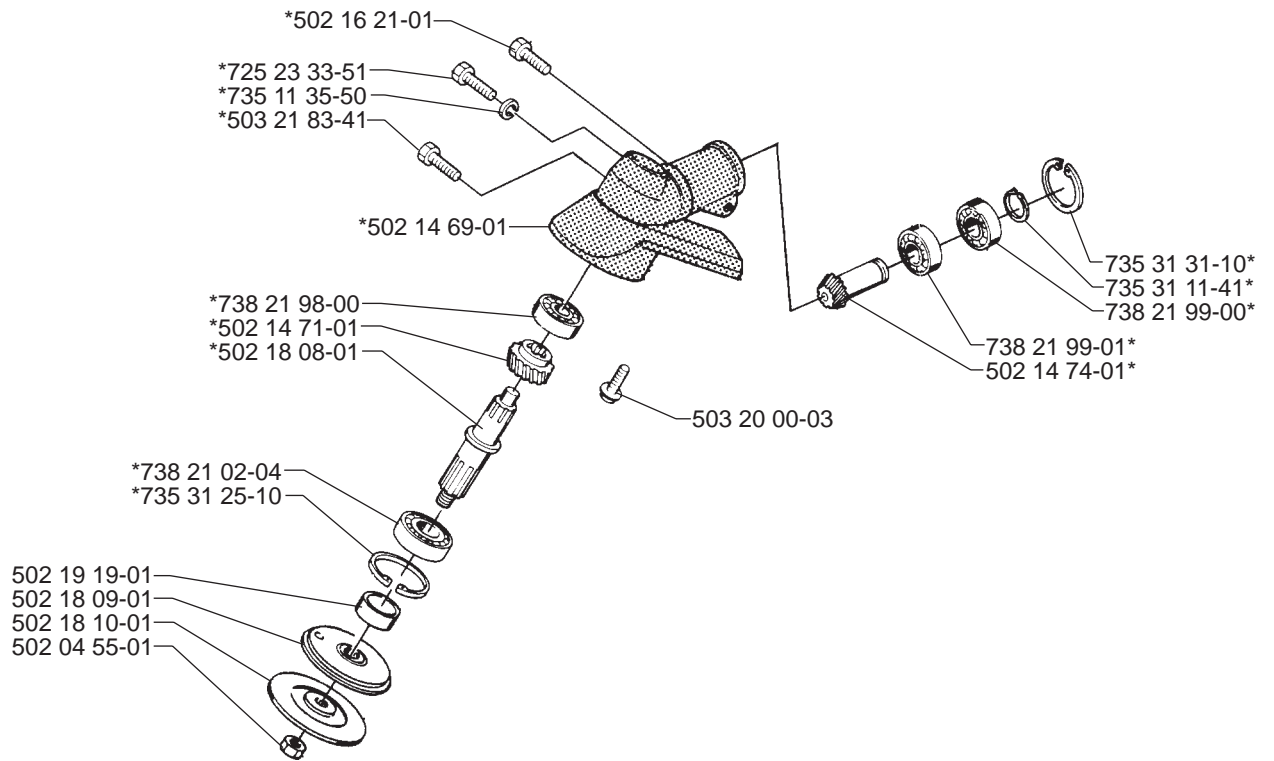

R

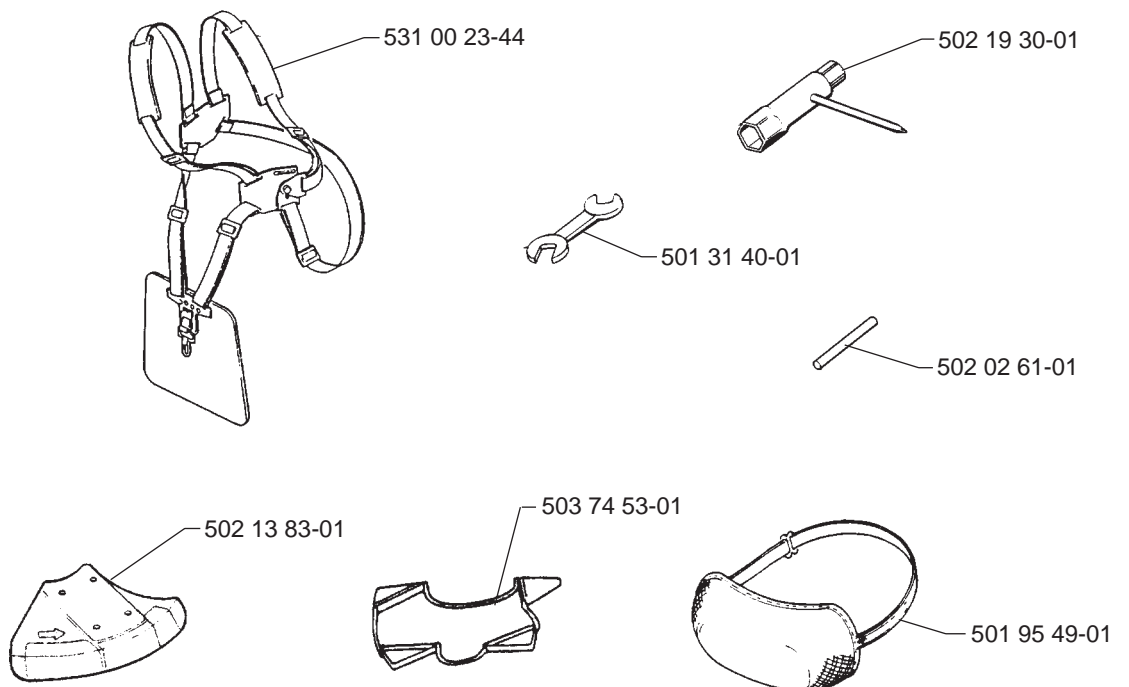 

P

*compl 531 00 24-20

