



Operating Instructions and Parts Manual


TS Series 2-speed Electric Chain Hoists



JET
427 New Sanford Road
LaVergne, Tennessee 37086
Ph.: 800-274-6848
www.jettools.com

Document No. M-140233
Edition 2 12/2020
Copyright © 2020 JET

21.1.1 TS050,TS100 Motor Assembly and Housing – Exploded View

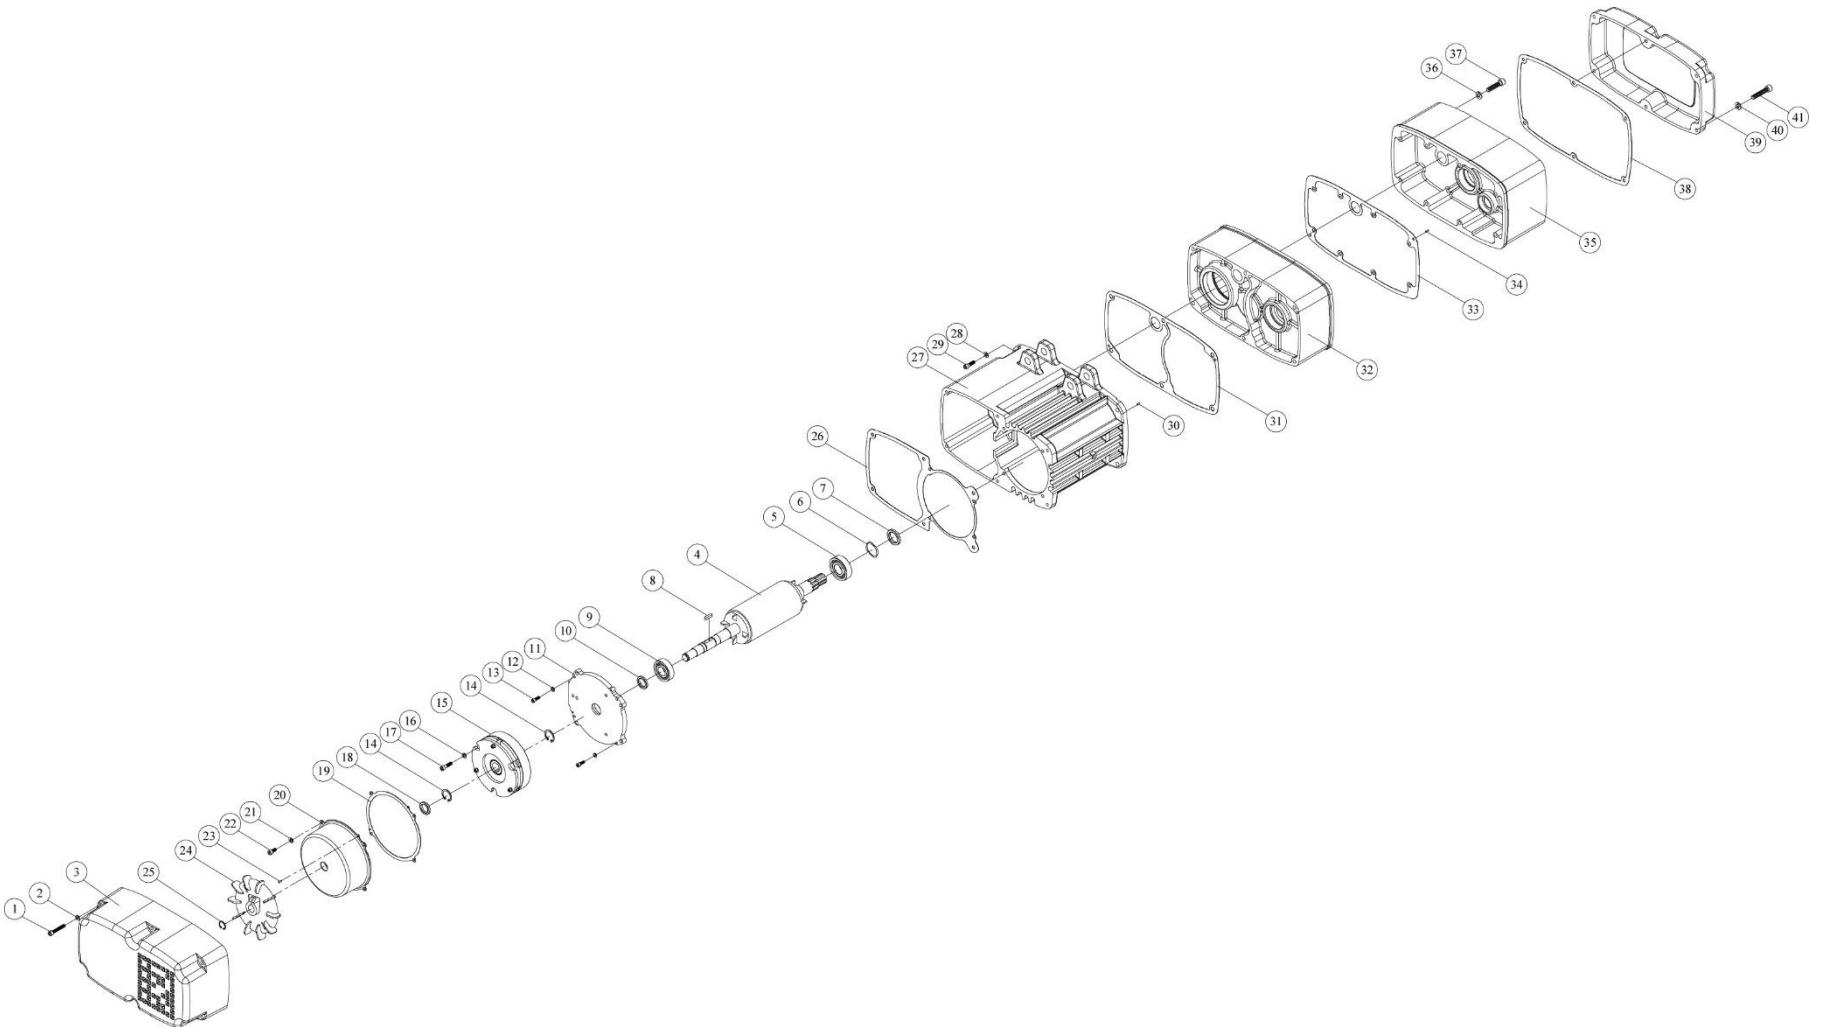


21.1.2 TS050,TS100 Motor Assembly and Housing – Parts List

| Index No. | Part No. | Description | Size | Qty |
|------------------|-----------------|-----------------------------|------------------------------|------------|
| 1 | TS-1502101 | Socket Hd Cap Screw | M5×0.8×45..... | 6 |
| | TS-2143141 | | M6×1.0×75..... | 6 |
| 2 | TS-2361051 | Spring Washer | M5..... | 6 |
| | TS-2361061 | | M6..... | 6 |
| 3 | TS050-A03 | End Cover..... | | 1 |
| | TS100-A03 | | | 1 |
| 4 | TS050-A04 | Motor Rotor..... | | 1 |
| | TS100-A04 | | | 1 |
| 5 | BB-62042RS | Bearing | 62042RS..... | 1 |
| | BB-6205ZZ | | 6205ZZ..... | 1 |
| 6 | TS050-A06 | Wave Washer | 6205..... | 1 |
| 7 | TS050-A07 | Oil Seal | Ø20×Ø35×8t..... | 1 |
| | TS100-A07 | | Ø25×Ø45×8t..... | 1 |
| 8 | 6293356 | Key, Dbl Rd Hd | t6×6×20L..... | 1 |
| 9 | BB-62042RS | Bearing | 62042RS..... | 1 |
| | BB-6304ZZ | | 6304ZZ..... | 1 |
| 10 | TS050-A07 | Oil Seal | Ø20×Ø35×8t..... | 1 |
| 11 | TS050-A11 | Motor End Cover..... | | 1 |
| | TS100-A11 | | | 1 |
| 12 | TS-2361051 | Spring Washer | M5..... | 4 |
| | TS-2361061 | | M6..... | 4 |
| 13 | TS-1502051 | Socket Hd Cap Screw..... | M5×0.8×20..... | 4 |
| | TS-1503061 | | M6×1.0×25..... | 4 |
| 14 | 1017067 | C-Retaining Ring, Ext | S-19..... | 2 |
| 15 | TS050-A15 | Brake Assembly | SNT-102-075..... | 1 |
| | TS100-A15 | | TSB-124-150..... | 1 |
| 16 | TS-2361061 | Spring Washer | M6..... | 3 |
| 17 | TS-1503081 | Socket Hd Cap Screw..... | M6×1.0×35..... | 3 |
| 18 | TS050-A18 | Oil Seal | VA18..... | 1 |
| 19 | TS050-A19 | Brake End Cover Gasket..... | | 1 |
| | TS100-A19 | | | 1 |
| 20 | TS050-A20 | Brake End Cover | | 1 |
| | TS100-A20 | | | 1 |
| 21 | TS-2361051 | Spring Washer | M5..... | 4 |
| 22 | TS-1502021 | Socket Hd Cap Screw..... | M5×0.8×10..... | 4 |
| 23 | TS050-A23 | Pin | Ø3×10..... | 2 |
| 24 | TS050-A24 | Fan | Ø124×Ø14..... | 1 |
| | TS100-A24 | | Ø138×Ø16..... | 1 |
| 25 | F006042 | C-Retaining Ring, Ext | S-14..... | 1 |
| | F006044 | | S-16..... | 1 |
| 26 | TS050-A26 | End Cover Gasket | | 1 |
| | TS100-A26 | | | 1 |
| 27 | TS050-A27 | Motor Stator Assembly..... | 3~230V,60Hz,1.1/0.28kW | 1 |
| | TS100-A27 | | 3~230V,60Hz,1.5/0.37kW | 1 |
| | TS050-A27M | Motor Stator Assembly..... | 3~460V,60Hz,1.1/0.28kW | 1 |
| | TS100-A27M | | 3~460V,60Hz,1.5/0.37kW | 1 |
| 28 | TS-2361081 | Spring Washer | M8..... | 6 |
| 29 | TS-1504071 | Hex. Bolt | M8×1.25×35..... | 6 |
| | TS-1504061 | | M8×1.25×30..... | 6 |
| 30 | TS050-A30 | Pin | Ø5×12..... | 2 |
| 31 | TS050-A31 | Motor Gasket | | 1 |
| | TS100-A31 | | | 1 |
| 32 | TS050-A32 | Gearbox | | 1 |
| | TS100-A32 | | | 1 |
| 33 | TS050-A33 | Gearbox Gasket | | 1 |
| | TS100-A33 | | | 1 |
| 34 | TS050-A30 | Pin | Ø5×12..... | 2 |
| 35 | TS050-A35 | Gearbox Cover | | 1 |
| | TS100-A35 | | | 1 |

| Index No. | Part No. | Description | Size | Qty |
|------------------|------------------|-----------------------------|----------------|------------|
| 36 | TS-2361061 | Spring Washer | M6..... | 6 |
| 37 | TS-1503121 | Socket Hd Cap Screw..... | M6x1.0x55..... | 6 |
| | TS-2236801 | | M6x1.0x85..... | 8 |
| 38 | TS050-A38 | Electric Cover Gasket | | 1 |
| | TS100-A38 | | | 1 |
| 39 | TS050-A39 | Electric Cover | | 1 |
| | TS100-A39 | | | 1 |
| 40 | TS-2361061 | Spring Washer | M6..... | 8 |
| 41 | TS-1503091 | Socket Hd Cap Screw..... | M6x1.0x40..... | 8 |
| | TS-1503081 | | M6x1.0x35..... | 6 |

21.2.1 TS050, TS100 Hook Assembly – Exploded View

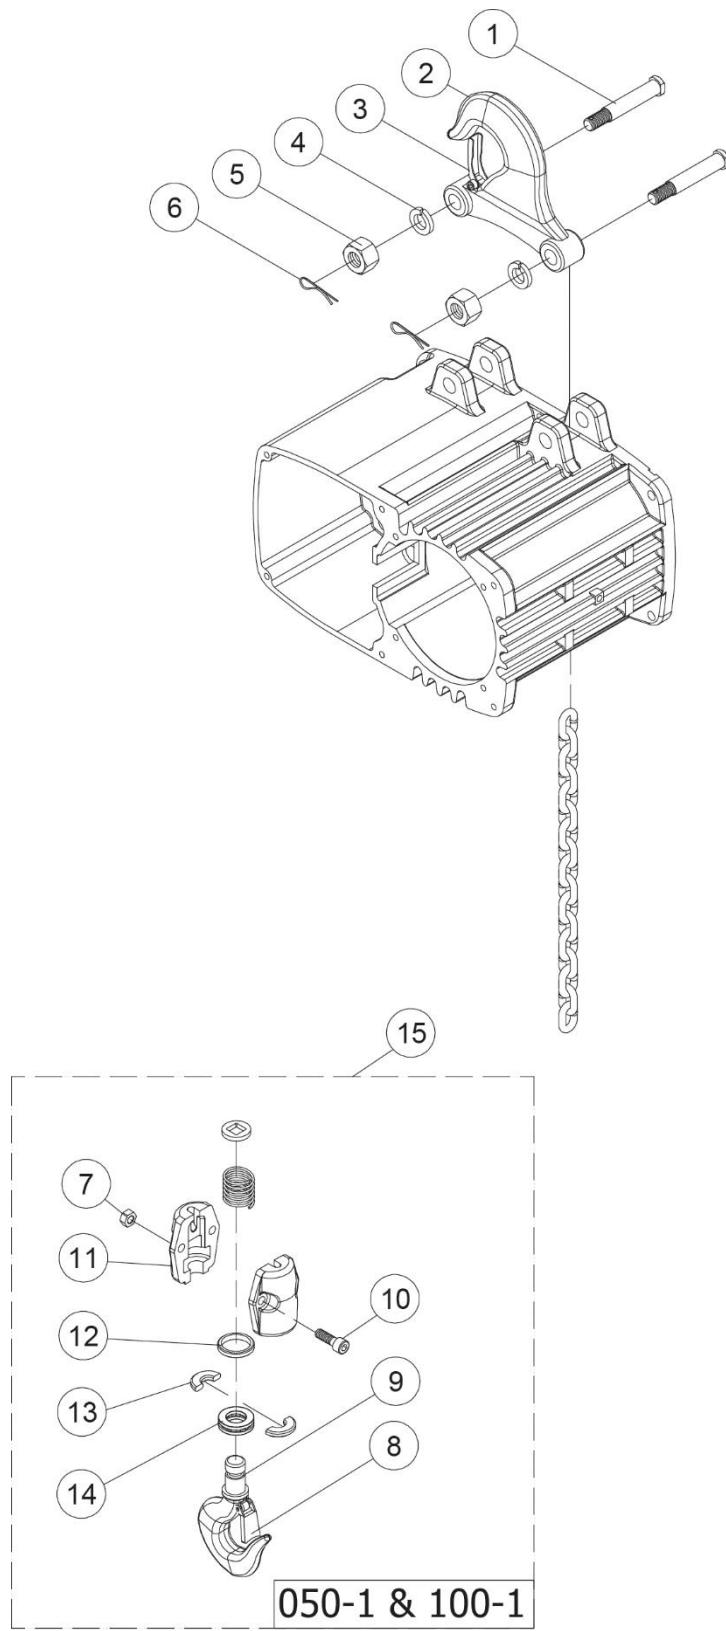


050-1 & 100-1

21.2.2 TS050, TS100 Hook Assembly – Parts List

| Index No. | Part No. | Description | Size | Qty |
|------------------|-----------------|-------------------------------|-------------|------------|
| 1 | TS050-B01 | Lock Bolt | Ø14x83 | 2 |
| 2 | TS050-B02 | Top Hook Assembly | | 1 |
| | TS100-B02 | | | 1 |
| 3 | TS050-B03 | Safety Latch Assembly | | 1 |
| 4 | TS-2361121 | Spring Washer | M12 | 2 |
| 5 | TS-1540081 | Hex Nut | M12x1.75 | 2 |
| 6 | TS050-B06 | Cotter Pin | Ø3x30 | 2 |
| 7 | TS-1541031 | Nylon Nut | M8x1.25 | 2 |
| | TS-1541021 | | M6x1.0 | 2 |
| 8 | TS050-B08 | Safety Latch Assembly | | 1 |
| | TS100-B08 | | | 1 |
| 9 | TS050-B09 | Bottom Hook Assembly | | 1 |
| | TS100-B09 | | | 1 |
| 10 | TS-1504061 | Socket Hd Cap Screw | M8x1.25x30 | 2 |
| 11 | TS050-B11 | Bottom Block Cover | | 1 |
| | TS100-B11 | | | 1 |
| 12 | TS050-B12 | End Spacer | | 1 |
| 13 | TS050-B13 | Half Spacer | | 2 |
| 14 | BB-2904 | Thrust Bearing | 2904 | 1 |
| 15 | TS050-B15 | Bottom Hook Complete Assembly | | 1 |
| | TS100-B15 | | | 1 |


21.3.1 TS050, TS100 Load Chain – Exploded View

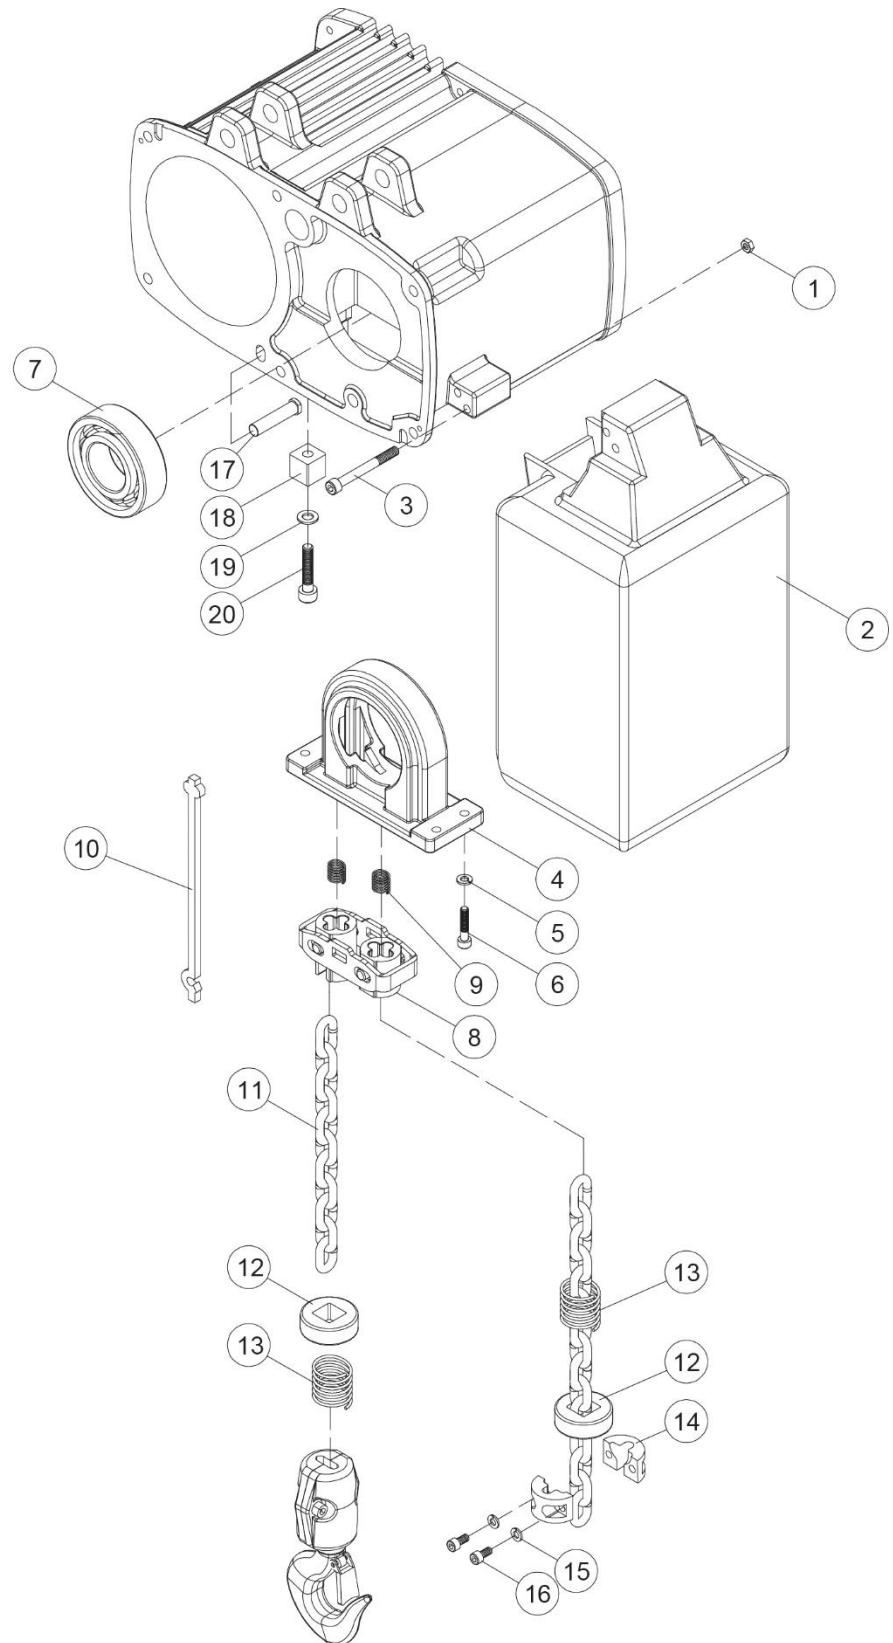

21.3.2 TS050, TS100 Load Chain – Parts List

| Index No. | Part No. | Description | Size | Qty |
|------------------|-----------------|----------------------------------|--------------------------|------------|
| 1 | TS-1541011 | Nylon Nut | M5..... | 2 |
| | TS-1541021 | | M6..... | 2 |
| 2 | | Chain Container (see chart)..... | | 1 |
| 3 | TS-2235801 | Socket Hd Cap Screw | M5x0.8x80..... | 2 |
| | TS-2236801 | | M6x1.0x80..... | 2 |
| 4 | TS050-C04 | Chain Regulator..... | | 1 |
| | TS100-C04 | | | 1 |
| 5 | TS-2361061 | Spring Washer | M6..... | 4 |
| 6 | TS-1503041 | Socket Hd Cap Screw..... | M6x1.0x16 | 4 |
| 7 | BB-6303ZZ | Bearing | 6306ZZ..... | 1 |
| 8 | TS050-C08 | Guide Tube Ass'y | | 1 |
| | TS100-C08 | | | 1 |
| 9 | TS050-C09 | Spring | | 2 |
| | TS100-C09 | | | 2 |
| 10 | TS050-C10 | Chain Puller | Ø6.3x19.1mm..... | 1 |
| | TS100-C10 | | Ø7.1x20.2mm..... | 1 |
| 11 | LCHAIN-6X19 | Load Chain | Ø6.3x19.1mm..... per ft. | |
| | LCHAIN-7X20 | | Ø7.1x20.2mm..... per ft. | |
| 12 | TS050-C12 | Limit Stopper Ass'y | | 2 |
| 13 | TS050-C13 | Spring | | 2 |
| 14 | TS050-C14 | Chain Stopper..... | | 2 |
| 15 | TS-2361061 | Spring Washer | M6..... | 2 |
| 16 | TS-1503051 | Socket Hd Cap Screw..... | M6x1.0x20..... | 2 |
| 17 | TS050-C17 | Chain Connecting Pin | Ø14x50..... | 1 |
| | TS100-C17 | | Ø16x80 | 1 |
| 18 | TS050-C18 | Fixed Block | | 1 |
| | TS100-C18 | | | 1 |
| 19 | TS-2361051 | Spring Washer | M5..... | 1 |
| | TS-2361061 | | M6..... | 1 |
| 20 | TS-1502051 | Socket Hd Cap Screw..... | M5x0.8x20..... | 1 |
| | TS-1503041 | | M6x1.0x16..... | 1 |

21.4.1 TS050, TS100 Gear Box – Exploded View

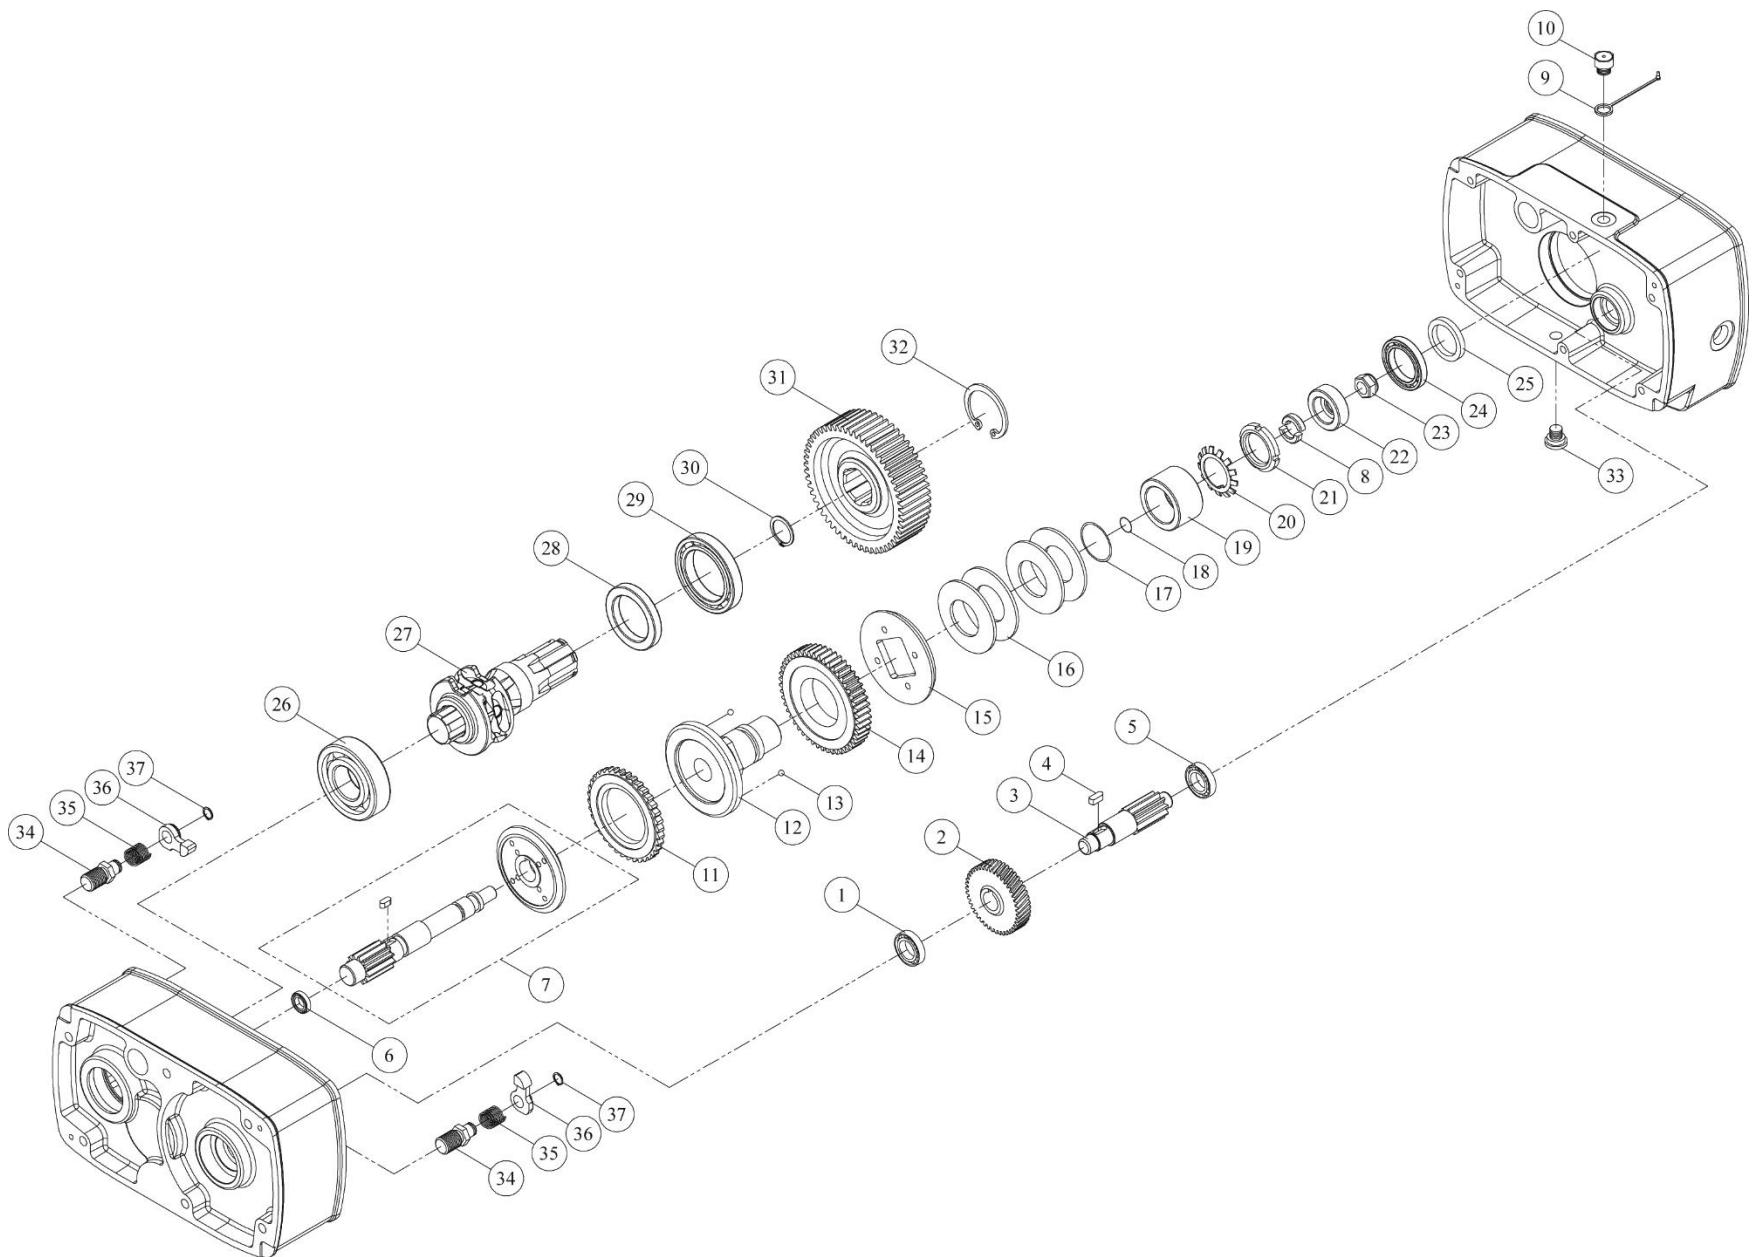


21.4.2 TS050, TS100 Gear Box – Parts List

| Index No. | Part No. | Description | Size | Qty |
|------------------|-----------------|------------------------|---------------|------------|
| 1 | BB-6002ZZ | Bearing | 6002ZZ | 1 |
| | BB-6202 | Bearing | 6202 | 1 |
| 2 | TS050-D02 | 2nd Gear | M1.25x50Tx14L | 1 |
| | TS100-D02 | 2nd Gear | M1.5x42Tx17L | 1 |
| 3 | TS050-D03 | 3rd Gear | M2x12Tx88L | 1 |
| | TS100-D03 | 3rd Gear | M2x10Tx105L | 1 |
| 4 | 5512400 | Key, Dbl Rd Hd | t6x6x12L | 1 |
| | 3K00227 | Key, Dbl Rd Hd | t6x6x15L | 1 |
| 5 | BB-6002ZZ | Bearing | 6002ZZ | 1 |
| | BB-6202 | Bearing | 6202 | 1 |
| 6 | BB-6204 | Bearing | 6204 | 1 |
| | BB-6304 | Bearing | 6304 | 1 |
| 7 | TS050-D07A | 5th Gear Ass'y | M2x12T | 1 |
| | | 5th Gear Ass'y | M2x13T | 1 |
| | TS100-D07A | 5th Gear Ass'y | M2.25x13T | 1 |
| | | 5th Gear Ass'y | M2.25x15T | 1 |
| 8 | TS050-D08 | Load Brake Gear Spacer | | 2 |
| | TS100-D08 | | | 2 |
| 9 | TS050-D09 | Breather Plug | | 1 |
| 10 | TS050-D10 | Hex. Oil Plug | | 1 |
| 11 | TS050-D11 | Ratchet Ass'y | | 1 |
| | TS100-D11 | | | 1 |
| 12 | TS050-D12 | Brake Bushing | | 1 |
| | TS100-D12 | | | 1 |
| 13 | SB-6MM | Ball | Ø6 | 3 |
| 14 | TS050-D14 | 4th Gear Ass'y | M2x49Tx18 | 1 |
| | TS100-D14 | 4th Gear Ass'y | M2x54Tx21 | 1 |
| 15 | TS050-D15 | Brake Body | Ø90x7.6L | 1 |
| | TS100-D15 | Brake Body | Ø101x7L | 1 |
| 16 | TS050-D16 | Disc Spring | Ø70xØ35.5x3t | 3 |
| | TS100-D16 | Disc Spring | Ø80xØ36x3t | 4 |
| 17 | TS050-D17 | O-Ring | P-29 | 1 |
| 18 | TS050-D18 | O-Ring | P-14 | 1 |
| | TS100-D18 | O-Ring | P-18 | 1 |
| 19 | TS050-D19 | Disc Spring Bushing | | 1 |
| | TS100-D19 | | | 1 |
| 20 | TS050-D20 | Spacer | AW06 | 1 |
| | TS100-D20 | Spacer | AW07 | 1 |
| 21 | TS050-D21 | Nut | KM6 | 1 |
| | TS100-D21 | Nut | KM7 | 1 |
| 22 | TS050-D22 | End Spacer | Ø40xØ14x13L | 1 |
| | TS100-D22 | End Spacer | Ø45xØ14x13L | 1 |
| 23 | TS-2342121 | Lock Nut | M12x1.75 | 1 |
| 24 | TS050-D24 | Bearing | 6910ZZ | 1 |
| | BB-6912 | Bearing | 6912 | 1 |
| 25 | TS050-D25 | Oil Seal | Ø50xØ68x9t | 1 |
| | TS100-D25 | Oil Seal | Ø60xØ80x8t | 1 |
| 26 | BB-6006ZZ | Bearing | 6006ZZ | 1 |
| | BB-6306ZZ | Bearing | 6306ZZ | 1 |
| 27 | TS050-D27 | Load Sheave | Ø68.5x144L | 1 |
| | TS100-D27 | Load Sheave | Ø73x158.5L | 1 |
| 28 | TS050-D28 | Oil Seal | Ø35xØ50x8t | 1 |
| | TS100-D28 | Oil Seal | Ø45xØ72x10t | 1 |
| 29 | BB-6006ZZ | Bearing | 6006ZZ | 1 |
| | BB-6208 | Bearing | 6208 | 1 |
| 30 | F006050 | C-Retaining Ring, Ext | S-25 | 1 |
| | F006096 | C-Retaining Ring, Ext | S-38 | 1 |
| 31 | TS050-D31 | 6th Gear | M2x43T | 1 |
| | TS100-D31 | 6th Gear | M2.25x54T | 1 |
| 32 | F006097 | C-Retaining Ring, Int | R-55 | 1 |

| Index No. | Part No. | Description | Size | Qty |
|------------------|-----------------|-----------------------|-------------|------------|
| | F006094 | C-Retaining Ring, Int | R-80 | 1 |
| 33 | TS050-D33 | Lubricant Drain Bolt | | 1 |
| 34 | TS050-D34 | Ratchet Pawl Pin | | 2 |
| | TS100-D34 | | | 1 |
| 35 | TS050-D35 | Ratchet Pawl Spring | | 2 |
| | TS100-D35 | | | 1 |
| 36 | TS050-D36 | Ratchet Pawl | | 2 |
| | TS100-D36 | | | 1 |
| 37 | F006098 | C-Retaining Ring, Ext | S-11 | 2 |


21.5.1 TS050, TS100 Electrical Assembly – Exploded View

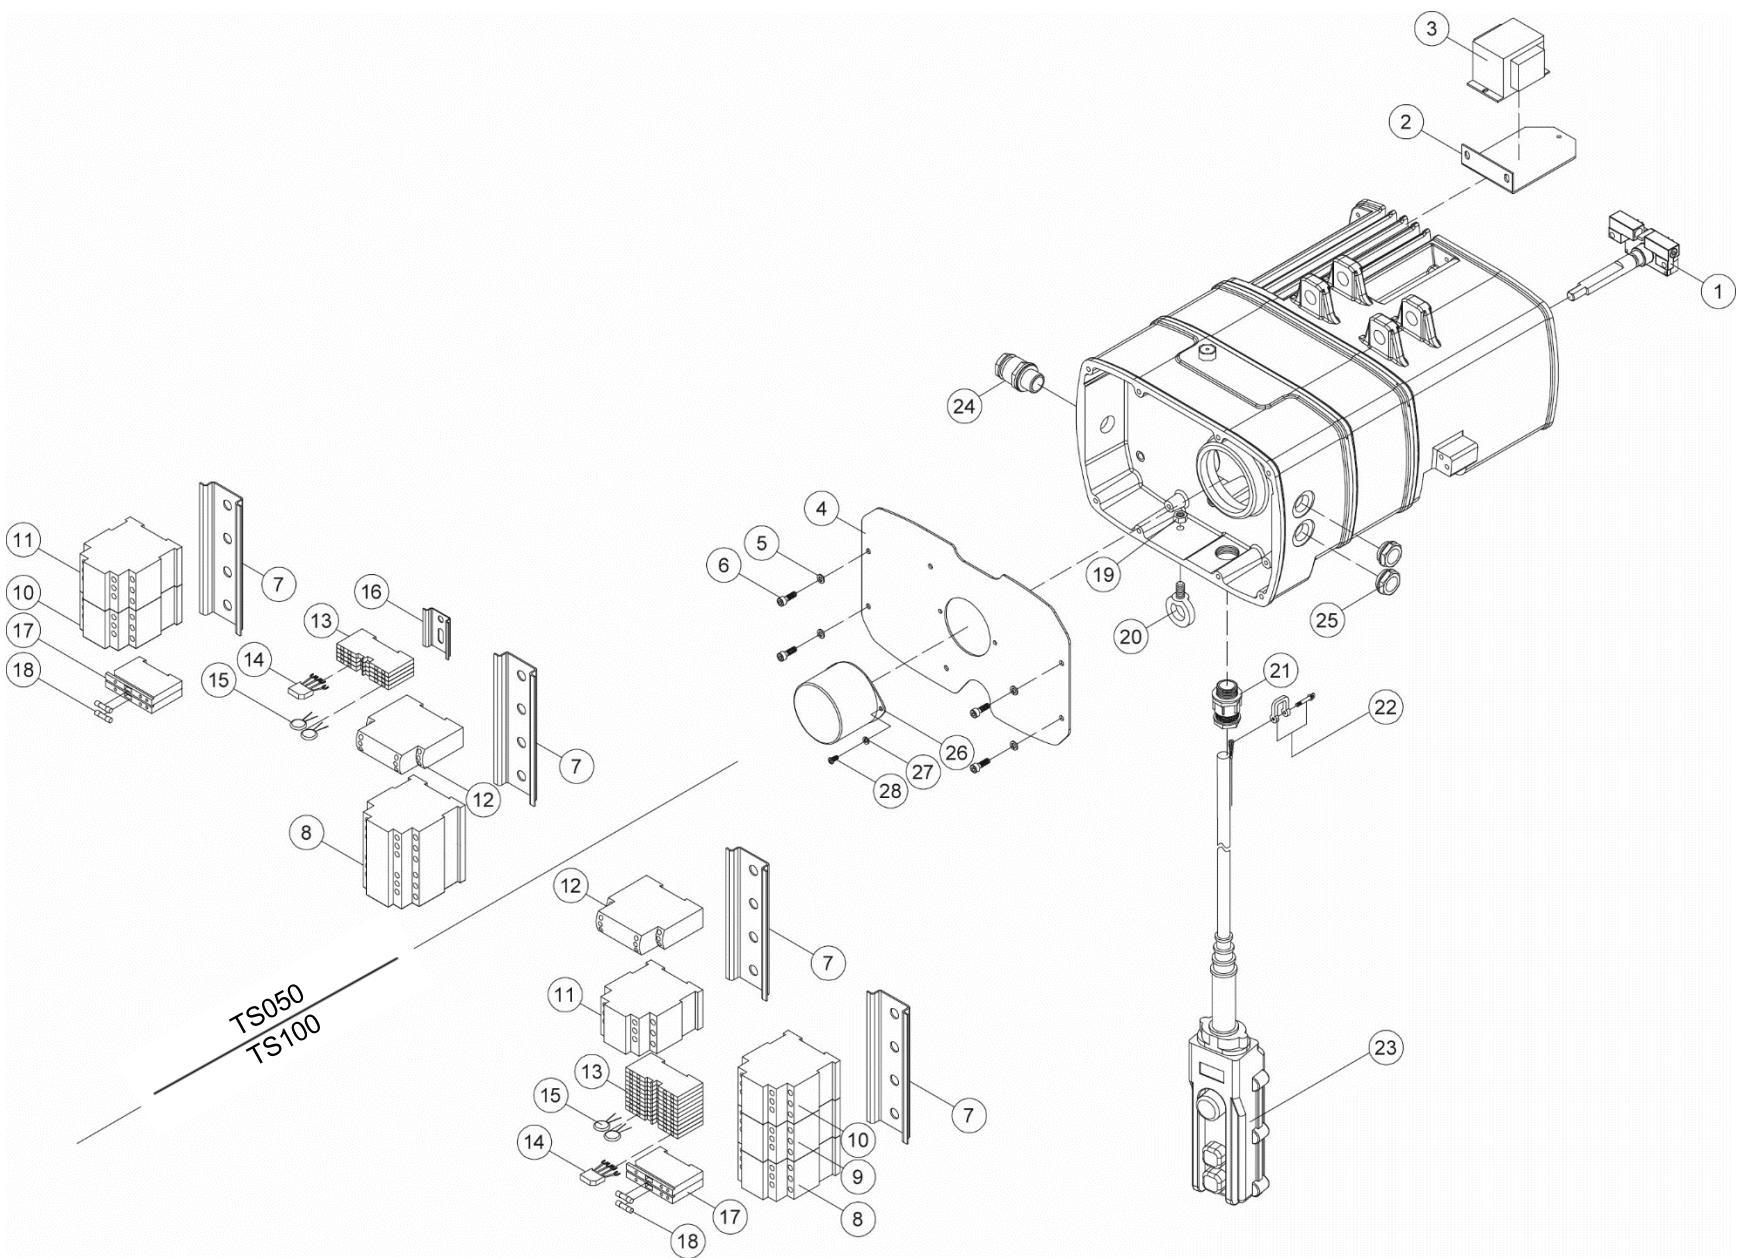

21.5.2 TS050, TS100 Electrical Assembly – Parts List

| Index No. | Part No. | Description | Size | Qty |
|------------------|-----------------|--------------------------------------|-------------------------|------------|
| 1 | TS050-E01 | Upper & Lower Limit Switch... | | 1 |
| | TS100-E01 | | | 1 |
| 2 | TS050-E02 | Transformer Bracket... | | 1 |
| | TS100-E02 | | | 1 |
| 3 | TS050-E03 | Transformer ... | PS-116 | 1 |
| | TS100-E03 | Transformer ... | PS-16205N | 1 |
| 4 | TS050-E04 | Electric Bracket... | | 1 |
| | TS100-E04 | | | 1 |
| 5 | TS-2361051 | Spring Washer ... | M5 | 4 |
| 6 | TS-1502021 | Socket Hd Cap Screw ... | M5x0.8x10L | 4 |
| 7 | TS050-E07 | Contactor Rail ... | | 2 |
| | TS100-E07 | | | 2 |
| 8 | TS050-E08 | Contactor... | LC2-K09004-F7 110V 4A | 1 |
| | TS100-E08 | | LC1D12-F7 110V 3A1a 1b | 1 |
| 9 | TS100-E08 | Contactor ... | LC1D12-F7 110V 3A1a 1b | 1 |
| 10 | TS050-E10 | Contactor... | LC1-K09008-F7 110V 2A2B | 1 |
| | TS100-E11 | | LC1D128-F7 110V 2A2B | 1 |
| 11 | TS050-E11 | Contactor... | LC1-K0901-F7 110V 3A1b | 1 |
| | TS100-E10 | | LC1D18-F7 110V 3A1a 1b | 1 |
| 12 | TS050-E12 | Phase Sequence Protector ... | RM17-TG00 | 1 |
| 13 | TS050-E13 | Terminal Block ... | (PT 2,5-QUATTRO) | 4 |
| 14 | TS050-E14 | Rectifier... | KBC10 | 1 |
| 15 | TS050-E15 | Varistor ... | 14K471U | 2 |
| 16 | TS050-E16 | Contactor Rail... | | 1 |
| 17 | TS050-E17 | Fuse Holder ... | | 2 |
| 18 | TS050-E18 | Fuse... | | 2 |
| 19 | TS-1540041 | Nut ... | M6x1.0 | 1 |
| 20 | TS050-E20 | Eye Bolt ... | M6x1.0 | 1 |
| 21 | TS050-E21 | Cable Gland ... | M25-18 | 1 |
| 22 | TS050-E22 | Shackle ... | 3/16" | 1 |
| 23 | | Wired Pendant Control (see chart)... | | 1 |
| 24 | TS050-E24 | Cable Gland ... | M20-13 | 1 |
| 25 | TS050-E25 | Cable Gland ... | SPG-M20BM20x1.5 | 2 |
| 26 | TS050-E26 | Cover ... | | 1 |
| | TS100-E26 | | | 1 |
| 27 | TS-2361041 | Spring Washer ... | M4 | 2 |
| 28 | TS-2171012 | Phillips Pan Hd Mach Screw ... | M4x0.7x6L | 2 |
| 29 | TS050-E29 | Power Cable ... | 2.0mmx4C | 1 |


21.6.1 TS200,TS300,TS500 Motor Assembly and Housing – Exploded View

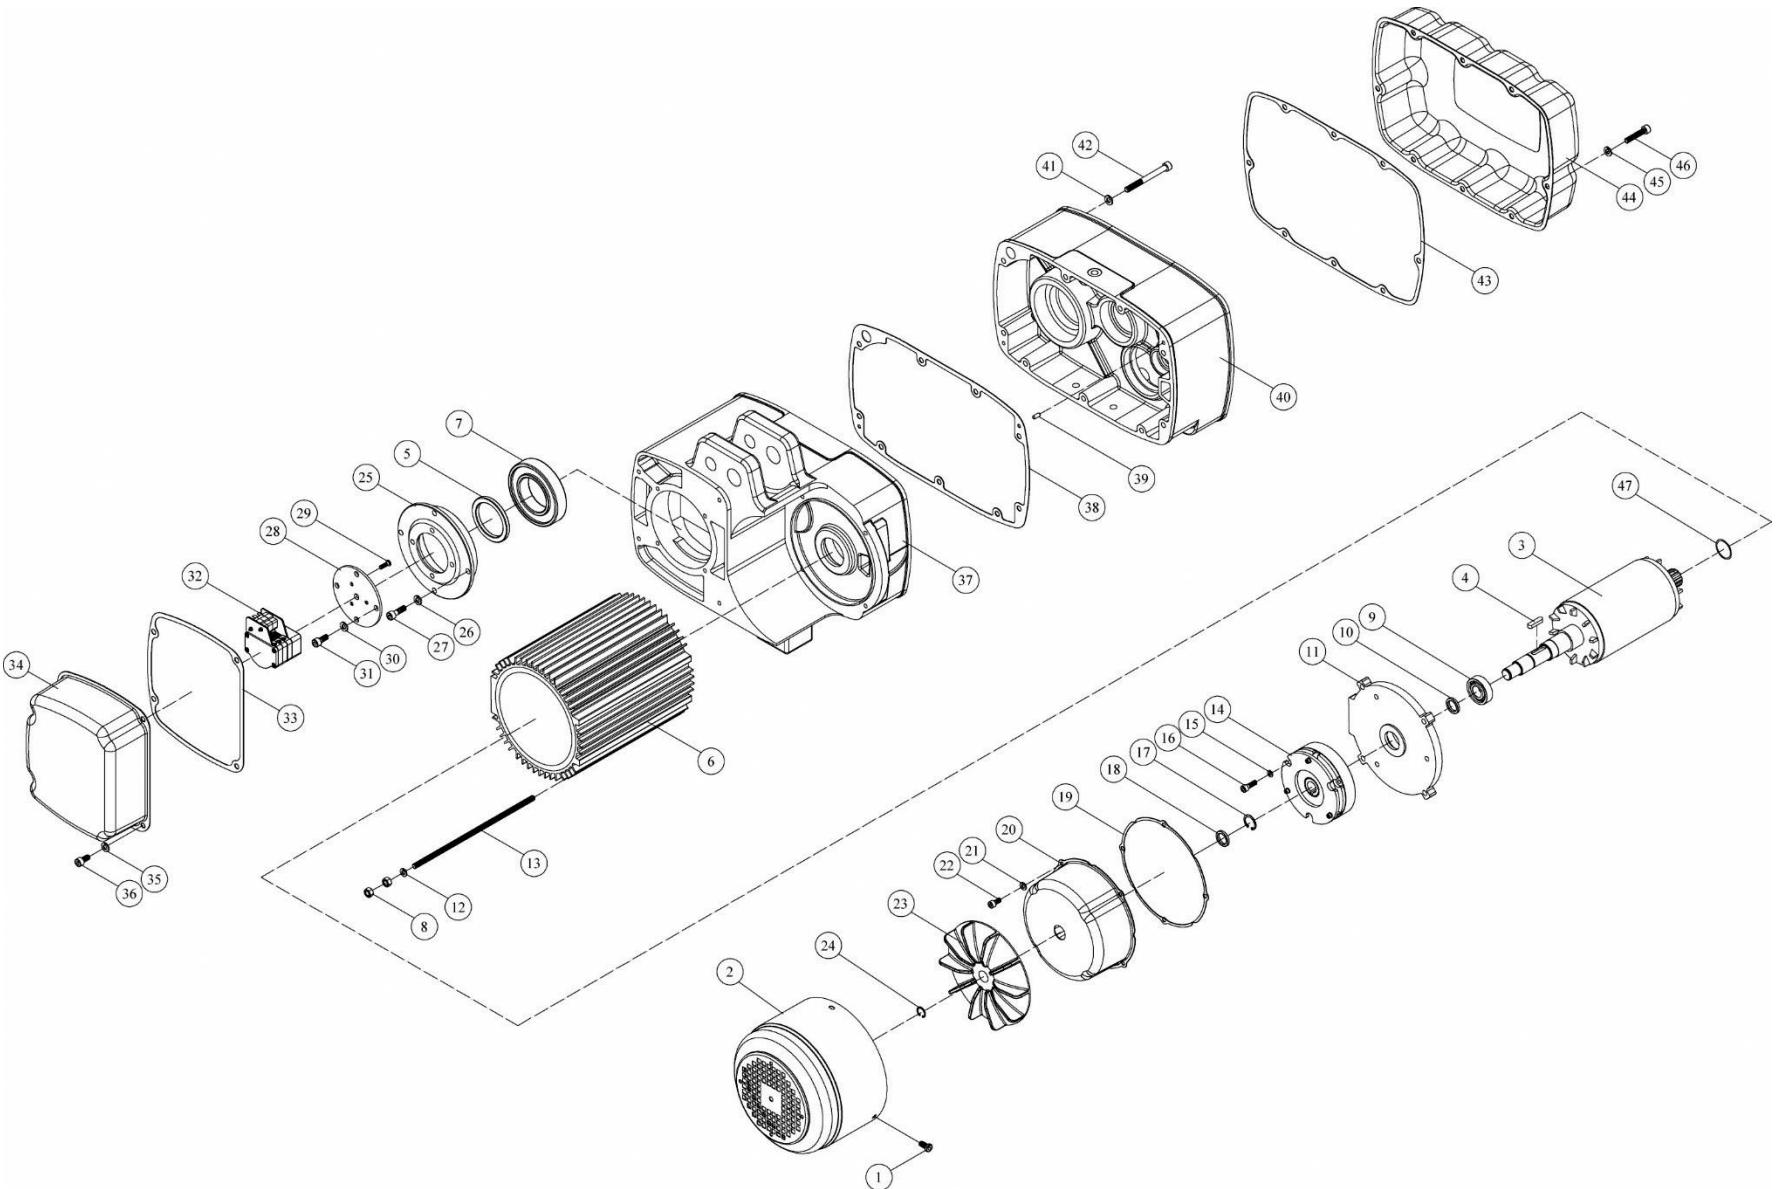

21.6.2 TS200,TS300,TS500 Motor Assembly and Housing – Parts List

| Index No. | Part No. | Description | Size | Qty |
|------------------|-----------------|-------------------------------|----------------------|------------|
| 1 | TS-2172012 | Phillips Pan Hd Mach Screw. | M5x0.8x8..... | 4 |
| 2 | TS200-A02 | End Cover..... | | 1 |
| 3 | TS200-A03 | Motor Rotor..... | | 1 |
| 4 | 5508937 | Key, Dbl Rd Hd..... | t7x7x25L..... | 1 |
| 5 | TS200-A05 | Oil Seal | Ø45xØ60x8t..... | 1 |
| 6 | TS200-A06 | Motor Stator Ass'y | 3~230V60Hz3.7/0.9kW. | 1 |
| | TS200-A06M | | 3~460V60Hz3.7/0.9kW. | 1 |
| 7 | TS200-A07 | Bearing | 6310ZZ..... | 1 |
| 8 | TS-2311081 | Nut. | M8x1.25..... | 8 |
| 9 | TS200-A09 | Bearing | 62062RU..... | 1 |
| 10 | TS200-A10 | Oil Seal | Ø30xØ50x8t | 1 |
| 11 | TS200-A11 | Motor End Cover..... | | 1 |
| 12 | TS-2361081 | Spring Washer | M8..... | 4 |
| 13 | TS200-A13 | Threaded Bar | M8x1.25x290L..... | 4 |
| 14 | TS200-A14 | Brake Ass'y TSB-165-370 | | 1 |
| 15 | TS-2361081 | Spring Washer | M8..... | 3 |
| 16 | TS-1504121 | Socket Hd Cap Screw | M8x1.25x60L..... | 3 |
| 17 | F006049 | C-Retaining Ring, Ext | S-24 | 1 |
| 18 | TS200-A18 | Oil Seal | VA25..... | 1 |
| 19 | TS200-A19 | Brake End Cover Gasket | | 1 |
| 20 | TS200-A20 | Brake End Cover | | 1 |
| 21 | TS-2361061 | Spring Washer | M6..... | 4 |
| 22 | TS-1503021 | Socket Hd Cap Screw..... | M6x0.8x10L..... | 4 |
| 23 | TS200-A23 | Fan | Ø165xØ19odd | 1 |
| 24 | 1017067 | C-Retaining Ring, Ext | S-19 | 1 |
| 25 | TS200-A25 | Bearing Housing | | 1 |
| 26 | TS-2361081 | Spring Washer | M8..... | 4 |
| 27 | TS-1504041 | Socket Hd Cap Screw..... | M8x1.25x20L..... | 4 |
| 28 | TS200-A28 | Limit Plate | | 1 |
| 29 | TS-1502021 | Socket Head Cap Screws | M5x0.8x10..... | 3 |
| 30 | TS-2361081 | Spring Washer | M8..... | 4 |
| 31 | TS-1504021 | Socket Hd Cap Screw..... | M8x1.25x12L..... | 4 |
| 32 | TS200-A32 | Limit Switch..... | | 1 |
| 33 | TS200-A33 | Limit Cover Gasket | | 1 |
| 34 | TS200-A34 | Limit Cover..... | | 1 |
| 35 | TS-2361081 | Spring Washer | M8..... | 4 |
| 36 | TS-1504031 | Socket Hd Cap Screw..... | M8x1.25x16L..... | 4 |
| 37 | TS200-A37 | Gearbox..... | | 1 |
| | TS500-A37 | | | 1 |
| 38 | TS200-A38 | Gearbox Gasket..... | | 1 |
| 39 | TS200-A39 | Parallel Pin | Ø6xØ15 | 2 |
| 40 | TS200-A40 | Gearbox Cover | | 1 |
| 41 | TS-2361081 | Spring Washer | M8..... | 9 |
| 42 | TS200-A42 | Socket Hd Cap Screw..... | M8x1.25x90L..... | 9 |
| 43 | TS200-A43 | Electric Cover Gasket | | 1 |
| 44 | TS200-A44 | Electric Cover | | 1 |
| 45 | TS-2361081 | Spring Washer | M8..... | 8 |
| 46 | TS-1504031 | Socket Hd Cap Screw..... | M8x1.25x16L..... | 8 |
| 47 | TS200-A47 | O-Ring | P-25 | 1 |


21.7.1 TS200,TS300,TS500 Hook Assembly – Exploded View

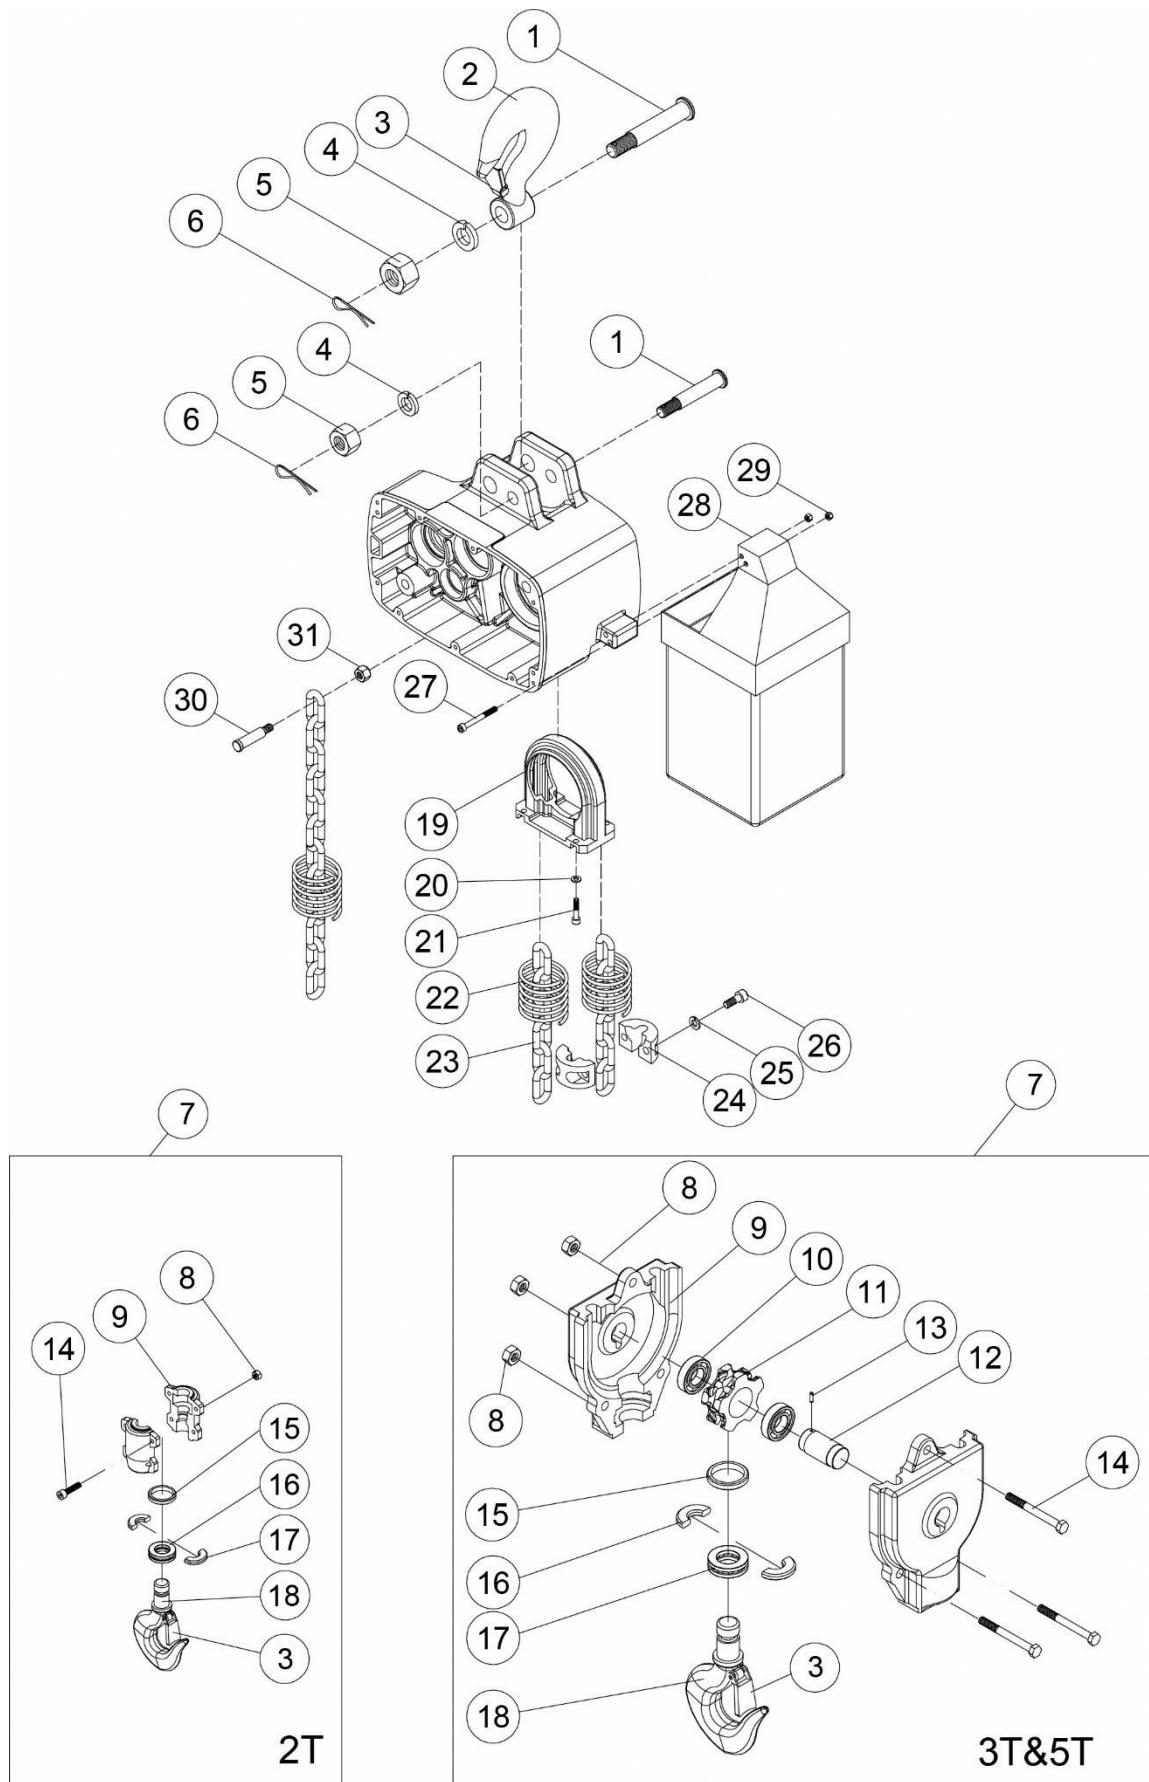

21.7.2 TS200,TS300,TS500 Hook Assembly – Parts List

| Index No. | Part No. | Description | Size | Qty |
|------------------|-----------------|-------------------------------------|-------------------|------------|
| 1 | TS200-B01 | Top Hook Pin | Ø25x159L | 2 |
| | TS500-B01 | | Ø34x159L | 1 |
| 2 | TS200-B02 | Top Hook Assembly | | 1 |
| | TS300-B02 | | | 1 |
| | TS500-B02 | | | 1 |
| 3 | TS200-B03 | Safety Latch Assembly | | 2 |
| | TS300-B03 | | | 2 |
| 4 | TS-2361161 | Spring Washer | M16 | 2 |
| | TS-2361201 | | M20 | 1 |
| 5 | TS-2342161 | Lock Nut | M16x1.5 | 2 |
| | TS500-B05 | | M20x2.0 | 1 |
| 6 | TS200-B06 | Cotter Pin | 3/32"x1"L | 2 |
| 7 | TS200-B07 | Bottom Hook Complete Assembly | | 1 |
| | TS300-B07 | | | 1 |
| | TS500-B07 | | | 1 |
| 8 | TS-1541031 | Lock Nut | M8x1.25 | 4 |
| | TS-2342101 | | M10x1.5 | 3 |
| 9 | TS200-B09 | Bottom Hook Housing | | 2 |
| | TS300-B09 | | | 2 |
| | TS500-B09 | | | 2 |
| 10 | BB-NK3020 | Needle Bearing | TA3020Z | 2 |
| | TS500-B10 | | TA4025Z | 2 |
| 11 | TS300-B11 | Sprocket | Ø40x42L | 1 |
| | TS500-B11 | | Ø50x51L | 1 |
| 12 | TS300-B12 | Bottom Hook Idle Wheel Axle | Ø30x71L | 1 |
| | TS500-B12 | | Ø40x78L | 1 |
| 13 | TS-209402 | Spring Pin | Ø5x16L | 1 |
| 14 | TS-1504081 | Socket Hd Cap Screw | M8x1.25x40L | 4 |
| | TS-1505061 | | M10x1.5x40L | 3 |
| | TS-1505071 | | M10x1.5x45L | 3 |
| 15 | TS200-B15 | Bottom Hook Retaining Ring | | 1 |
| | TS500-B15 | | | 1 |
| 16 | TS200-B16 | Bottom Hook Half Spacer | | 2 |
| | TS500-B16 | | | 2 |
| 17 | BB-51106 | Thrust Bearing | 51106 | 1 |
| | TS500-B17 | | 51207 | 1 |
| 18 | TS200-B18 | Bottom Hook | | 1 |
| | TS300-B18 | | | 1 |
| | TS500-B18 | | | 1 |
| 19 | TS200-B19 | Chain Regulator | | 1 |
| | TS500-B19 | | | 1 |
| 20 | TS-2361081 | Spring Washer | M8 | 4 |
| 21 | TS-1504041 | Socket Hd Cap Screw | M8x1.25x20L | 4 |
| 22 | TS200-B22 | Limit Spring | | 2 |
| | TS200-B22 | | | 3 |
| | TS500-B22 | | | 3 |
| 23 | LCHAIN-10X30 | Load Chain | Ø10.0x30mm | per ft. |
| | LCHAIN-10X30 | | Ø10.0x30mm | per ft. |
| | LCHAIN-11X34 | | Ø11.2x34mm | per ft. |
| 24 | TS200-B24 | Chain Stopper | Ø10 | 2 |
| | TS500-B24 | | Ø11.2 | 2 |
| 25 | TS-2361081 | Spring Washer | M8 | 2 |
| 26 | TS-1504061 | Socket Hd Cap Screw | M8x1.25x30L | 2 |
| 27 | TS200-B27 | | M8x1.25x80L | 2 |
| 28 | | Chain Container (see chart) | | 1 |
| 29 | TS-1541031 | Nylon Nut | M8x1.25 | 2 |
| 30 | TS300-B30 | Chain Connecting Pin | Ø19x86L | 1 |
| | TS500-B30 | | Ø19x86L | 1 |
| 31 | TS-2342121 | Nylon Nut | M12x1.75 | 1 |


21.8.1 TS200,TS300,TS500 Gear Box – Exploded View

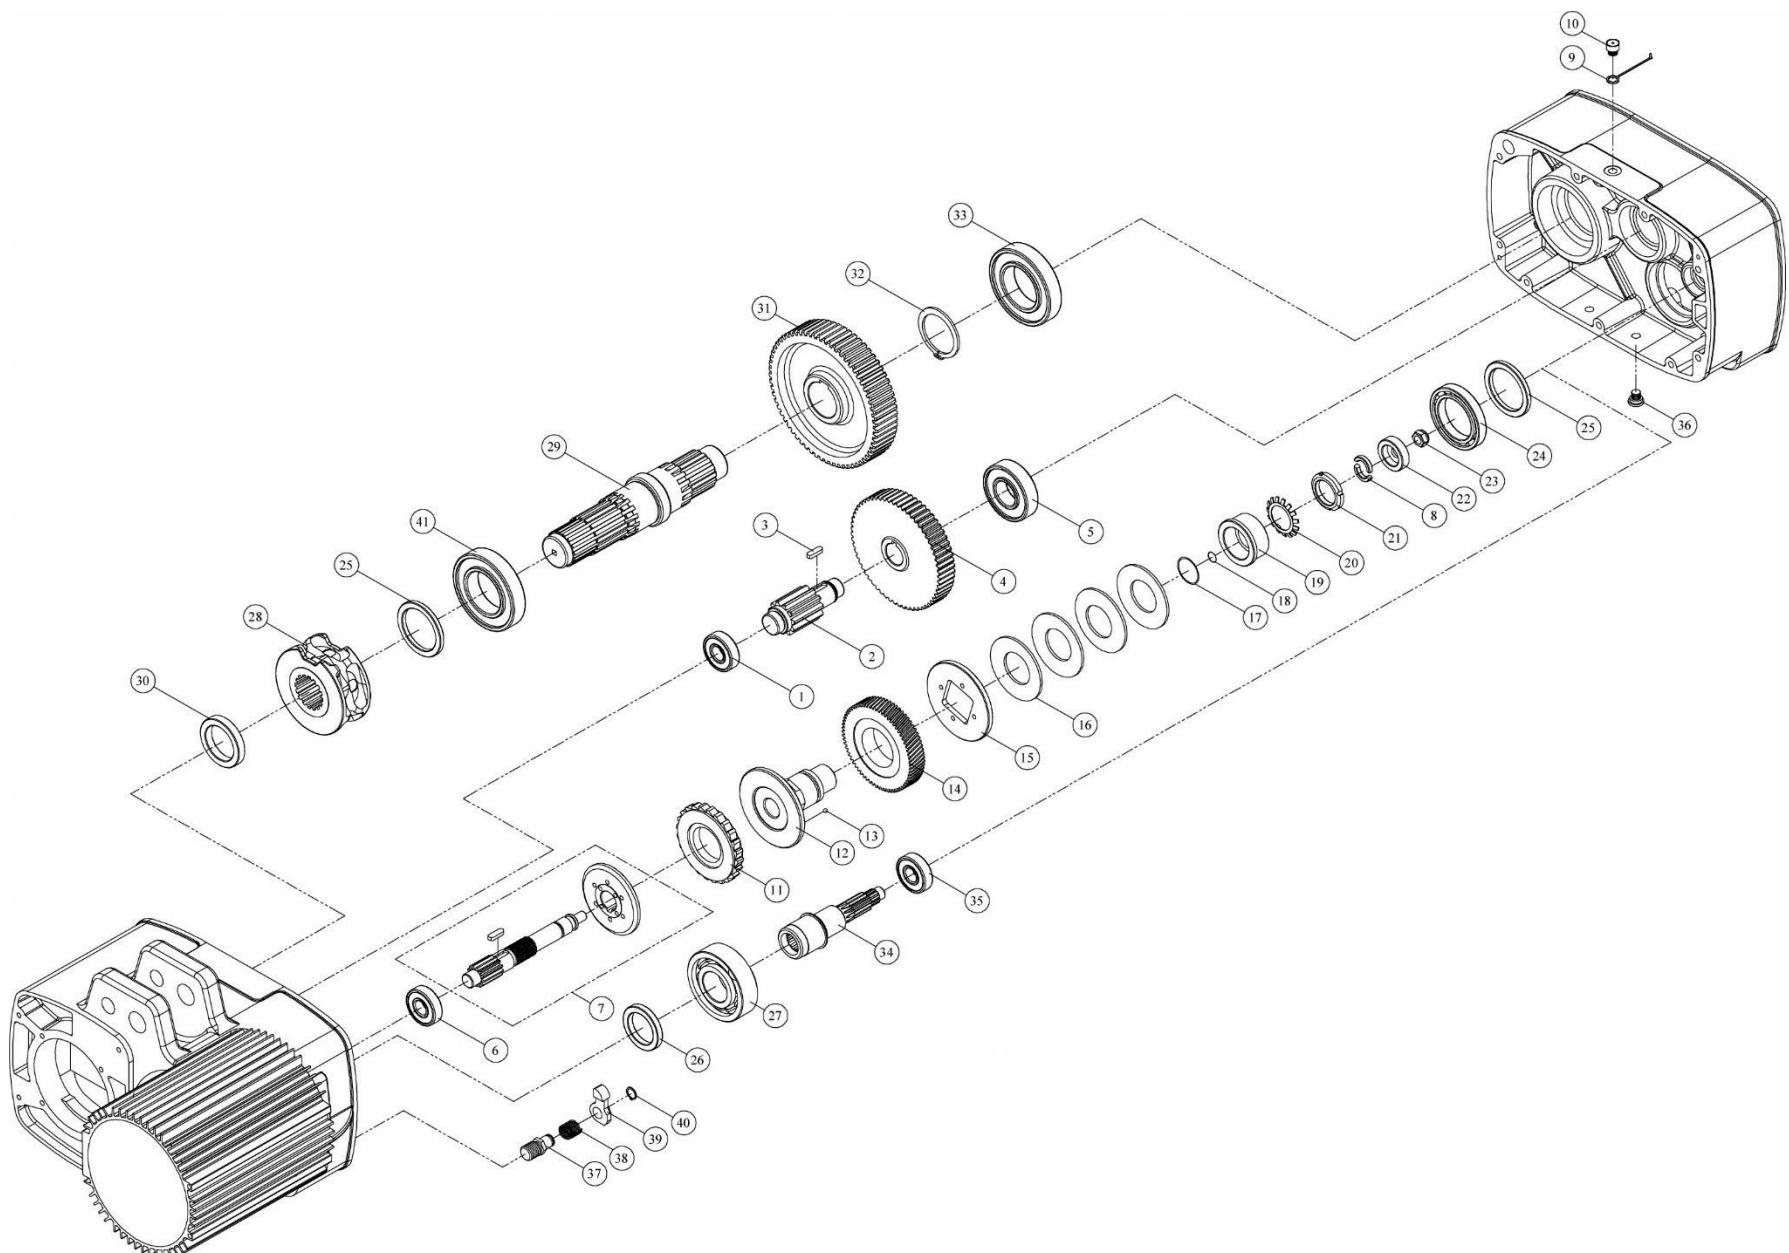

21.8.2 TS200,TS300,TS500 Gear Box – Parts List

| Index No. | Part No. | Description | Size | Qty |
|------------------|-----------------|------------------------|---------------|------------|
| 1 | BB-6307ZZ | Bearing | 6307ZZ | 1 |
| 2 | TS200-C02 | 5th Gear | M3x15Tx149.5L | 1 |
| 3 | TS200-C03 | Key, Dbl Rd Hd | t12x8x30L | 1 |
| 4 | TS200-C04 | 4th Gear | M2x73Tx32L | 1 |
| | TS300-C04 | 4th Gear | M2x68Tx32L | 1 |
| | TS500-C04 | 4th Gear | M2x77Tx32L | 1 |
| 5 | TS200-C05 | Bearing | NF306 | 1 |
| 6 | BB-6304 | Bearing | 6304 | 1 |
| 7 | TS200-C07 | 3rd Gear Assembly | M2x19Tx210 | 1 |
| | TS300-C07 | 3rd Gear Assembly | M2x24Tx210 | 1 |
| | TS500-C07 | 3rd Gear Assembly | M2x15Tx210 | 1 |
| 8 | TS200-C08 | Load Brake Gear Spacer | | 2 |
| 9 | TS200-C09 | Air Plug | | 1 |
| 10 | TS200-C10 | Hex. Oil Plug | | 1 |
| 11 | TS200-C11 | Ratchet Ass'y | | 1 |
| 12 | TS200-C12 | Brake Bushing | | 1 |
| 13 | SB-8MM | Steel Ball | Ø8 | 3 |
| 14 | TS200-C14 | 2nd Gear Assembly | M1.75x68Tx24 | 1 |
| 15 | TS200-C15 | Brake Body | Ø112x8 | 1 |
| 16 | TS200-C16 | Disc Spring | Ø90xØ45x3.5t | 4 |
| 17 | TS200-C17 | O-Ring | P-38 | 1 |
| 18 | TS200-C18 | O-Ring | P-18 | 1 |
| 19 | TS200-C19 | Disc Spring Bushing | | 1 |
| 20 | TS200-C20 | Spacer | AW07 | 1 |
| 21 | TS200-C21 | Nut | KM7 | 1 |
| 22 | TS200-C22 | End Spacer | Ø45xØ14x13L | 1 |
| 23 | TS-2342121 | Lock Nut | M12x1.75 | 1 |
| 24 | BB-6912 | Bearing | 6912 | 1 |
| 25 | TS200-C25 | Oil Seal | Ø60xØ78x7t | 2 |
| 26 | TS200-A05 | Oil Seal | Ø45xØ60x8t | 1 |
| 27 | BB-6009ZZ | Bearing | 6009ZZ | 1 |
| 28 | TS200-C28 | Load Sheave | | 1 |
| | TS500-C28 | | | 1 |
| 29 | TS200-C29 | Load Sheave B | Ø70x288.5L | 1 |
| 30 | TS200-C30 | Spacer | Ø70xØ50x12L | 1 |
| 31 | TS200-C31 | 6th Gear | M3x64T | 1 |
| 32 | F006071 | C-Retaining Ring, Ext | S-50 | 1 |
| 33 | TS200-C33 | Bearing | 6309ZZ | 1 |
| 34 | TS200-C34 | 1st Gear | M1.75x12 | 1 |
| 35 | BB-6203ZZ | Bearing | 6203ZZ | 1 |
| 36 | TS200-C36 | Lubricant Drain Bolt | | 1 |
| 37 | TS200-C37 | Ratchet Pawl Pin | | 1 |
| 38 | TS200-C38 | Ratchet Pawl Spring | | 1 |
| 39 | TS200-C39 | Ratchet Pawl | | 1 |
| 40 | F006044 | C-Retaining Ring, Ext | S-16 | 1 |
| 41 | TS200-C41 | Bearing | 6212ZZ | 1 |

21.9.1 TS200,TS300,TS500 Electric Assembly – Exploded View

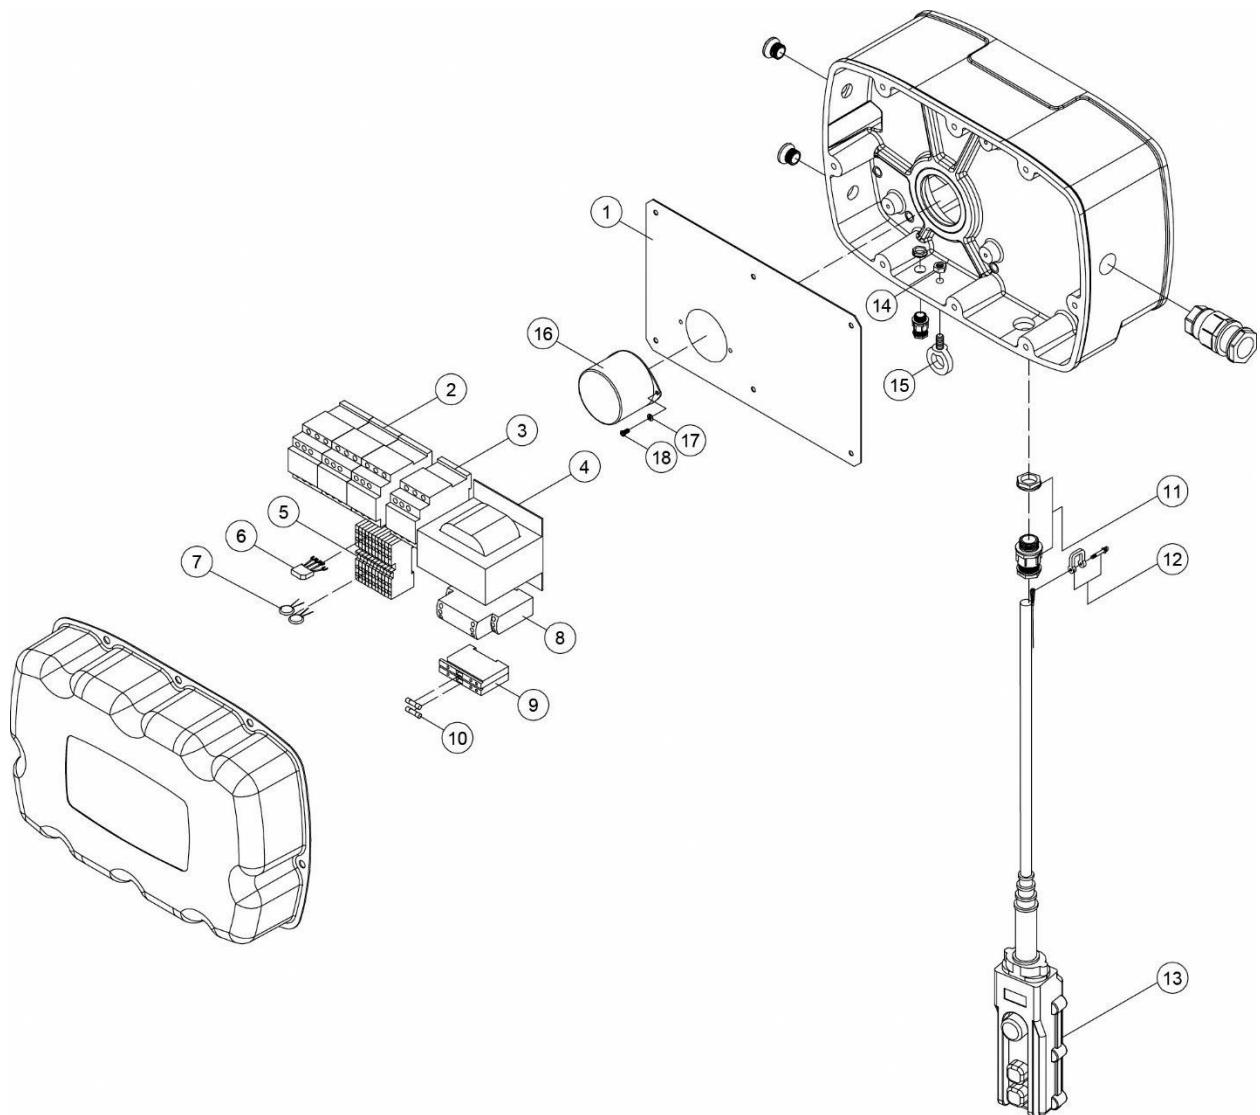

21.9.2 TS200,TS300,TS500 Electric Assembly – Parts List

| Index No. | Part No. | Description | Size | Qty |
|------------------|-----------------|--|-----------------------------|------------|
| 1 | TS200-D01 | Electric Bracket..... | | 1 |
| 2 | TS200-D02 | Contactor..... | 110V 3A1a1bLC1-D25-F7 | 3 |
| 3 | TS200-D03 | Contactor..... | 110V 2A2BLC1-D258-F7..... | 1 |
| 4 | TS200-D04 | Transformer | PS-16213N | 1 |
| 5 | TS200-D05 | Terminal Block | PT 2,5-QUATTRO..... | 12 |
| 6 | TS200-D06 | Rectifier..... | KBC10..... | 1 |
| 7 | TS200-D07 | Varistor | 14K471U..... | 2 |
| 8 | TS200-D08 | Phase Sequence Protector..... | RM17-TG00 | 1 |
| 9 | TS200-D09 | Fuse Holder | | 2 |
| 10 | TS200-D10 | Fuse..... | | 2 |
| 11 | TS200-D11 | Cable Gland..... | M25-18..... | 1 |
| 12 | TS200-D12 | Shackle | 3/16" | 1 |
| 13 | | Wired Pendant Control (<i>see chart</i>) | | 1 |
| 14 | TS-2311081 | Nut | M8x1.25..... | 1 |
| 15 | TS200-D15 | Eye Bolt | M8x1.25..... | 1 |
| 16 | TS200-D16 | Cover | | 1 |
| 17 | TS-2361041 | Spring Washer | M4..... | 2 |
| 18 | TS-2171012 | Phillips Pan Hd Mach Screw..... | M4x0.7x6L..... | 2 |
| 19 | TS200-D19 | Power Cable | 3.5mmx4C..... | 1 |