



JWS-770 Mast Assembly

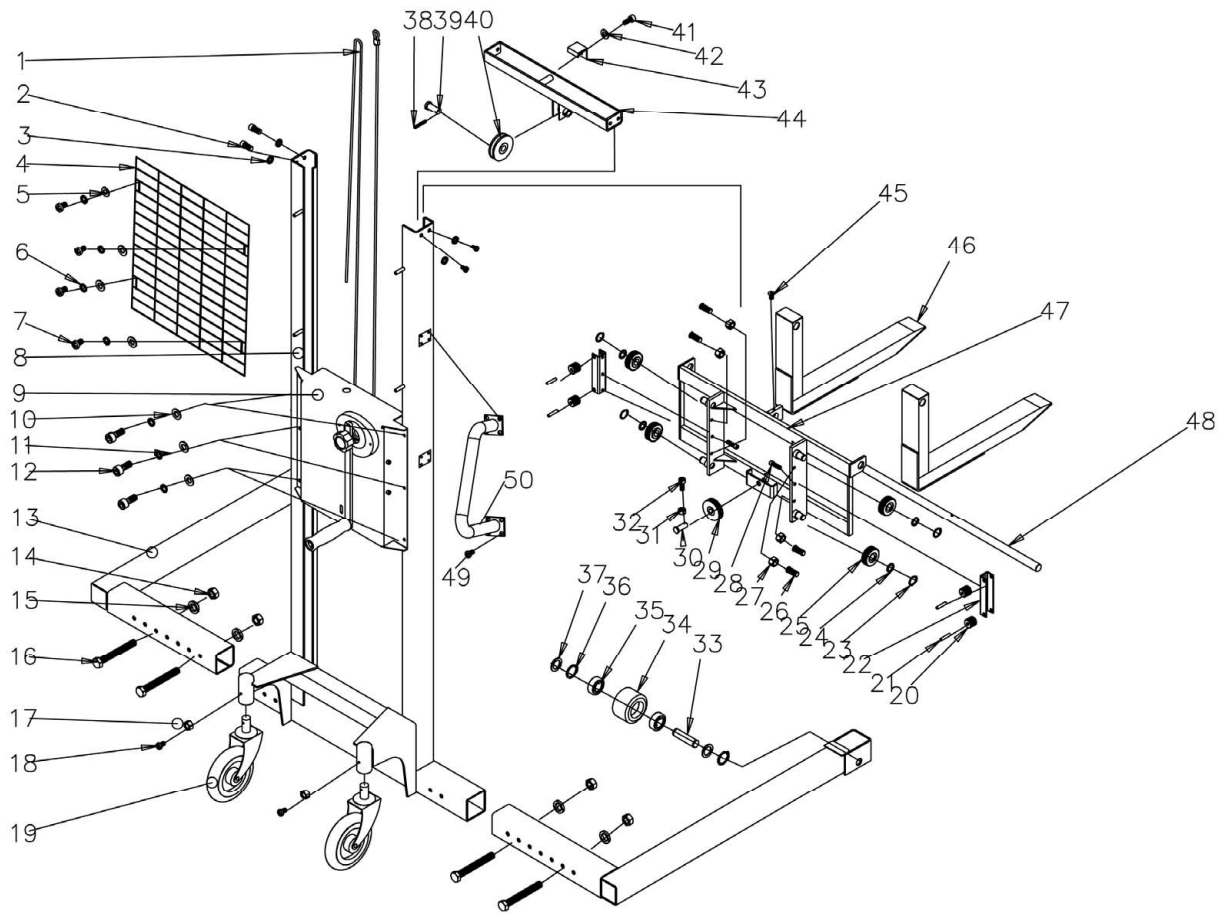

Parts List: JWS-770 Mast Assembly

Index No.	Part No.	Description	Size	Qty
1	JWS-02-01	Wire Assembly		1
2	TS-1504031	Socket Head Cap Screw	M8 x 16	4
3	TS-1551061	Lock Washer	M8	4
4	JWS-02-04	Steel Fence		1
5	TS-1550031	Flat Washer	M5	4
6	TS-1551031	Lock Washer	M5	4
7	TS-1533032	Phillips Pan Head Machine Screw	M5 x 10	4
8	JWS-03-08	Mast Assembly		1
9	JWS-01	Drive Assembly		1
10	TS-1550041	Flat Washer	M6	6
11	TS-1551041	Lock Washer	M6	6
12	TS-1503021	Socket Head Cap Screw	M6 x 10	6
13L	JWS-03-13L	Outrigger Leg Left		1
13R	JWS-03-13R	Outrigger Leg Right		1
14	TS-1540071	Hex Nut	M10	4
15	TS-1551071	Lock Washer	M10	4
16	TS-2239801	Hex Cap Screw	M10 x 80	4
17	TS-1540031	Hex Nut	M5	2
18	TS-1533032	Phillips Pan Head Machine Screw	M5 x 10	2
19	JWS-02-15	Caster Assembly	Ø160 x 32	2
	BB-6001ZZ	Ball Bearing	6001ZZ	4
20	JWS-02-16	Side Roller	Ø29 x Ø8.6 x 27	4
21	JWS-02-17	Spring Pin	Ø8 x 40	4
22	JWS-02-18	Side Roller Bracket		2
23	JWS-02-19	Snap Ring	M20	4
24	JWS-02-20	Mast Roller Washer		4
25	JWS-02-21	Mast Roller	Ø60 x Ø20.5 x 22.5	4
26	TS-1515021	Socket Head Flat Screw	M8 x 20	4
27	TS-1540061	Hex Nut	M8	4
28	TS-1504051	Socket Head Cap Screw	M8 x 25	2
29	JWS-02-25	Wire Pulley	Ø72 x Ø16.2 x 19	1
30	JWS-02-26	Pulley Pin	Ø16 x 46	1
31	TS-1540041	Hex Nut	M6	1
32	TS-1503041	Socket Head Cap Screw	M6 x 16	1
33	JWS-02-29	Load Wheel Pin	Ø20 x 79	2
34	JWS-02-30	Load Wheel	Ø82 x 55	2
35	BB-6204ZZ	Ball Bearing	6204ZZ	4
36	JWS-02-32	Load Wheel Washer		4
37	JWS-02-19	Snap Ring	M20	4
38	JWS-01-52	Spring Pin	Ø4 x 25	1
39	JWS-02-35	Pulley Pin	Ø16 x 42	1
40	JWS-02-36	Wire Pulley	Ø72 x Ø16.2 x 19	1
41	TS-1503031	Socket Head Cap Screw	M6 x 12	1
42	TS-1551041	Lock Washer	M6	1
43	JWS-02-39	Wire Lock		1
44	JWS-02-40	Mast Cross Bar		1
45	TS-2246101	Socket Head Flat Screw	M6 x 10	1
46	JWS-03-46	Fork		2
47	JWS-03-47	Carriage		1
48	JWS-03-48	Fork Shaft	Ø25 x 775	1
49	TS-1503021	Socket Head Cap Screw	M6 x 10	16
50	JWS-03-50	Rubber Grip Handle		2
	JWS-FW	Fork Warning Label		1
	PT2748J-JET	JET Logo Label		2

JWS-550 and JWS-770 Drive Assembly

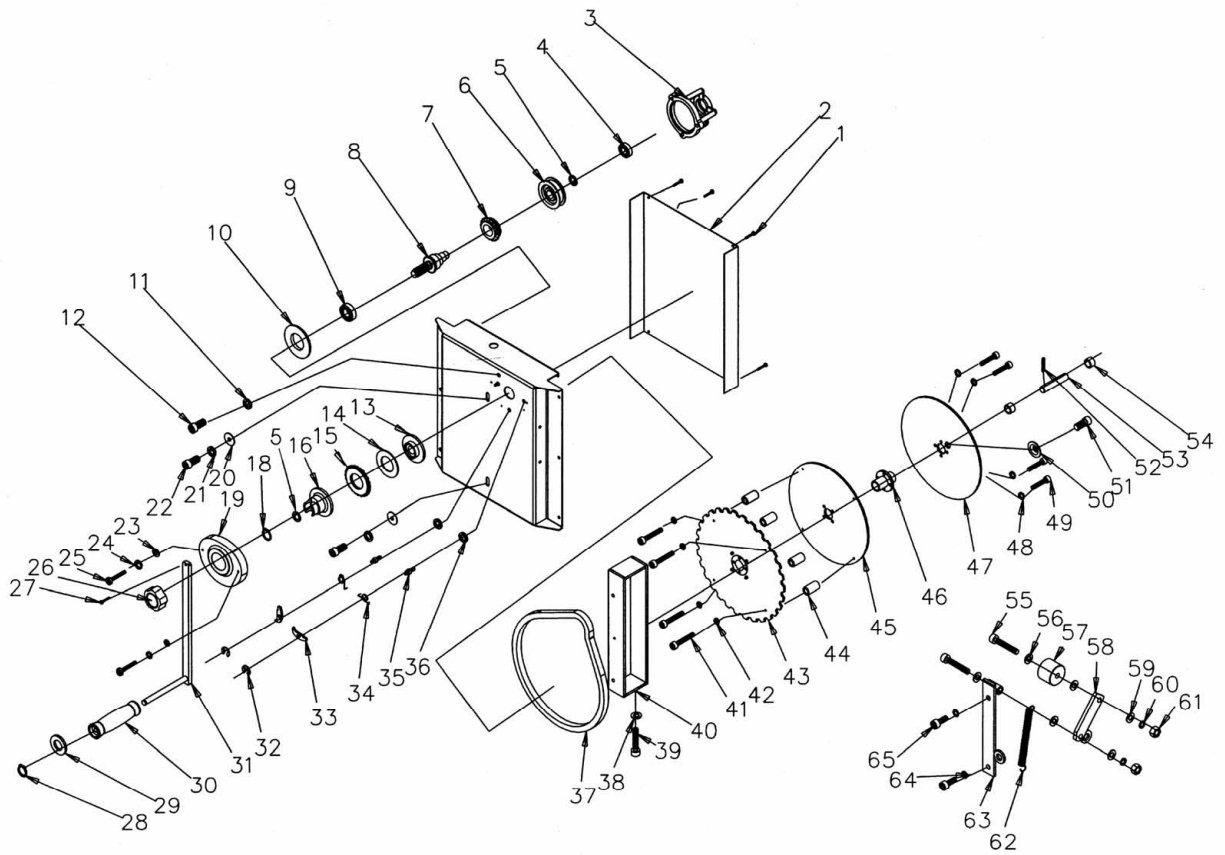

Parts List: JWS-550 and JWS-770 Drive Assembly

Index No.	Part No.	Description	Size	Qty
1	JWS-01-01	Self-Tapping Screw	M4.8 x 16	4
2	JWS-01-02	Cover		1
3	JWS-01-03	Brake Base		1
4	BB-6003ZZ	Ball Bearing	6003ZZ	1
5	JWS-01-05	Washer	Ø25 x Ø17 x 2	2
6	JWS-01-06	Idler	Ø70 x Ø20 x 20	1
7	JWS-01-07	Free Wheel		1
8	JWS-01-08	Input Shaft		1
9	BB-6004ZZ	Ball Bearing	6004ZZ	1
10	JWS-01-10	Bearing Case		1
11	TS-1551061	Lock Washer	M8	1
12	TS-1504031	Socket Head Cap Screw	M8 x 16	1
13	JWS-01-13	Friction Disc		1
14	JWS-01-14	Lining		1
15	JWS-01-15	Ratchet Wheel		1
16	JWS-01-16	Handle Base		1
18	JWS-01-18	Snap Ring	M16	1
19	JWS-01-19	Brake Cover		1
20	JWS-01-20	Washer	Ø31.5 x Ø9 x 1.5	2
21	TS-1551061	Lock Washer	M8	2
22	TS-1504031	Socket Head Cap Screw	M8 x 16	2
23	TS-1550021	Flat Washer	M4	2
24	TS-1551021	Lock Washer	M4	2
25	TS-2284252	Phillips Pan Head Machine Screw	M4 x 25	2
26	JWS-01-26	Handle Nut		1
27	JWS-01-27	Self-Tapping Screw	M4.8 x 8	1
28	JWS-01-28	Snap Ring	M12	1
29	TS-2360121	Flat Washer	M12	1
30	JWS-01-30	Handle Knob		1
31	JWS-01-31	Handle Arm		1
32	JWS-01-32	E-Ring	M6	2
33	JWS-01-33	Ratchet		2
34	JWS-01-34	Ratchet Spring		2
35	JWS-01-35	Ratchet Bolt		2
36	TS-1551061	Lock Washer	M8	2
37	JWS-01-37	Drive Chain		1
38	TS-1550061	Flat Washer	M8	1
39	TS-1504051	Socket Head Cap Screw	M8 x 25	1
40	JWS-01-40	Wire Drum Case		1
41	TS-1502071	Socket Head Cap Screw	M5 x 30	4
42	TS-1551031	Lock Washer	M5	4
43	JWS-01-43	Sprocket		1
44	JWS-01-44	Spacer		4
45	JWS-01-45	Drum Plate		1
46	JWS-01-46	Connector		1
47	JWS-01-47	Drum Plate		1
48	TS-1551041	Lock Washer	M6	4
49	TS-1503071	Socket Head Cap Screw	M6 x 30	4
50	JWS-01-50	Wire Lock		1
51	TS-1504031	Socket Head Cap Screw	M8 x 16	1
52	JWS-01-52	Spring Pin	Ø4 x 25	1
53	JWS-01-53	Wire Drum Pin		1
54	JWS-01-54	Spacer	Ø16 x Ø20 x 14	2
55	TS-1503081	Socket Head Cap Screw	M6 x 35	2
56	TS-1550041	Flat Washer	M6	2
57	JWS-01-57	Roller	Ø25 x Ø6.1 x 20	1

58.....	JWS-01-58.....	Roller Bracket.....		1
59.....	TS-1550041.....	Flat Washer.....	M6.....	2
60.....	TS-1551041.....	Lock Washer.....	M6.....	2
61.....	TS-1540041.....	Hex Nut.....	M6.....	2
62.....	JWS-01-62.....	Spring.....		1
63.....	JWS-01-63.....	Bracket.....		1
64.....	TS-1551041.....	Lock Washer.....	M6.....	2
65.....	TS-1503021.....	Socket Head Cap Screw.....	M6 x 10.....	2
.....	JWS550-ID.....	ID/Warning Label (JWS-550).....		1
.....	JWS770-ID.....	ID/Warning Label (JWS-770).....		1
.....	JWS-LCW.....	Load Center Warning Label.....		1