

Planer/Power tool - F 012 156 000 - 1560


www.powertools-aftersaleservice.com



BOSCH

Item	Part Number	Description	Illustration	Price	Quantity	Price Group
4	2 610 394 612	On-Off Switch		1	-,-	1 21
5	3 604 460 555	Power supply cord USA/CDN 2,15m 2 x 0,82mm SJ 18/2		1	-,-	1 24
6	2 610 394 613	Grommet		1	-,-	1 11
16	2 610 394 616	Carbon-Brush Set		1	-,-	1 21
24	2 610 394 622	Planer Head		1	-,-	1 32
28	2 610 394 627	Auxiliary Handle		1	-,-	1 21
30	2 610 394 629	Toothed Belt		1	-,-	1 20
35	2 610 394 635	Set of knives		1	-,-	1 26
36	2 610 394 636	Key		1	-,-	1 15
651	2 610 936 722	Dust Bag		1	-,-	1 -
652	2 610 936 723	Guide		1	-,-	1 -
653	2 610 936 724	Depth-Gauge		1	-,-	1 -

Illustration - Type E

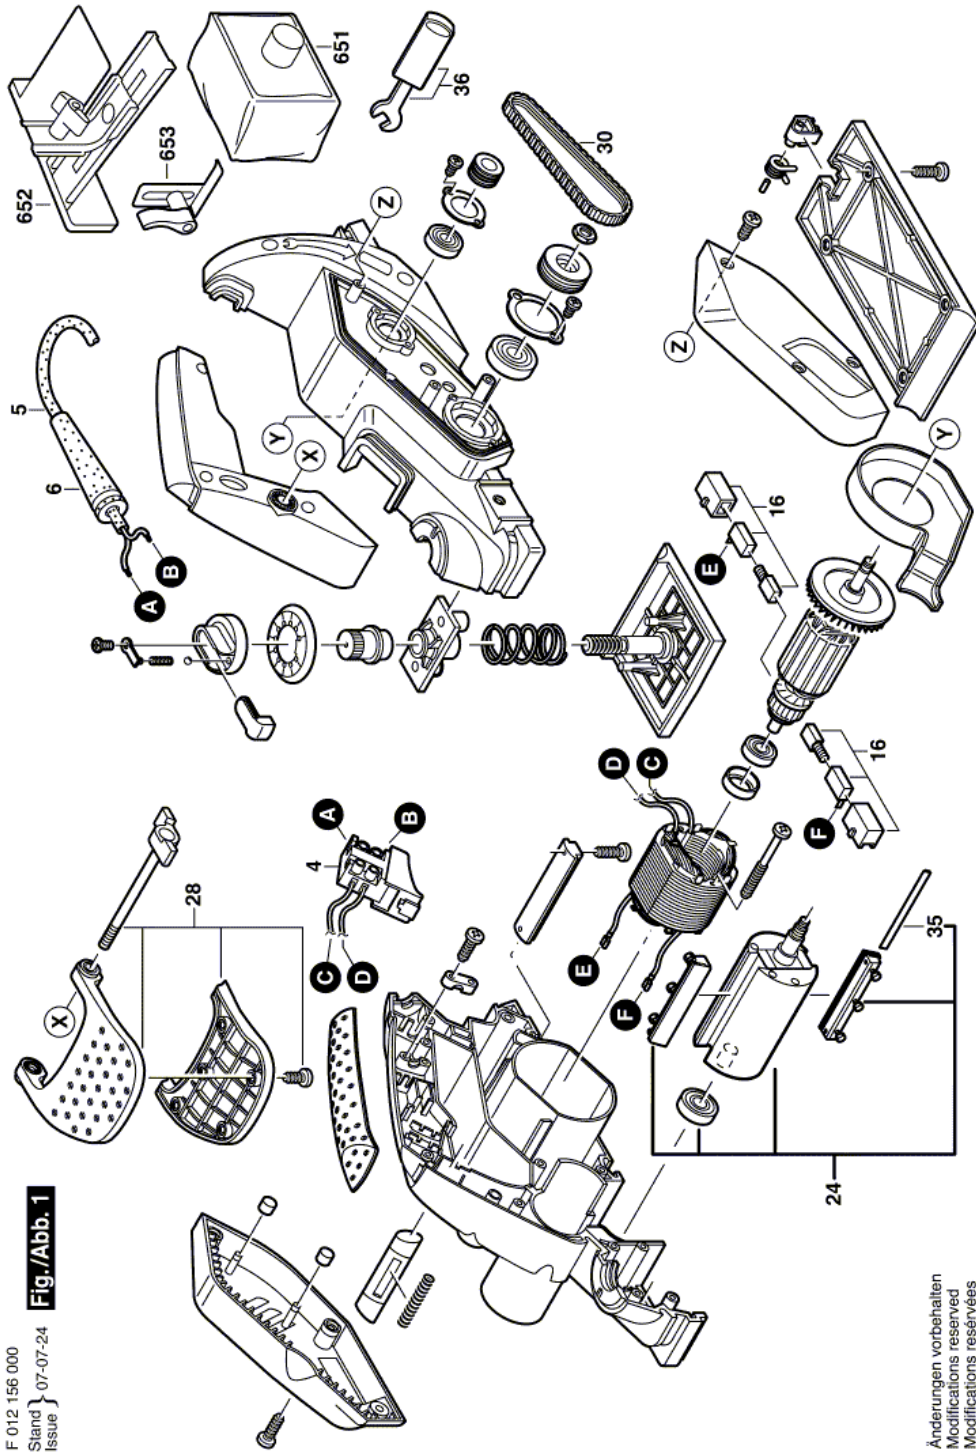

Information subject to change without further notice.