



# Operating Instructions and Parts Manual

## 15-inch Woodworking Band Saw

Model PM1500





**Powermatic**  
427 New Sanford Road  
LaVergne, Tennessee 37086  
Ph.: 800-274-6848  
[www.powermatic.com](http://www.powermatic.com)

**Part No. M-1791500**  
Revision C 10/2018  
Copyright © 2016 Powermatic

### 15.1.1 Complete Machine with Accessories – Exploded View

31

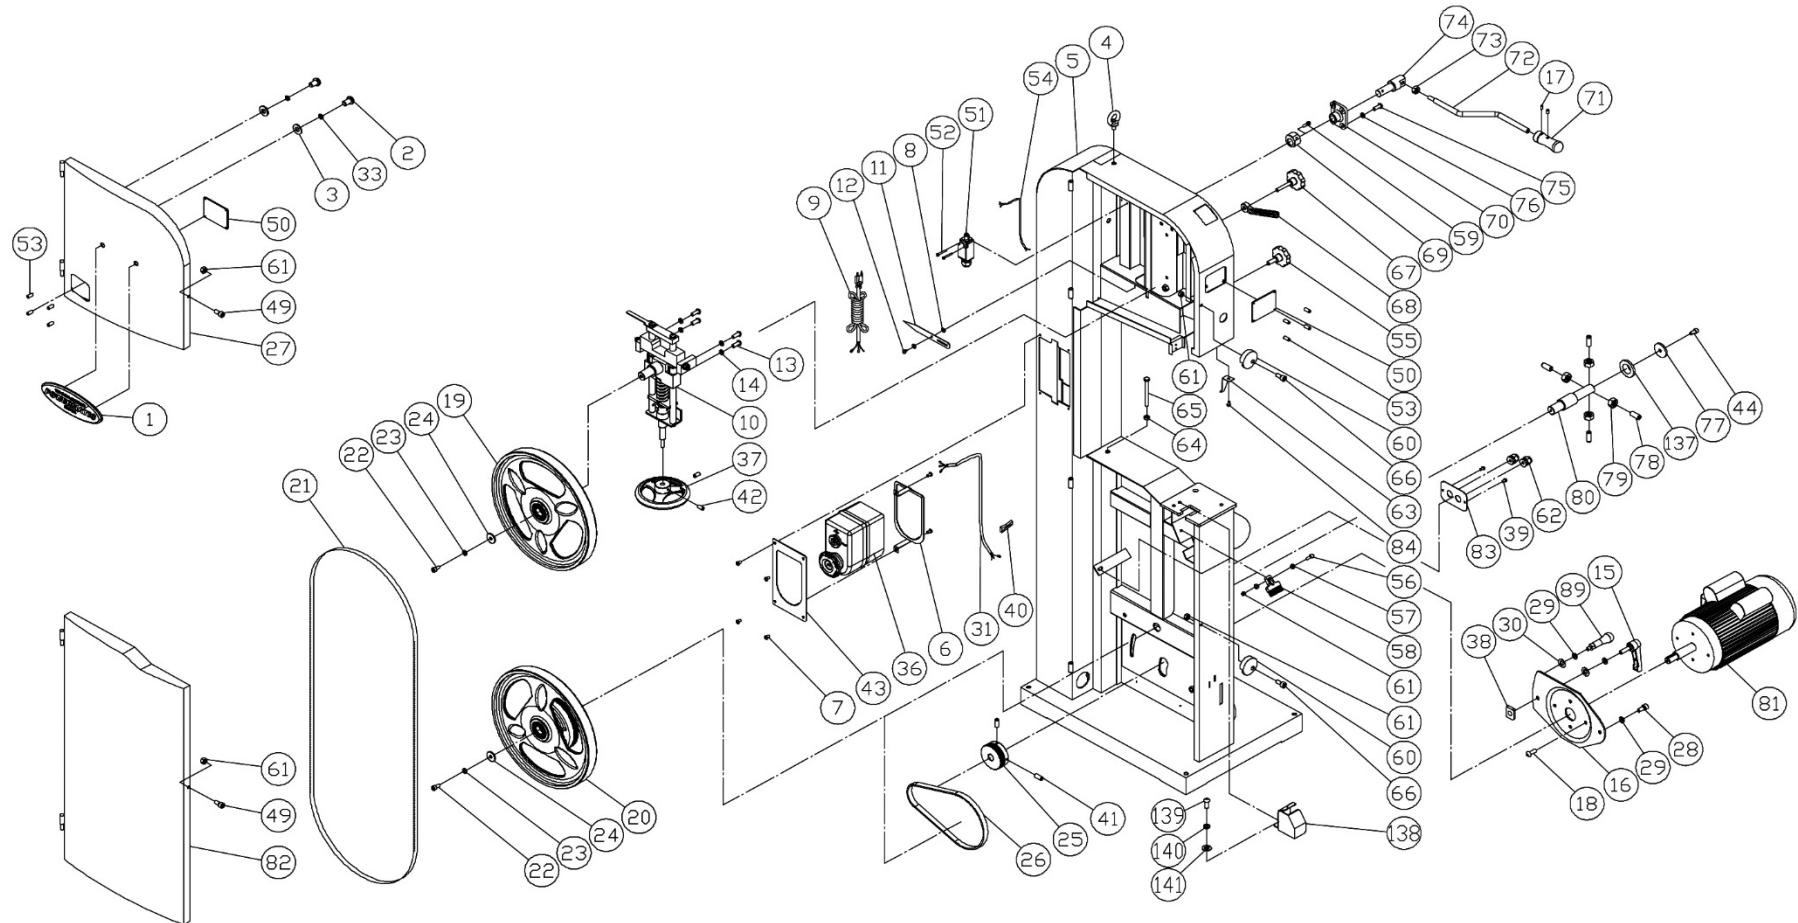

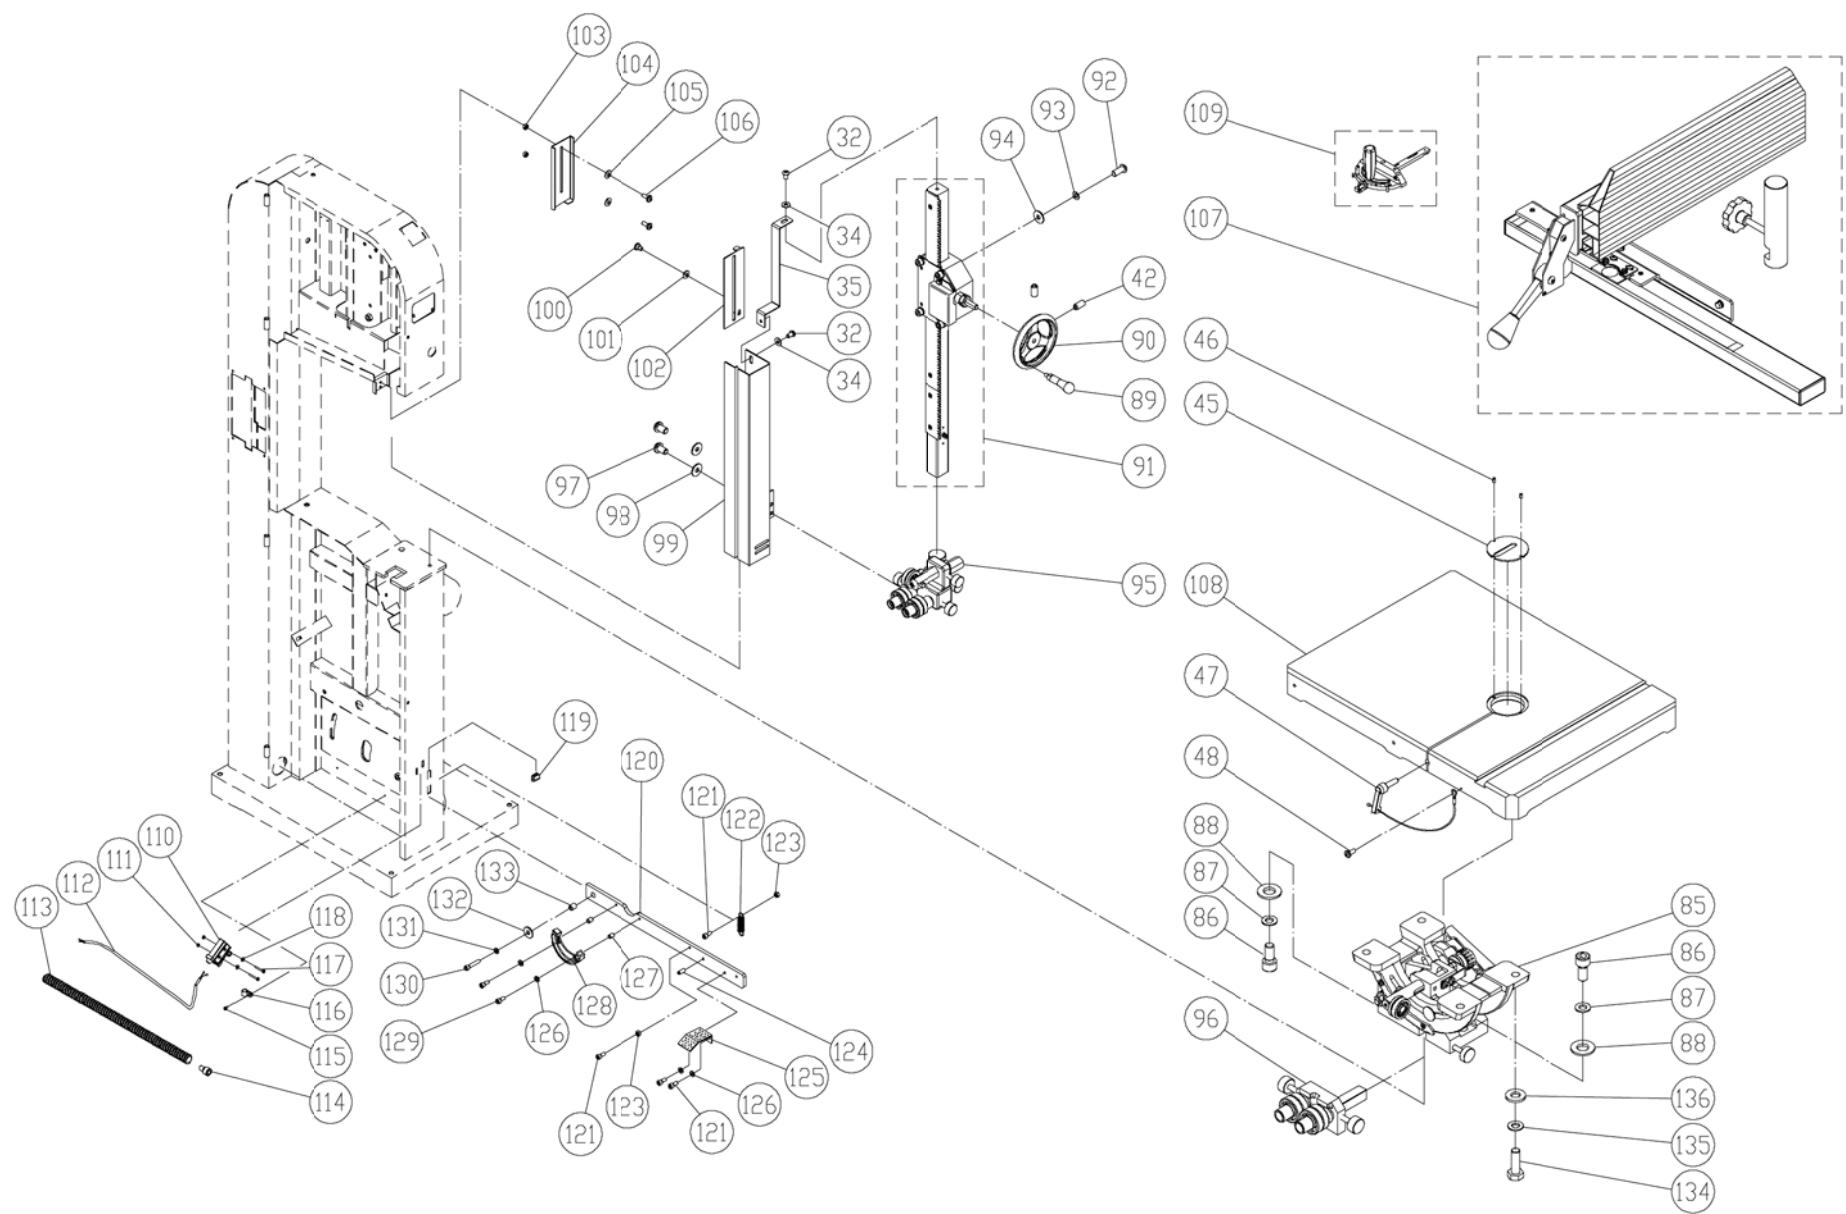

## 15.1.2 Complete Machine with Accessories – Parts List


<b>Index No</b>	<b>Part No</b>	<b>Description</b>	<b>Size</b>	<b>Qty</b>
1	PM2000-105	Powermatic Nameplate, Large		1
2	TS-0254011	Socket Head Button Screw	1/4"-20UNCx3/8"L	2
3	TS-1550041	Flat Washer	M6 x Ø16	2
4	PM1500-004	Lifting Eye	M10	1
5	PM1500-005	Machine Main Body Frame		1
6	PM1500-006	Switch Bracket		1
7	TS-2246082	Socket Head Button Screw	M6x8	6
8	TS-1550041	Flat Washer	M6 x Ø13	2
9	PM1500-009	Power Cord	14AWGx3Cx3.4M	1
10	PM1500-010	Upper Wheel Sliding Bracket Assembly		1
11	PM1500-011	Tension Pointer		1
12	PM1500-012	Step Screw		1
13	TS-2248202	Socket Head Button Screw	M8x20	4
14	TS-2361081	Lock Washer	M8	4
15	PM1500-015	Motor Bracket Lock Handle	M10x33	1
16	PM1500-016	Motor Mount Plate		1
17	TS-1524011	Set Screw	M8x8	2
18	TS-2248202	Socket Head Button Screw	M8x20	4
19	PM1500-019	Upper Wheel Assembly	Ø15"	1
20	PM1500-020	Lower Wheel Assembly	Ø15"	1
21	PM1500-021	Saw Blade	.153"L / 3/8"W / 0.65mm Thk	1
22	TS-1504041	Hex Socket Screw	M8x20	2
23	TS-2361081	Lock Washer	M8	2
24	TS-1550061	Flat Washer	M8 x Ø30	2
25	PM1500-025	Motor Pulley		1
26	PM1500-026	Poly-V Belt	290J9	1
27	PM1500-027	Upper Cabinet Door		1
28	TS-1505031	Socket Head Cap Screw	M10x25	1
29	TS-2361101	Lock Washer	M10	3
30	TS-1550071	Flat Washer	M10 x Ø20	2
31	PM1500-031	Motor Cord	14AWGx3Cx1.7M	1
32	TS-2246082	Socket Head Button Screw	M6x8	2
33	TS-2361061	Lock Washer	M6	1
34	TS-1550041	Flat Washer	M6 x Ø16	2
35	PM1500-035	Support Plate		1
36	PM1500-036	Magnetic Switch Assembly	230V/60Hz/1PH	1
	PM2000-298	Safety Key for Magnetic Switch		1
37	PM1500-037	Handwheel	6"	1
38	PM1500-038	Locating Block		1
39	PM1500-039	Tapping Screw	M4x8	2
40	PM1500-040	Wire Connector	224-201	1
41	TS-1523041	Socket Set Screw	M6x12	2
42	TS-1523051	Socket Set Screw	M6x16	4
43	PM1500-043	Face Plate		1
44	TS-1504041	Socket Head Cap Screw	M8x20	1
45	PM1500-045	Table Insert (Aluminum)		1
46	PM1500-046	Roll Pin	Ø4x8	2
47	PM1500-047	Table Pin Assembly		1
48	TS-1534032	Pan Head Bolt w/Flange	M6x10	1
49	TS-1503021	Socket Head Cap Screw	M6x10	2
50	PM1500-050	Viewing Window		2
51	PM1500-051	Limit Switch	AZD-1112	1
52	TS-2284302	Phillips Pan Head Machine Screw	M4x30	2
53	TS-1521031	Socket Set Screw	M4x8	8
54	PM1500-054	Switch Cord	18AWGx2Cx1.2M	1
55	PM1500-055	Lock Knob	M10x30	1
56	TS-1482051	Hex Cap Screw	M6x25	2
57	TS-1550041	Flat Washer	M6 x Ø13	4
58	PM1500-058	Brush		2
59	TS-1503061	Socket Head Cap Screw	M6x25	1

<b>Index No</b>	<b>Part No</b>	<b>Description</b>	<b>Size</b>	<b>Qty</b>
60	PM1500-060	Door Lock Knob .....		2
61	TS-1541021	Nylon Lock Hex Nut .....	M6.....	6
62	PM1500-062	Strain Relief .....	PG13.5.....	2
63	PM1500-063	Pointer .....		1
64	TS-2311101	Hex Nut.....	M10.....	1
65	TS-1491151	Hex Cap Screw.....	M10x90.....	1
66	TS-1503061	Socket Head Cap Screw .....	M6x25.....	2
67	PM1500-067	Blade Tracking Adjustment Knob .....	M10x50.....	1
68	PM1500-068	Lock Handle.....	M10.....	1
69	PM1500-069	Cam .....		1
70	PM1500-070	Shaft Fixed Block.....		1
71	PM1500-071	Tension Quick release Handle .....		1
72	PM1500-072	Tension Quick release Lever .....		1
73	TS-1540081	Hex Nut.....	M12.....	1
74	PM1500-074	Tension Quick release Lever Shaft .....		1
75	TS-2248202	Socket Head Button Screw.....	M8x20.....	4
76	TS-2361081	Lock Washer.....	M8.....	4
77	PM1500-077	Washer .....		1
78	TS-1524051	Socket Set Screw .....	M8x20.....	4
79	TS-1540061	Hex Nut.....	M8.....	4
80	PM1500-080	Lower Wheel Shaft .....		1
81	PM1500-081	Motor.....	3HP, 1PH, 230V .....	1
	PM1500-081-01	Motor Fan (not shown).....		1
	PM1500-081-02	Motor Fan Cover (not shown).....		1
	PM1500-081-03	Start Capacitor (not shown) .....	200MFD, 250VAC.....	1
	PM1500-081-04	Running Capacitor (not shown) .....	60µF, 300VAC .....	1
	PM1500-081-05	Junction Box (not shown) .....		1
	PM1500-081-06	Junction Box Cover (not shown).....		1
	PM1500-081-07	Centrifugal Switch (not shown) .....		1
82	PM1500-082	Lower Cabinet Door .....		1
83	PM1500-083	Strain Relief Fixed Plate .....		1
84	JMS12SCMS-81	Pan Head Bolt w/Flange .....	M5x8 .....	1
85	PM1500-085	Trunnion Support Bracket Assembly .....		1
86	TS-1505051	Socket Head Cap Screw .....	M10x35 .....	2
87	TS-2361101	Lock Washer.....	M10.....	2
88	TS-1550071	Flat Washer .....	M10 x Ø23 .....	2
89	3520B-126	Handle .....		2
90	PM1500-090	Handwheel .....		1
91	PM1500-091	Guide Bar Bracket Assembly .....		1
92	TS-2248202	Socket Head Button Screw .....	M8x20 .....	4
93	TS-2361081	Lock Washer.....	M8.....	4
94	TS-1550061	Flat Washer .....	M8 x Ø18 .....	4
95	PM1500-095	Upper Blade Guide Support Assembly .....		1
96	PM1500-096	Lower Blade Guide Support Assembly .....		1
97	TS-2246082	Socket Head Button Screw.....	M6x8 .....	2
98	TS-1550041	Flat Washer .....	M6 x Ø16 .....	2
99	PM1500-099	Blade Guard Cover .....		1
100	PM1500-012	Shoulder bolt .....		1
101	PM1500-101	Plastic Washer .....	M6xØ13, Thk 1.5mm .....	1
102	PM1500-102	Sliding Plate .....		1
103	TS-1541011	Nylon Lock Hex Nut .....	M5.....	2
104	PM1500-104	Protect Cover .....		1
105	PM1500-101	Plastic Washer .....	M6xØ13,Thk 1.5mm .....	2
106	TS-1533032	Phillips Pan Head Machine Screw .....	M5x10 .....	2
107	PM1500-107	Fence Assembly .....		1
108	PM1500-108	Table .....	21½"x16" .....	1
109	PM1500-109	Miter Gauge Assembly .....		1
110	PM1500-110	Limit Switch .....	KL7141 .....	1
111	TS-1540021	Hex Nut .....	M4 .....	2
112	PM1500-112	Limit Switch Cord .....	18AWGx2Cx2.2m .....	1
113	PM1500-113	Wire Jacket .....	½"x1100mm(L) .....	1
114	PM1500-114	Wire Bushing .....		1

<b>Index No</b>	<b>Part No</b>	<b>Description</b>	<b>Size</b>	<b>Qty</b>
115 .....	JWTS10-217 .....	Tapping Screw.....	M4x8 .....	2
116 .....	PM1500-116.....	Wire Fixed Clamp .....	5/8" .....	2
117 .....	TS-2284302 .....	Phillips Pan Head Machine Screw.....	M4x30 .....	2
118 .....	TS-1550021 .....	Flat Washer .....	M4xØ8 .....	2
119 .....	PM1500-119.....	Plastic Bumper.....	9mmx10mm .....	1
120 .....	PM1500-120.....	Foot Brake Lever .....		1
121 .....	TS-1503041 .....	Socket Head Cap Screw .....	M6x16 .....	4
122 .....	PM1500-122.....	Spring .....		1
123 .....	TS-2311061 .....	Hex Nut.....	M6 .....	2
124 .....	PM1500-124.....	Nylon Set Screw .....	M7x10 .....	1
125 .....	PM1500-125.....	Foot Brake Pedal .....		1
126 .....	TS-2361061 .....	Lock Washer.....	M6 .....	4
127 .....	PM1500-127.....	Bushing.....		2
128 .....	PM1500-128.....	Brake Pad .....		1
129 .....	TS-1503061 .....	Socket Head Cap Screw .....	M6x25 .....	2
130 .....	TS-1504051 .....	Socket Head Cap Screw .....	M8x25 .....	1
131 .....	TS-2361081 .....	Lock Washer.....	M8 .....	1
132 .....	TS-1550061 .....	Flat Washer .....	M8 x Ø30 .....	1
133 .....	PM1500-133.....	Bushing.....		1
134 .....	TS-1490041 .....	Hex Cap Screw.....	M8x25 .....	4
135 .....	TS-2361081 .....	Lock Washer.....	M8 .....	4
136 .....	TS-1550061 .....	Flat Washer .....	M8 x Ø18 .....	4
137 .....	PM1500-137.....	Plate.....		1
138 .....	PM1500-138.....	Lower Blade Guard .....		1
139 .....	TS-2246082 .....	Socket Head Button Screw.....	M6 x 8 .....	2
140 .....	TS-2361061 .....	Lock Washer.....	M6 .....	2
141 .....	TS-1550041 .....	Flat Washer .....	M6 x Ø13 .....	2
.....	3520B-157.....	Upper (Narrow) Stripe, 50"L ( <i>not shown</i> ) .....		4
.....	3520B-158.....	Lower (Wide) Stripe, 50"L ( <i>not shown</i> ) .....		2
.....	PM1500-WL.....	Warning Label ( <i>not shown</i> ).....	4"H x 5-1/4"W .....	1
.....	PM1500-ID.....	I.D. Label ( <i>not shown</i> ) .....		1
.....	PM1500-GS.....	Guide Post Scale ( <i>not shown</i> ) .....		1
.....	PM1500-TLL.....	Tension Lever Label ( <i>not shown</i> ) .....		1
.....	PM1500-BTL.....	Blade Tension Label ( <i>not shown</i> ) .....		1

### 15.2.1 Upper Wheel Sliding Bracket & Tension Mechanism Assembly – Exploded View

Part Assembly No.: PM1500-010

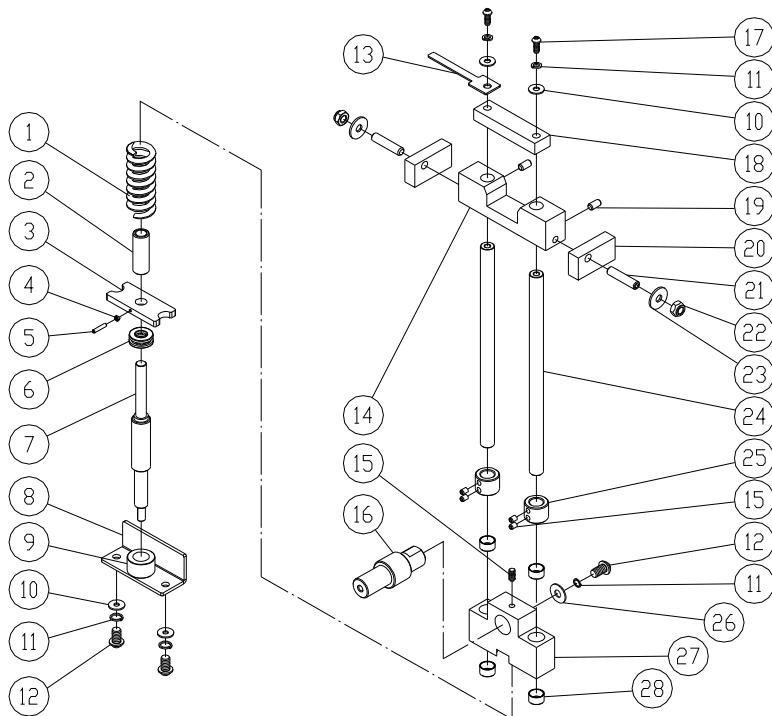


### 15.2.2 Upper Wheel Sliding Bracket & Tension Mechanism Assembly – Parts List

Index No	Part No	Description	Size	Qty
1	PM1500-010-01	Spring		1
2	PM1500-010-02	Bushing		1
3	PM1500-010-03	Plate		1
4	TS-1540021	Hex Nut	M4	1
5	A077	Socket Set Screw	M4x25	1
6	BB-51201	Thrust Bearing		1
7	PM1500-010-07	Adjustment Screw Rod		1
8	PM1500-010-08	Adjustment Plate		1
9	PM1500-010-09	Screw Bushing		1
10	TS-1550061	Flat Washer	M8 x Ø18	4
11	TS-2361081	Lock Washer	M8	5
12	TS-2248202	Socket Head Button Screw	M8x20	3
13	PM1500-010-13	Limit Switch Plate		1
14	PM1500-010-14	Fixed Position Block		1
15	TS-1524011	Hex Socket Screw	M8x6	5
16	PM1500-010-16	Wheel Shaft		1
17	TS-2248302	Socket Head Button Screw	M8x30	2
18	PM1500-010-18	Locating Block		1
19	TS-1523031	Socket Set Screw	M6x10	2
20	PM1500-010-20	Fixed Block		2
21	PM1500-010-21	Socket Set Screw	M10x50	2
22	TS-1541041	Nylon Lock Hex Nut	M10	2
23	TS-1550071	Flat Washer	M10	2
24	PM1500-010-24	Guide Post		2
25	PM1500-010-25	Collar		2
26	TS-1550061	Flat Washer	M8 x Ø30	1
27	PM1500-010-27	Upper Wheel Sliding Bracket		1
28	PM1500-010-28	Bushing	DU1610	4

### 15.3.1 Upper Wheel Assembly – Exploded View

Part Assembly No.: PM1500-019

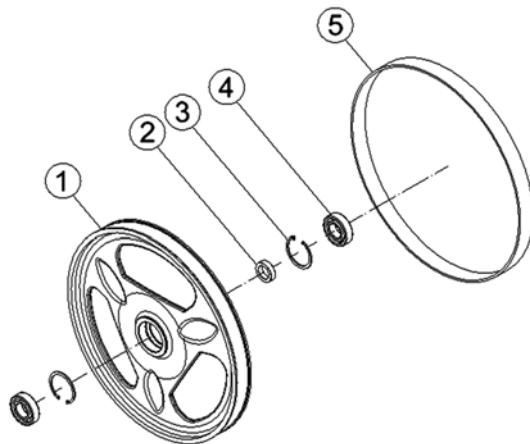


### 15.3.2 Upper Wheel Assembly – Parts List

Index No	Part No	Description	Size	Qty
1	PM1500-019-01	Upper Wheel.....	Dia.15 inches.....	1
2	PM1500-019-02	Spacer .....		1
3	JWBS20QT-504	Retaining Ring .....	R52 .....	2
4	BB-6205LLU	Ball Bearing .....	6205LLU.....	2
5	PM1500-019-05	Tire.....		1

### 15.4.1 Lower Wheel Assembly – Exploded View

Part Assembly No.: PM1500-020

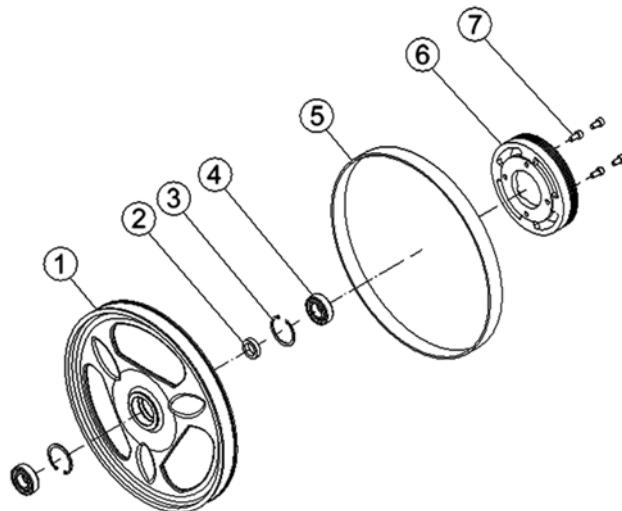


### 15.4.2 Lower Wheel Assembly – Parts List

Index No	Part No	Description	Size	Qty
1	PM1500-020-01	Lower Wheel.....	Dia.15 inches.....	1
2	PM1500-019-02	Spacer .....		1
3	JWBS20QT-504	Retaining Ring .....	R52 .....	2
4	BB-6205LLU	Ball Bearing .....	6205LLU.....	2
5	PM1500-019-05	Tire.....		1
6	PM1500-020-06	Drive Pulley.....		1
7	TS-1504031	Socket Head Cap Screw .....	M8x16.....	4

### 15.5.1 Trunnion Support Bracket Assembly – Exploded View

Part Assembly No.: PM1500-085

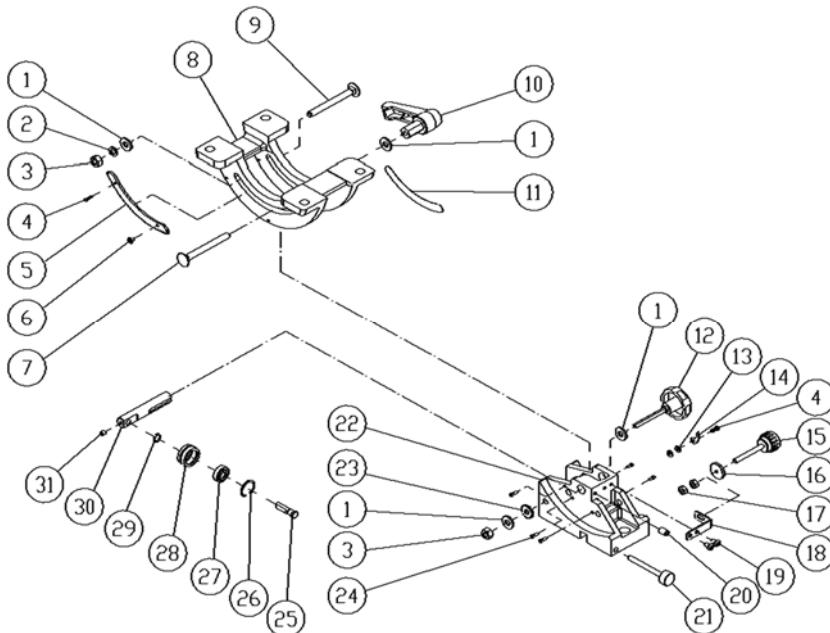


### 15.5.2 Trunnion Support Bracket Assembly – Parts List

Index No	Part No	Description	Size	Qty
1	TS-1550061	Flat Washer	M8 x Ø18	4
2	TS-2361081	Lock Washer	M8	1
3	TS-1541031	Nylon Lock Hex Nut	M8	2
4	TS-2284062	Phillips Pan Head Machine Screw	M4x6	2
5	PM1500-085-05	Gear Rack		1
6	TS-2284061	Phillips Flat Head Machine Screw	M4x6	1
7	PM1500-085-07	Carriage Bolt	M8x85	1
8	PM1500-085-08	Trunnion Block		1
9	PM1500-085-09	Carriage Bolt	M8x80	1
10	PM1500-085-10	Lock Handle		1
11	PM1500-085-11	Tilt Scale		1
12	PM1500-085-12	Adjustment Knob Bolt		1
13	TS-1550021	Flat Washer	M4 x Ø8	2
14	PM1500-085-14	Angle Pointer		1
15	PM1500-085-15	Adjustment Knob Bolt	M6	1
16	PM1500-085-16	Locking Ring		1
17	TS-1540041	Hex Nut	M6	2
18	PM1500-085-18	Adjustment Plate		1
19	TS-1533032	Phillips Pan Head Machine Screw	M5x8	2
20	PM1500-085-20	Set Screw		1
21	PM1500-085-21	Lock Knob		1
22	PM1500-085-22	Trunnion Support Bracket		1
23	PM1500-085-23	Gear		1
24	TS-2235061	Socket Head Cap Screw	M5x6	6
25	PM1500-085-25	Adjustment Shaft		1
26	PM1500-085-26	Retaining Ring	R22	1
27	BB-608ZZ	Ball Bearing	608ZZ	1
28	PM1500-085-28	Thrust Bearing Holder		1
29	PM1500-085-29	Retaining Ring	S8	1
30	PM1500-085-30	Adjustment Bar		1
31	TS-1523011	Socket Set Screw	M6x6	1

### 15.6.1 Guide Bar Bracket Assembly – Exploded View

Part Assembly No.: PM1500-091

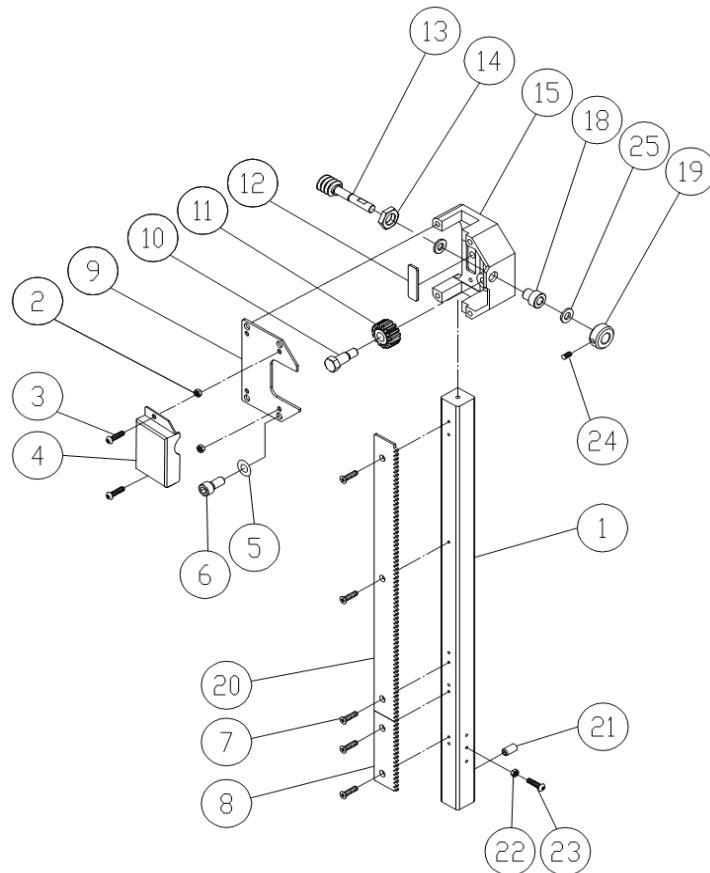


### 15.6.2 Guide Bar Bracket Assembly – Parts List

Index No	Part No	Description	Size	Qty
1	PM1500-091-01	Guide Bar.....		1
2	TS-1540031	Hex Nut.....	M5.....	2
3	TS-1533032	Phillips Pan Head Machine Screw.....	M5x10.....	2
4	PM1500-091-04	Cover .....		1
5	TS-2361081	Lock Washer.....	M8.....	4
6	TS-1504031	Hex Socket Screw .....	M8x16.....	4
7	6286927	Phillips Flat Head Machine Screw .....	M4x10.....	1
8	PM1500-091-08	Guide Bar Rack (short).....		1
9	PM1500-091-09	Cover .....		1
10	PM1500-091-10	Fixed Pin.....		1
11	PM1500-091-11	Gear.....		1
12	PM1500-091-12	Fixed Plate.....		1
13	PM1500-091-13	Worm Shaft.....		1
14	TS-154010	Hex Nut.....	M16.....	1
15	PM1500-091-15	Guide Bracket.....		1
18	PM1500-091-18	Bushing.....		1
19	PM1500-091-19	Collar .....		1
20	PM1500-091-20	Guide Bar Rack (long) .....		1
21	TS-1523021	Socket Set Screw .....	M6x8.....	2
22	TS-1540021	Hex Nut.....	M4.....	1
23	TS-1532032	Phillips Pan Head Machine Screw.....	M4x10.....	1
24	TS-1522011	Socket Set Screw .....	M5x5.....	1
25	PM1500-091-25	Plastic Washer.....		2

### 15.7.1 Upper Blade Guide Assembly – Exploded View

Part Assembly No.: PM1500-095

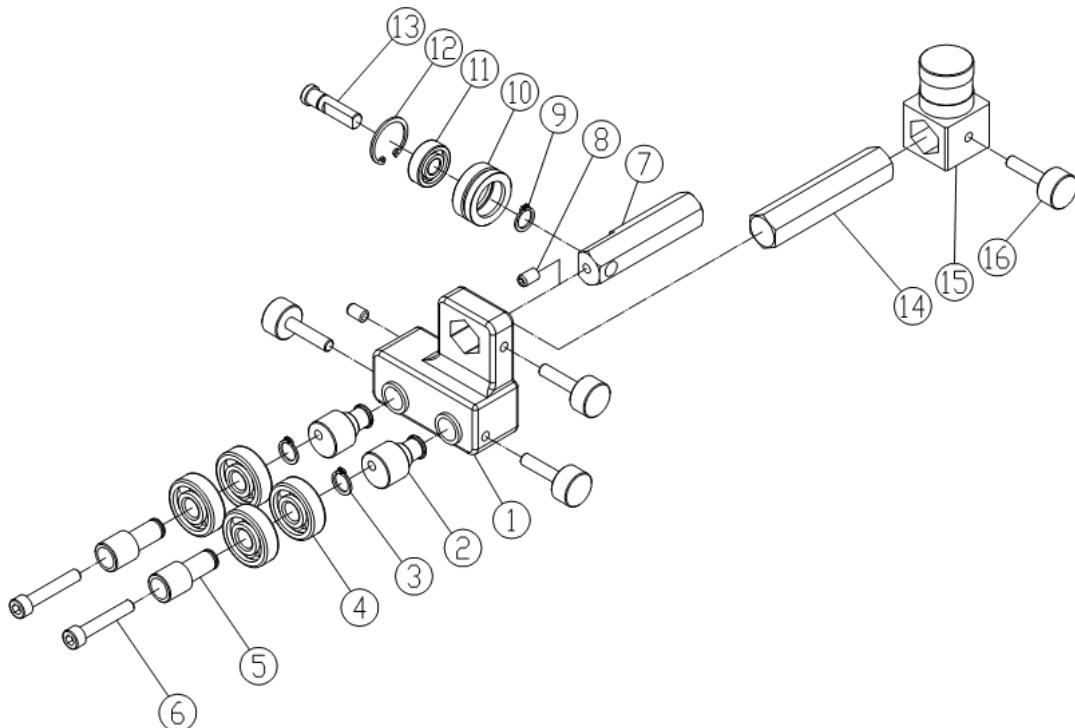


### 15.7.2 Upper Blade Guide Assembly – Parts List

Index No	Part No	Description	Size	Qty
1	PM1500-095-01	Upper Blade Guide Support		1
2	PM1500-095-02	Eccentric Shaft		2
3	6286478	Retaining Ring	S12	2
4	BB-6201ZZ	Ball Bearing	6201ZZ	4
5	PM1500-095-05	Knurled Knob		2
6	TS-1503081	Socket Head Cap Screw	M6x35	2
7	PM1500-095-07	Upper Spacing Sleeve		1
8	TS-1523011	Socket Set Screw	M6x6	2
9	PM1500-085-29	Retaining Ring	S8	1
10	PM1500-085-28	Thrust Bearing Holder		1
11	BB-608ZZ	Ball Bearing	608ZZ	1
12	PM1500-085-26	Retaining Ring	R22	1
13	PM1500-085-25	Adjustment Shaft		1
14	PM1500-095-14	Hex Post		1
15	PM1500-095-15	Upper Blade Guide Support Block		1
16	PM1500-095-16	Lock Knob		4

### 15.8.1 Lower Blade Guide Assembly – Exploded View

Part Assembly No.: PM1500-096

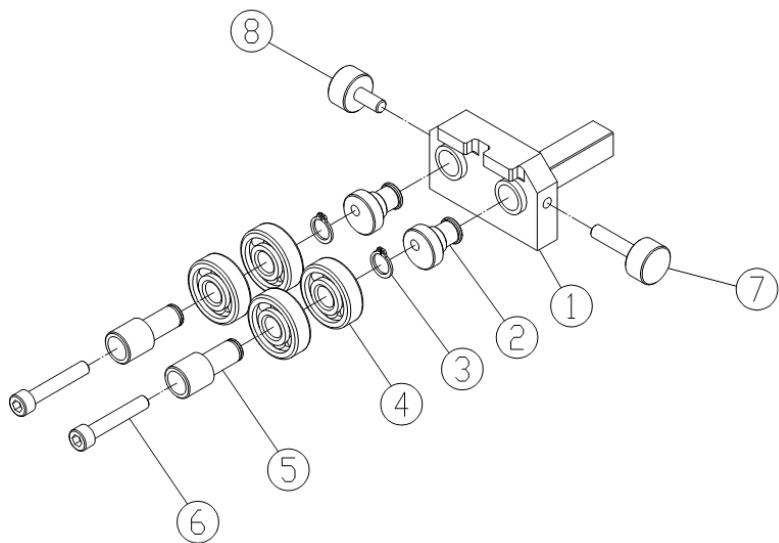


### 15.8.2 Lower Blade Guide Assembly – Parts List

Index No	Part No	Description	Size	Qty
1	PM1500-096-01	Lower Blade Guide Support		1
2	PM1500-096-02	Eccentric Shaft		2
3	PM1500-095-03	Retaining Ring	S12	2
4	BB-6201ZZ	Ball Bearing	6201ZZ	4
5	PM1500-095-05	Knurled Knob		2
6	TS-1503081	Hex Socket Screw (Black)	M6x35	2
7	PM1500-095-16	Lock Knob		1
8	PM1500-096-08	Lock Knob		2

### 15.9.1 Fence Assembly – Exploded View

Part Assembly No.: PM1500-107

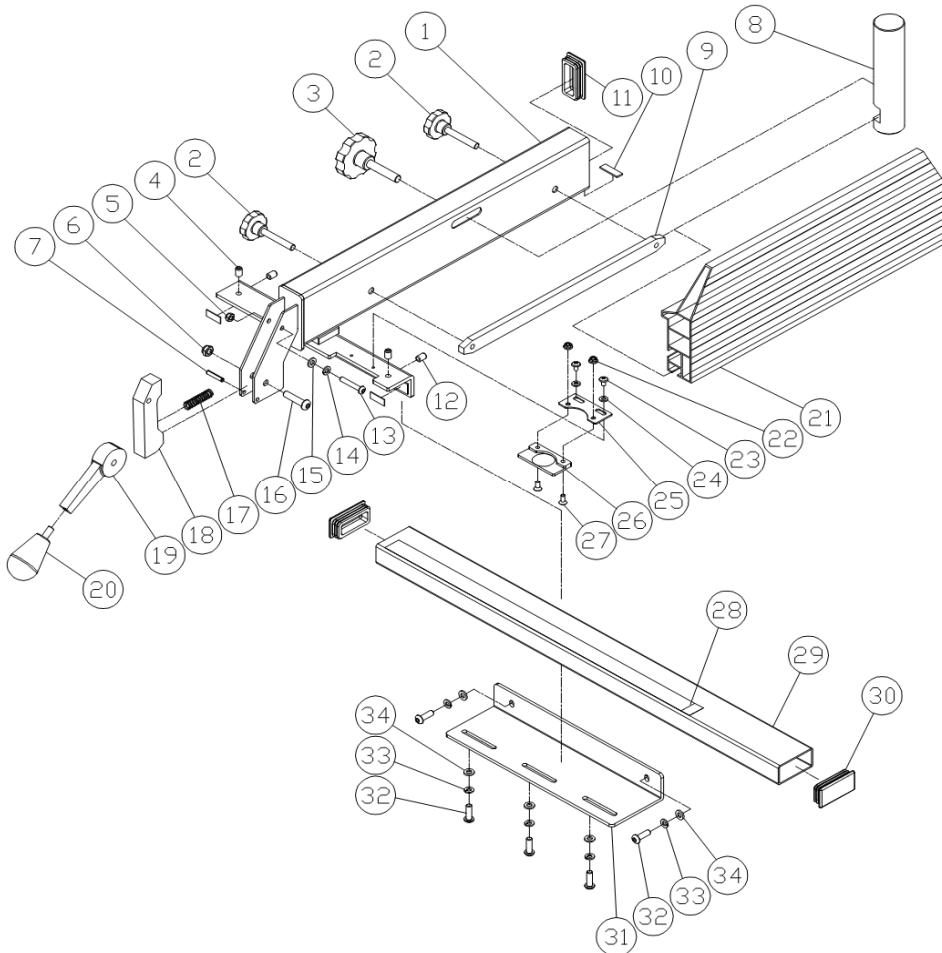


### 15.9.2 Fence Assembly – Parts List

Index No	Part No	Description	Size	Qty
1	PM1500-107-01	Fence Body		1
2	PM1500-107-02	Lock Knob	M8x52	2
3	PM1500-107-03	Resaw Lock Knob	M10x50	1
4	PM1500-107-04	Nylon Set Screw	M10x12	2
5	TS-1541021	Nylon Lock Hex Nut	M6	1
6	TS-1541031	Nylon Hex Nut (Black)	M8	1
7	992322	Roll Pin	Ø5x26	1
8	PM1500-107-08	Resaw Pin	1½ " x 6½ " (Dia.xH)	1
9	PM1500-107-09	Lock Bar		1
10	PM1500-107-10	Nylon Pad		3
11	PM1500-107-11	Tube Plug	40x80mm	1
12	TS-1525011	Socket Set Screw	M10x10	2
13	TS-2246352	Socket Head Button Screw	M6x35	1
14	TS-2361061	Lock Washer	M6	1
15	TS-1550041	Flat Washer	M6 x Ø13	1
16	9180-56	Socket Head Button Screw	M8x35	1
17	PM1500-107-16	Spring		1
18	PM1500-107-17	Handle Lock Bracket		1
19	PM1500-107-18	Lock Handle		1
20	PM1500-107-19	Knob	M8x21	1
21	PM1500-107-20	Fence Plate	19½ " x 6½ " (LxW)	1
22	PM1500-107-22	Hex Flange Nut	M5	2

<b>Index No</b>	<b>Part No</b>	<b>Description</b>	<b>Size</b>	<b>Qty</b>
23 .....	PM1900-108-6 .....	Phillips Pan Head Machine Screw.....	M5x8 .....	2
24 .....	TS-1550031 .....	Flat Washer .....	M5 x Ø12 .....	2
25 .....	PM1500-107-25 .....	Cursor Bracket.....	.....	1
26 .....	PM1500-107-26 .....	Convex Cursor.....	.....	1
27 .....	TS-2285121 .....	Phillips Flat Head Machine Screw .....	M5x12 .....	2
28 .....	PM1500-107-28 .....	Scale Label.....	.....	1
29 .....	PM1500-107-29 .....	Guide Rail Tube.....	.....	1
30 .....	PM1500-107-30 .....	Tube Plug .....	30x60mm .....	2
31 .....	PM1500-107-31 .....	Guide Rail.....	.....	1
32 .....	TS-1482031 .....	Hex Cap Screw.....	M6x16 .....	5
33 .....	TS-2361061 .....	Lock Washer.....	M6 .....	5
34 .....	TS-1550041 .....	Flat Washer .....	M6 x Ø16 .....	5

### 15.10.1 Miter Gauge Assembly – Exploded View

Part Assembly No.: PM1500-109

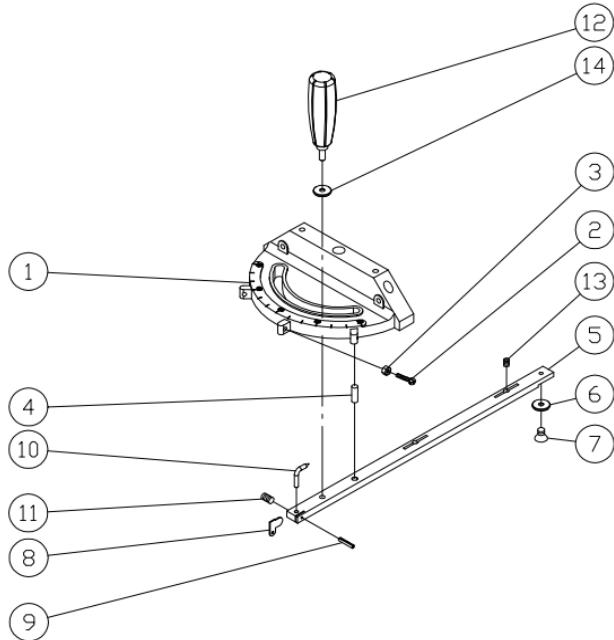

### 15.10.2 Miter Gauge Assembly – Parts List

Index No	Part No	Description	Size	Qty
1	6295167	Miter Gauge Body		1
2	TS-1533062	Pan Head Screw	M5x20	3
3	TS-1540031	Hex Nut	M5	3
4	6295168	Steel Pin		1
5	PM1500-109-05	Guide Bar		1
6	6295163	Guide Disc		1
7	PM1800-461	Flat Head Screw	M6x8	1
8	6295171	Stop Tab		1
9	PM1800-462	Spring Pin	3x6mm	1
10	6295169	Pointer		1
11	SS050100	Socket Set Screw	M5x5	1
12	PM1800-451	Handle	M8x20	1
13	PM2000-343	Socket Set Screw	M8x6	2
14	TS-0680031	Flat Washer	M8x Ø18	1