





Parts List for 18-900L Type 1

Item Number	Part Number	Description	Qty Required
1	5140089-16	FLAT WASHER	1
2	5140088-59	HEX WRENCH	1
3	5140088-60	HEX WRENCH	1
4	5140089-15	SHIFTER WEDGE	1
5	5140089-35	WRENCH SET	1
6	5140088-58	HEX SCREW	6
7	5140088-51	HEX NUT	1
8	5140089-36	HEX SCREW	2
9	5140088-49	HEX NUT	2
10	5140089-70	HANDLE BAR ASSY	1
11	5140089-29	DEPTH STOP	2
12	5140089-37	CHAIN	1
13	5140089-38	HEX BOLT	1
14	5140088-57	PLUNGER HOUSING	1
15	5140088-61	HEX WRENCH	1
16	5140089-21	CHUCK & KEY	1
17	5140089-22	SPRING WASHER	1
18	5140089-23	HEX SCREW	1
19	5140089-42	FLAT WASHER	4
20	284925-00	SCREW	2
21	5140088-45	FLAT WASHER	6
22	5140088-40	SPINDLE NUT	1
23	5140089-25	FLAT WASHER	6
24	5140088-48	STRAIN RELIEF	3
25	5140088-41	LOCK NUT	4
27	284925-00	SCREW	1
29	5140089-34	HEX NUT	4

Parts List for 18-900L Type 1

Item Number	Part Number	Description	Qty Required
30	5140089-39	FLAT WASHER	1
31	5140089-71	HEX SCREW	8
32	5140089-45	HEX SCREW	1
33	5140089-40	HANDLE	1
34	5140089-41	STRAIN RELIEF	2
35	5140089-47	HEX BOLT	1
36	5140089-48	RUBBER SLEEVE	1
37	5140089-49	O RING	1
38	283716-00	WASHER,LOCK	3
39	5140089-50	HEX SCREW	4
40	5140088-47	SPRING PIN	2
41	5140089-30	BEARING	2
42	5140089-33	SPRING PIN	1
43	5140089-32	BEARING	1
44	5140089-31	RETAINING RING	2
45	5140089-44	HEX BOLT	2
46	5140088-65	BASE	1
47	5140088-66	HEX BOLT	4
49	5140088-68	RACK	1
50	5140089-27	COLUMN ASSY	1
51	5140088-70	RACK COLLAR	2
52	5140088-71	TILTING SCALE	1
53	5140088-72	HEX SCREW	4
54	5140088-73	TILTING SCALE	1
55	5140088-74	HEX HD BOLT	1
56	5140088-75	FLAT WASHER	2
57	5140088-24	LASER ASSEMBLY	1

Parts List for 18-900L Type 1

Item Number	Part Number	Description	Qty Required
58	5140088-25	LASER ASSEMBLY	1
59	5140089-51	HEX SCREW	3
60	5140088-77	CLAMP HANDLE	2
61	5140088-76	TABLE BRACKET	1
63	5140088-78	TABLE BRACKET	1
64	5140088-79	CENTERING SCALE	1
65	5140088-80	INSERT	1
66	5140088-81	TABLE	1
67	5140088-82	HEX SCREW	4
68	5140088-83	SLIDER	2
69	5140088-84	HEX HD BOLT	2
70	5140088-85	SCREW	2
71	5140088-86	TABLE BRACKET	1
72	5140088-87	POINTER	1
73	5140088-88	HEX HD SCREW	1
74	5140088-89	HEX SCREW	6
75	5140088-90	COLUMN LOCK HANDLE	1
76	5140088-91	WORM GEAR	1
77	5140088-92	BRACKET ASSEMBLY	1
79	5140088-93	WORM GEAR	1
80	5140088-94	PINION	1
81	5140088-95	HANDLE ASSEMBLY	1
82	5140088-96	MOTOR PULLEY	1
83	5140088-97	SPINDLE NUT	1
84	5140089-53	LEAD WIRE	1
85	5140089-54	RUBBER PAD	4
86	5140088-98	NUT LOCK	1

Parts List for 18-900L Type 1

Item Number	Part Number	Description	Qty Required
87	5140088-99	WASHER	1
88	5140089-00	QUILL	1
89	5140089-01	SPINDLE	1
90	5140089-55	RUBBER WASHER	1
91	5140089-02	PULLEY	1
92	5140089-03	SHAFT	1
93	5140089-56	LEAD WIRE	2
94	5140089-04	V BELT	2
95	5140089-57	BEARING	2
96	5140089-58	COVER	1
97	5140089-59	NUT	1
98	5140089-06	BELT TENSIONER ASSY	1
99	5140089-28	TENSION WHEEL ASSY	1
100	5140088-64	CHUCK KEY	1
101	5140089-08	BELT TENSION HANDLE	1
102	5140089-60	HEX SCREW	2
103	5140089-61	FLAT WASHER	8
104	5140089-62	CLAMP	2
105	5140089-63	HEX NUT	2
106	5140089-64	WASHER	2
107	5140089-13	COLLAR	1
108	5140089-14	DRIVING SLEEVE	1
109	5140089-26	ARBOR	1
110	5140089-65	LAMP ASSY	1
111	5140088-15	SET BOLT	1
112	5140088-16	HEX BOLT	1
113	5140088-17	STOP COLLAR	1

Parts List for 18-900L Type 1

Item Number	Part Number	Description	Qty Required
114	5140088-18	UPPER PULLEY COVER	1
115	5140088-19	RUBBER PAD	4
116	5140088-20	HEX SCREW	4
117	5140088-21	RETAINING PLATE	1
118	5140089-66	HEX SCREW	4
119	5140089-67	HEX WRENCH	1
120	5140089-68	HEX WRENCH	1
121	5140089-69	HEX WRENCH	1
122	5140089-75	STRAIN RELIEF	2
123	5140089-76	SPINDLE PULLEY	1
124	5140089-74	PULLEY COVER ASSY	1
125	5140089-77	SPRING WASHER	1
127	5140088-22	LASER COVER	1
128	5140088-23	HEX SCREW	6
130	5140088-26	PAN HEAD SCREW	3
131	5140088-28	SWITCH COVER	1
132	5140088-27	SWITCH	1
133	5140088-29	SWITCH BOX	1
134	5140088-30	STRAIN RELIEF	1
135	5140088-31	PC BOARD COVER	1
136	5140088-32	PAN HEAD SCREW	2
137	5140088-33	PAN HEAD SCREW	2
138	5140088-34	POWER CABLE	1
139	5140088-35	CONTROLLER	1
140	5140088-36	HANDLE ASSY	3
141	5140089-72	HEX SCREW & WASHER	2
142	5140089-73	PLATE	6

Parts List for 18-900L Type 1

Item Number	Part Number	Description	Qty Required
143	5140088-37	HUB COVER	2
144	5140088-38	HUB	1
145	5140088-39	SCALE RING	1
146	5140088-42	HEX SCREW	2
147	5140088-43	CHUCK KEY HOLDER	1
148	5140088-44	HEX SCREW	2
149	5140088-46	HEADSTOCK	1
150	5140088-50	QUILL SET SCREW	1
151	5140088-52	COLLAR	1
152	5140088-53	PINION	1
153	5140088-55	SPRING RETAINER	1
154	5140089-52	SPRING CAP ASS'Y	1
155	5140101-04	MOTOR	1
156	5140101-04	MOTOR	1
158	N039324	LABEL	1
159	N039325	WARNING LABEL	2
160	N039326	LABEL	1
161	N039327	LABEL	1
162	N039328	ID LABEL	1
163	N039329	ID LABEL	1
164	N039330	LABEL	1
165	N045522	NAMEPLATE	1
856	18-901	FENCE	1