



SERVICE PARTS LIST

BULLETIN NO.
54-49-2815

SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS		REVISED BULLETIN	DATE
M18 FUEL™ QUIK-LOK™ POWER HEAD			Jun 2025
CATALOG NO. 3016-20	SERIAL NO. N93A and B	WIRING INSTRUCTION See Page 15	

Pg. 1 Power Unit	Pg. 7 Brush Cutter Attachment	Pg. 13 Short Shaft Hedge Trimmer
Pg. 2 Edge Trimmer Attachment	Pg. 8 Rubber Broom Attachment	Pg. 14 Reciprocator Attachment
Pg. 3 String Trimmer Attachment	Pg. 9 Bristle Brush Attachment	Pg. 15 Wiring Diagram
Pg. 4 Hedge Trimmer Attachment	Pg. 10 Cultivator Attachment	
Pg. 5 Pole Saw Attachment	Pg. 11 Blower Attachment	
Pg. 6 Extension Tube Attachment	Pg. 12 Bed Redefiner Attachment	

NOTE: Apply 3.5g of type "J" grease (49-08-4220) to inner sleeve of Drive Shaft Assembly (72).

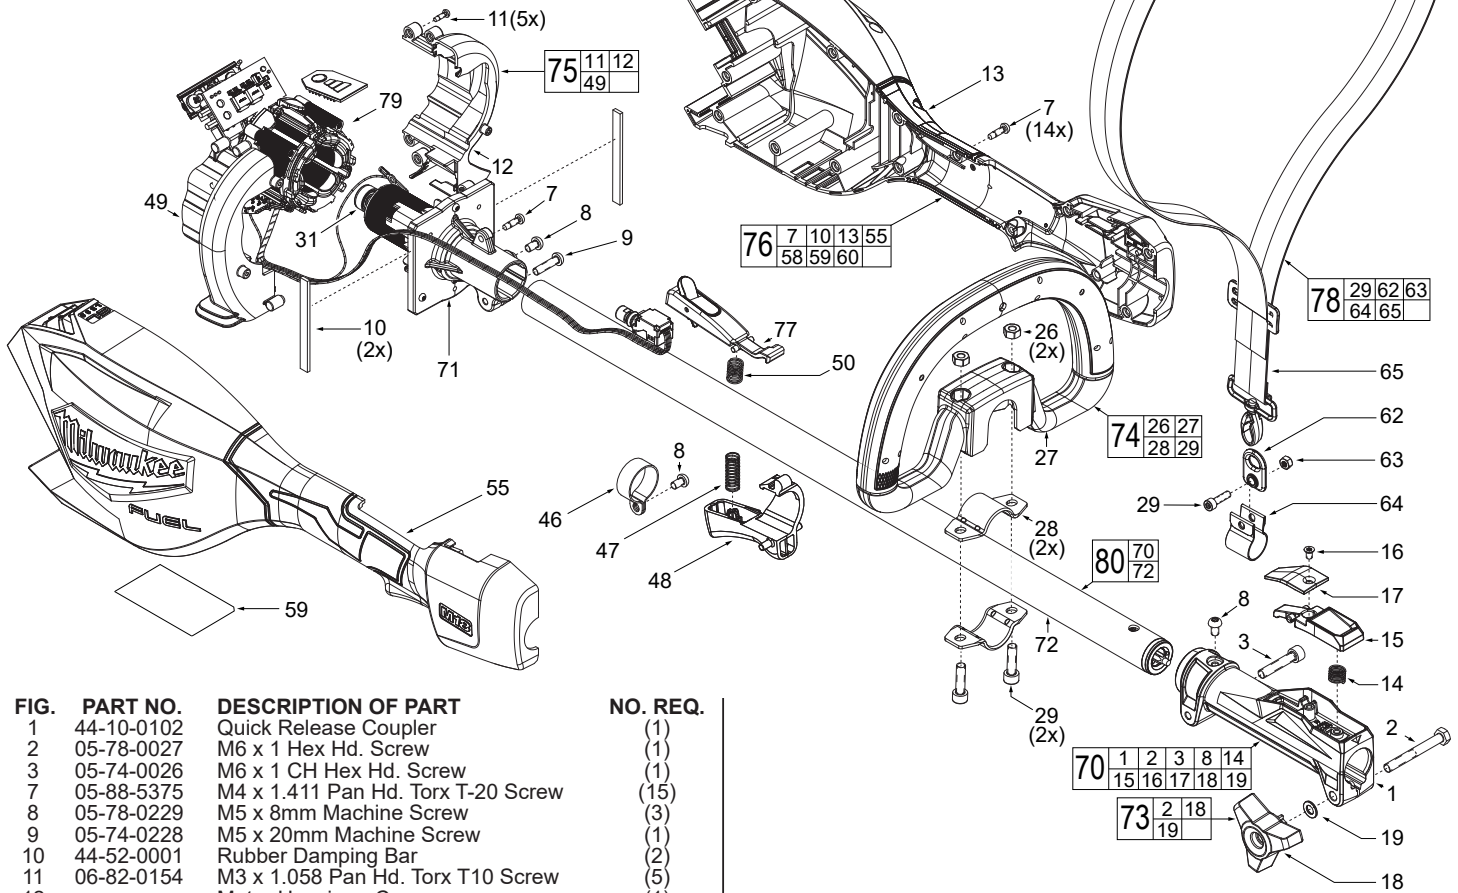


FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
1	44-10-0102	Quick Release Coupler	(1)
2	05-78-0027	M6 x 1 Hex Hd. Screw	(1)
3	05-74-0026	M6 x 1 CH Hex Hd. Screw	(1)
7	05-88-5375	M4 x 1.411 Pan Hd. Torx T-20 Screw	(15)
8	05-78-0229	M5 x 8mm Machine Screw	(3)
9	05-74-0228	M5 x 20mm Machine Screw	(1)
10	44-52-0001	Rubber Damping Bar	(2)
11	06-82-0154	M3 x 1.058 Pan Hd. Torx T10 Screw	(5)
12	-----	Motor Housing - Cover	(1)
13	-----	Handle Housing - Cover	(1)
14	40-50-1090	Latch Spring	(1)
15	45-72-0026	Quick Change Trigger	(1)
16	05-81-0592	M4 x 6.5mm Flat Head T-15 Screw	(1)
17	42-92-0206	Trigger Cover	(1)
18	43-98-0103	Clamping Knob	(1)
19	45-88-0011	Washer	(1)
26	05-55-0006	M6 Hex Nut	(2)
27	43-62-0102	Bail Handle	(1)
28	28-28-0053	Bail Handle Plate	(2)
29	05-74-0015	M6 x 1 CH Torx T-30 Screw	(3)
31	-----	Ball Bearings	(1)
46	-----	Tube Clamp	(1)
47	40-50-0374	Trigger Spring	(1)
48	23-66-0236	Trigger	(1)
49	-----	Motor Housing - Support	(1)
50	40-50-0254	Lock-off Spring	(1)
55	-----	Handle Housing - Support	(1)
58	10-22-0675	Warning Label (Not Shown)	(1)
59	12-20-0288	Service Nameplate	(1)
60	10-22-0676	Warning Label (Not Shown)	(1)
62	44-66-0039	Shoulder Strap Mounting Plate	(1)
63	06-57-0625	M6 Lock Nut	(1)
64	45-56-0011	Shoulder Strap Mounting Band	(1)
65	-----	Shoulder Strap	(1)
70	42-90-0112	Quick Release Coupler Service Kit	(1)
71	23-40-0019	Rotor/Motor Mount Assembly	(1)
72	45-08-0073	Drive Shaft Assembly	(1)

FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
73	42-98-0116	Coupler Knob Service Kit	(1)
74	31-44-0253	Carrier Handle Service Kit	(1)
75	28-50-0072	Motor Housing Service Kit	(1)
76	28-14-0116	Handle Housing Service Kit	(1)
77	45-72-0037	Lock-Off Trigger Assembly	(1)
78	45-56-0012	Shoulder Strap Service Kit	(1)
79	14-20-0299	Electronics Assembly	(1)
80	44-84-0052	Drive Shaft/Quick Release Service Kit	(1)

SCREW TORQUE SPECIFICATIONS				
FIG.	PART NO.	WHERE USED	SEAT TORQUE	
			(kgf-cm)	(lb-in)
3	05-74-0026	Quick Release Coupler	45-50	39-43
7	05-88-5375	Ground Wire	8-10	7-9
		Handle Housing	11-13	10-11
8	05-78-0229	Motor Mount	24-26	21-23
9	05-74-0228	Motor Mount	24-26	21-23
11	06-82-0154	Motor Housing	6-8	5-7
16	05-81-0592	Quick Release Coupler	8-10	7-9
29	05-74-0015	Bail Handle	25-28	21-23