

Belt Sander - F 012 337 600 - 3376

Item	Part Number	Description	Illustration	Price	Quantity	Price Group
4	2 610 958 835	Switch	1	-,-	1	-
5	2 610 958 976	Cord	1	-,-	1	-
44	2 610 027 224	Belt	1	-,-	1	-
50	2 610 027 230	Rubber	1	-,-	4	-
55	2 610 027 235	Washer	1	-,-	2	-
65	2 610 027 244	Washer	1	-,-	1	-
66	2 610 958 975	Pan head screw	1	-,-	1	-
68	2 610 027 247	Cover	1	-,-	1	-
79	2 610 027 259	Knob	1	-,-	1	-
86	2 610 027 197	Cover	1	-,-	1	-
96	2 610 027 194	Support	1	-,-	1	-
651	2 610 027 272	Turnbuckle	1	-,-	1	-
652	2 610 027 266	Turnbuckle	1	-,-	1	-
801	2 610 027 274	Vertical Adjustment	1	-,-	1	-
821	2 610 027 532	Guide	1	-,-	1	-
835	2 610 027 533	Table	1	-,-	1	-

F012337600

Stand }
Issue }

13-02-04

Fig./Abb. 1

