


RB518

EXPLODED
VIEW AND SPARE PARTS LIST

SCHEMA ECLATE ET LISTE DES
PIECES DE RECHANGE

DESPIECE DE LA MAQUINA Y LISTA
DE RECAMBIOS

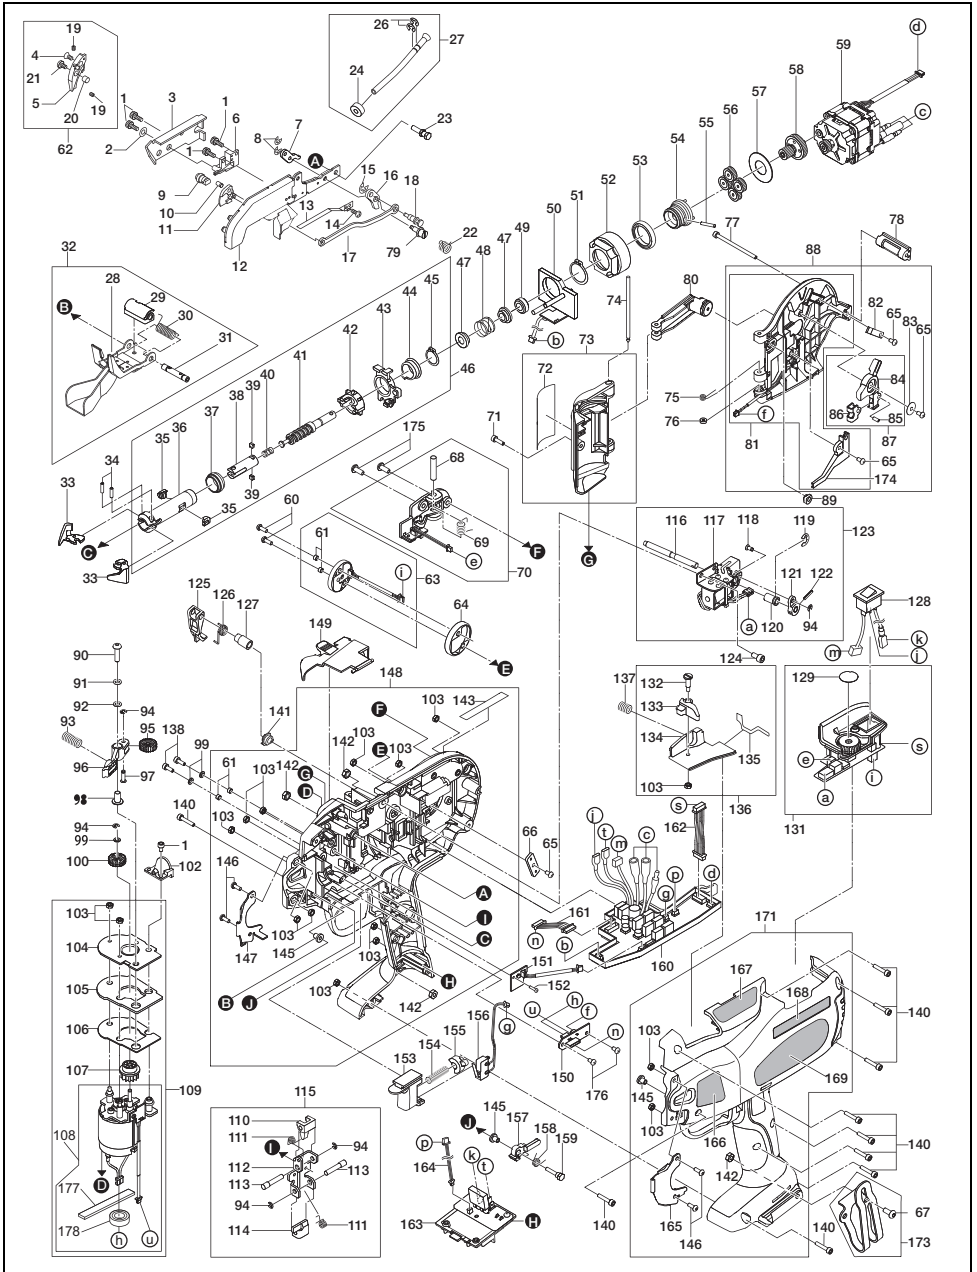

Tool Mod	Part NO	Part Code	Description
RB518	1	BB40481	BOLT 3X5
RB518	2	EE31122	WASHER 3X7
RB518	3	RB12263	ARM B
RB518	4	AA22005	SCREW M2X5
RB518	5	RB11811	WIRE GUIDE A
RB518	6	RB11798	WIRE GUIDE B
RB518	7	RB12090	CUTTER LEVER B
RB518	8	JJ10109	E-RING 2
RB518	9	RB11815	FIXED CUTTER
RB518	10	FF44120	PIN 4120
RB518	11	RB11818	CUTTER
RB518	12	RB81222	ARM A UNIT(517)
RB518	13	RB11800	LEAF SPRING
RB518	14	AA25113	PAN-HEAD SCREW 2X4
RB518	15	JJ10514	E-RING 3CF, REPLACES JJ10112
RB518	16	RB12228	CUTTER LEVER A
RB518	17	RB12265	CONNECTING ROD
RB518	18	RB10392	PIN
RB518	19	AA71408	SCREW 3X3
RB518	20	FF51667	PIN 1667
RB518	21	RB11814	WIRE GUIDE SCREW
RB518	22	KK33370	TORSION SPRING, REPLACES KK33250
RB518	23	RB12003	SCREW
RB518	24	RB12007	PIPE SPONGE
RB518	26	JJ10509	E-RING 4CF, REPLACES JJ10101
RB518	27	RB81219	PIPE ASSY (517)
RB518	28	RB81224	CURL GUIDE UNIT (517)
RB518	29	RB12010	CURL GUIDE COVER
RB518	30	KK33365	TORSION SPRING
RB518	31	RB11708	STOPPER SHAFT, REPLACES RB10394
RB518	32	RB81217	CURL GUIDE ASSY (517)
RB518	33	RB11816	HOOK
RB518	34	RB81113	WS PIN 2.5x10, REPLACES FF21502
RB518	35	RB12014	KEY B
RB518	36	RB12280	SLEEVE A
RB518	37	RB12279	SLEEVE GUIDE
RB518	38	RB81242	TIP AXIS B
RB518	39	RB10115	KEY B
RB518	40	KK23730	COMP SPRING 3730
RB518	41	RB12281	TIP AXIS A
RB518	42	RB12015	SLEEVE B
RB518	43	RB70412	CUTTER RING UNIT
RB518	44	RB12091	CUTTER RING GUIDE
RB518	45	JJ21011	C-RING 14
RB518	46	RB81247	TIP AXIS ASSY
RB518	47	RB12020	SPRING COLLAR
RB518	48	KK29026	COMP. SPRING 9026
RB518	49	RB12019	BUMPER
RB518	50	RB81177	TIP AXIS GUIDE ASSY
RB518	51	JJ21603	C-RING 20
RB518	52	RB10338	INTERNAL GEAR

RB518	53	LL11181	WHEEL 6704
RB518	54	RB70681	PLANET CAGE UNIT (518)
RB518	55	FF31589	PIN 1589
RB518	56	RB10341	PLANET GEAR
RB518	57	RB10484	GEAR PRESS WHEEL
RB518	58	RB70418	SUN GEAR UNIT
RB518	59	RB70558	TWISTING MOTOR (517)
RB518	60	AA21419	SCREW 3X8
RB518	61	FF51817	HOLLOW PIN 1817
RB518	62	RB81248	WIRE GUIDE A ASSY, REPLACES RB81117
RB518	63	RB81246	REEL GUIDE ASSY, REPLACES RB81182
RB518	64	RB12284	REEL GUIDE, REPLACES RB11989
RB518	65	AA05555	SCREW 3X6 CF
RB518	66	RB11687	NUT PLATE
RB518	67	BB41706	BOLT 4X10
RB518	68	FF31563	PIN 1563
RB518	69	KK34089	SPRING 4089
RB518	70	RB81181	RATCHET COVER ASSY
RB518	71	BB40715	BOLT 3X12
RB518	72	RB10421	LABEL FCC
RB518	73	RB70476	MOTOR COVER ASSY
RB518	74	FF41871	STEP PIN 1821
RB518	75	KK34067	TORSION SPRING 4067
RB518	76	EE39609	RUBBER WASHER 1.8X6.2
RB518	77	BB40714	BOLT 3X50, REPLACES BB40515
RB518	78	RB12031	JOINT
RB518	79	RB12710	SHAFT, REPLACES RB10386
RB518	80	RB81178	REEL HOLDER ASSY
RB518	81	RB81179	REEL MAGAZINE
RB518	82	RB12038	REEL STOPPER SPRING
RB518	83	EE39184	PLANE WASHER 3.1X1.8X1
RB518	84	RB12035	REEL STOPPER
RB518	85	FF21240	PIN 2,5X6
RB518	86	RB12036	STOPPER PLATE
RB518	87	RB70427	REEL STOPPER ASSY
RB518	88	RB81180	REEL MAGAZINE ASSY
RB518	89	RB12099	PLATE B
RB518	90	BB41707	BOLT 4X16
RB518	91	EE11103	SPRING WASHER 2-4
RB518	92	EE39825	WASHER 4.5X7.4X0.8
RB518	93	KK24175	COMP. SPRING 4175
RB518	94	JJ10113	E-RING 2.5
RB518	95	RB10359	FEEDING GEAR B2
RB518	96	RB10362	RELEASE LEVER
RB518	97	FF41809	STEP PIN 1809
RB518	98	FF51628	HOLLOW PIN 1628
RB518	99	EE32104	WASHER 2-3
RB518	100	RB10357	FEEDING GEAR B1
RB518	102	RB10364	WIRE GUIDE C
RB518	103	CC41104	HEX. NUT 1-3
RB518	104	RB70434	PARTITION PLATE
RB518	105	RB12045	PARTITION SPONGE

RB518	106	RB12421	SPONGE SUPPORT, REPLACES RB12044
RB518	107	RB70509	FEEDING GEAR A ASSY
RB518	108	RB81266	FEEDING MOTOR ASSY, REPLACES RB81174
RB518	109	RB81267	FEEDING ASSY, REPLACES RB81183
RB518	110	RB10368	JAW A
RB518	111	KK33249	TORSION SPRING 3249
RB518	112	RB10370	JAW BASE
RB518	113	FF41822	STEP PIN 1822
RB518	114	RB10369	JAW B
RB518	115	RB70495	JAW BASE ASSY
RB518	116	RB12238	ROTARY PIN, REPLACES RB12026
RB518	117	RB81185	SOLENOID ASSY
RB518	118	FF41855	PIN 1855
RB518	119	JJ10106	E-RING 6
RB518	120	RB12030	PLATE C
RB518	121	RB12029	ROTARY PLATE
RB518	122	FF21620	PIN 2X12
RB518	123	RB70531	BRAKE ASSY, REPLACES RB70494
RB518	124	BB40712	BOLT 4X8
RB518	125	RB12025	REEL PRESS
RB518	126	KK33373	SPRING 3373
RB518	127	FF52114	HOLLOW PIN 2114, REPLACES FF52113
RB518	128	RB70457	MAIN SWITCH UNIT
RB518	129	RB12267	LABEL, TORQUE DIAL (517)
RB518	131	RB81232	SWITCH BASE ASSY (RB517)
RB518	132	RB12054	STEP PIN
RB518	133	RB12053	RELEASE STOPPER
RB518	134	RB12055	STOPPER BASE
RB518	135	RB12056	SPONGE F
RB518	136	RB81139	STOPPER BASE ASSY
RB518	137	KK29133	COMPRESSION SPRING 9133
RB518	138	BB40710	BOLT 3X8
RB518	140	BB40709	BOLT 3X16
RB518	141	RB12236	PLATE A, REPLACES RB11978
RB518	142	CC42512	HEX NUT 1A M4
RB518	143	RB12521	NOTICE LABEL RB398
RB518	145	FF52111	PIN 2111
RB518	146	BB41503	BOLT 3X8
RB518	147	RB11979	COVER L
RB518	148	RB81269	FRAME L ASSY
RB518	149	RB11987	WINDOW
RB518	150	RB81195	RELAY BOARD UNIT
RB518	151	RB81191	SENSOR CIRCUIT D BOARD UNIT
RB518	152	AA31724	SCREW 2X8
RB518	153	RB12080	TRIGGER
RB518	154	KK23656	COMPRESSION SPRING 3656
RB518	155	RB12101	TRIGGER LOCK LEVER
RB518	156	RB70453	TRIGGER SWITCH UNIT
RB518	157	RB70473	SWITCH LEVER UNIT
RB518	158	KK34083	SPRING 4083
RB518	159	RB11686	SWITCH LEVER PIN
RB518	160	RB70606	MAIN CIRCUIT BOARD UNIT

RB518	161	RB70465	REPLAY BOARD HARNESS UNIT
RB518	162	RB70454	INTERFACE HARNESS UNIT
RB518	163	RB81188	ELECTRODE UNIT
RB518	164	RB70464	BATTERY SIGNAL HARNESS UNIT
RB518	165	RB11981	COVER R
RB518	166	RB11983	LABEL CURL GUIDE
RB518	167	RB11985	USAGE LABEL
RB518	168	RB11982	LABEL, MAIN SWITCH
RB518	169	RB12511	518 LABEL
RB518	171	RB70597	FRAME R ASSY
RB518	173	RB81184	BELT HOOK ASSY
RB518	174	RB12039	LED COVER
RB518	175	BB41708	BOLT 4X10
RB518	176	AA31722	SCREW 3X8
RB518	177	RB12423	RING CORE SPONGE
RB518	178	RB81268	RING CORE UNIT
RB518	999	PJ70345	LATCH ASSY