




# Operating Instructions and Parts Manual Step-Pulley Industrial Drill Presses


Models IDP-17 and IDP-22

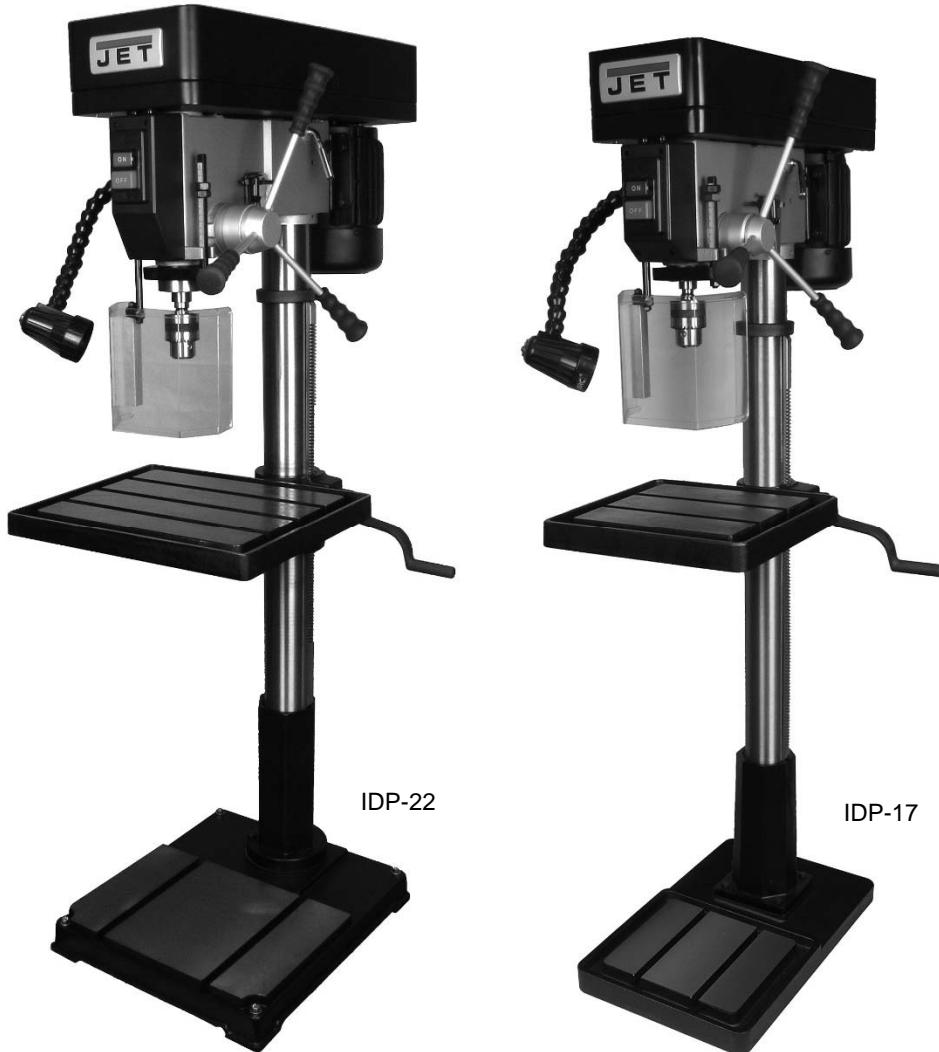

**JET**  
427 New Sanford Road  
LaVergne, Tennessee 37086  
Ph.: 800-274-6848  
[www.jettools.com](http://www.jettools.com)

**Part No. M-354300**  
Edition 3 09/2017  
Copyright © 2017 JET

#### 14.2.1 IDP-22 Drill Press – Exploded View

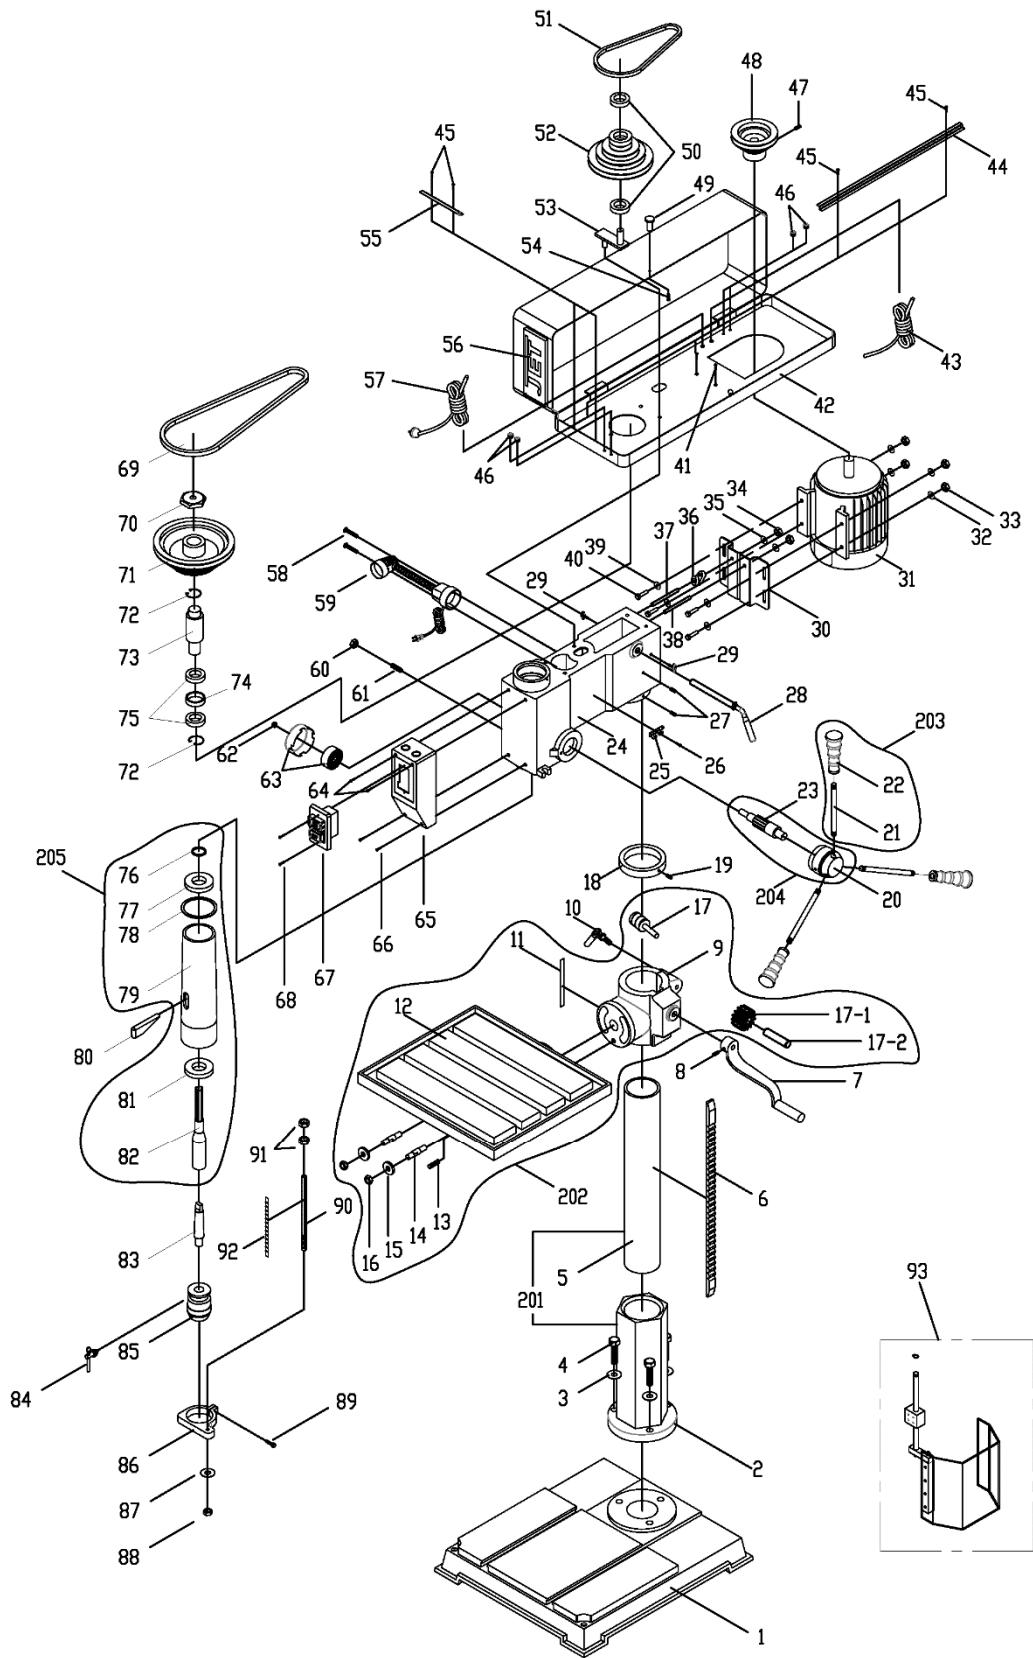

## 14.2.2 IDP-22 Drill Press – Parts List

Index No	Part No	Description	Size	Qty
1	IDP22-01	Base.....	575 x 500 x 85 .....	1
201	IDP22-201	Column Assembly (#2,5) .....	.....	1
2	IDP22-02	Column Holder.....	.....	1
3	TS-0720111	Spring Washer.....	1/2".....	3
4	TS-0070051	Hex Cap Screw.....	1/2" x 2 mm.....	3
5	IDP22-05	Column .....	Ø92 .....	1
6	IDP22-06	Rack .....	.....	1
7	IDP22-07	Table Crank .....	.....	1
8	TS-0267022	Set Screw .....	1/4" x 1/4".....	1
202	IDP22-202	Table Assembly (#9, 11-16).....	.....	1
9	IDP22-09	Table Bracket.....	.....	1
10	IDP22-10	Clamp Bolt .....	1/2" x 70 mm.....	1
11	IDP22-11	Tilt Angle Scale.....	.....	1
12	IDP22-12	Work Table .....	475 x 413 x 41 .....	1
13	TS-0271031	Set Screw .....	3/8" x 3/8".....	1
14	IDP22-14	Screw.....	9/16" x 1/2" x 62.....	2
15	TS-0680061	Flat Washer .....	1/2" x 34 x 5 mm.....	2
16	TS-0561051	Hex Nut.....	1/2" .....	2
17	IDP22-17	Worm Gear Assembly.....	.....	1
17-1	IDP22-17-1	Pinion Gear.....	SC15 .....	1
17-2	IDP22-17-2	Shaft .....	.....	1
18	IDP22-18	Rack Collar .....	Ø92 .....	1
19	TS-0267021	Set Screw .....	1/4" x 1/4".....	1
20	IDP22-20	Feed Hub .....	.....	1
203	IDP17-203	Feed Handle Assembly (#21,22) .....	.....	3
21	IDP22-21	Handle .....	.....	3
22	IDP22-22	Knob .....	.....	3
204	IDP22-204	Feed Pinion Assembly (#20,23).....	.....	1
23	IDP22-23	Feed Pinion .....	.....	1
24	IDP22-24	Head Casting .....	.....	1
25	IDP22-25	Chuck Key Fixture .....	.....	1
26	5711571	Phillips Pan Head Screw .....	3/16" x 1/4" .....	1
27	TS-0271031	Set Screw .....	3/8" x 3/8".....	2
28	IDP22-27	Tension Adjust Handle .....	.....	1
29	IDP22-29	Thumb Screw.....	3/8" x 32 .....	2
30	IDP22-30	Mounting Plate .....	.....	1
31	IDP22-31	Motor.....	1-1/2HP 115/230V .....	1
	IDP22-31MF	Motor Fan .....	.....	1
	IDP22-31MFC	Motor Fan Cover (not shown) .....	.....	1
	IDP22-31SC	Start Capacitor.....	400MFD 125VAC .....	1
	IDP22-31RC	Run Capacitor.....	40µF 250VAC .....	1
	IDP17-30-JB	Junction Box .....	.....	1
	IDP17-30-JBC	Junction Box Cover.....	.....	1
32	TS-0680031	Flat Washer .....	5/16" x 18 x 1.5 mm .....	4
33	TS-0561021	Hex Nut .....	5/16" .....	4
34	TS-0561051	Hex Nut .....	1/2" .....	2
35	TS-0680061	Flat Washer .....	1/2" .....	2
36	IDP22-36	Shaft Lever .....	.....	1
37	IDP22-37	Adjusting Bolt B .....	.....	1
38	IDP22-38	Adjusting Bolt A .....	.....	1
39	TS-0680031	Flat Washer .....	5/16" x 18 x 1.5 mm .....	4
40	TS-0051011	Hex Cap Screw.....	5/16" .....	4
41	TS-0207011	Phillips Pan Washer Head Screw .....	1/4" x 3/8" .....	4
42	IDP22-42	Pulley Cover .....	.....	1
43	IDP22-43	Motor Cord.....	3x14AWG, 300V .....	1
44	IDP22-44	Hold Down Strip .....	.....	1
45	5711571	Phillips Pan Head Screw .....	3/16" x 1/4" .....	3
46	IDP22-46	Strain Relief .....	.....	1
47	TS-1523011	Set Screw .....	M6 x 8 .....	1
48	IDP22-48	Motor Pulley .....	.....	1

<b>Index No</b>	<b>Part No</b>	<b>Description</b>	<b>Size</b>	<b>Qty</b>
49	IDP22-49	Knob .....		1
50	BB-6202	Ball Bearing .....	6202	2
51	VB-A27	V-Belt.....	A27	1
52	IDP22-52	Center Pulley .....		1
53	IDP22-53	Pivot Bracket.....		1
54	TS-081F031	Socket Head Flat Screw .....	1/4" x 1/2"	1
55	IDP22-55	Hold Down Strip.....		1
56	JET-138	JET Logo with adhesive .....	138 x 57 mm	1
57	IDP22-57	Power Cord.....	3x14AWG, 300V	1
58	IDP22-58	Screw.....		1
59	IDP22-59	Work Lamp .....		1
60	TS-0561021	Hex Nut.....	5/16"	1
61	TS-0270091	Set Screw .....	5/16" x 1"	1
62	TS-0561051	Hex Nylon Lock Nut .....	1/2"	1
63	IDP22-63	Coil Spring with Cover .....		1
64	IDP22-64	Phillips Screw .....	3/16" x 70 mm	2
65	IDP22-65	Switch Box.....		1
66	IDP22-66	Phillips Pan Head Screw .....	3/16" x 1-1/2"	2
67	IDP17-66	On-Off Switch .....		1
68	IDP22-68	Flat Head Screw .....	1" x 4 mm	2
69	VB-A38	V-Belt.....	A38	1
70	IDP22-70	Nut .....		1
71	IDP22-71	Spindle Pulley .....		1
72	F006058	External Retaining Ring .....	Ø65 mm	2
73	IDP22-73	Drive Taper .....		1
74	IDP22-74	Ball Spacer .....		1
75	BB-6007	Ball Bearing .....	6007	2
76	IDP22-76	Retaining Ring .....		1
77	BB-6005	Ball Bearing .....	6005	1
78	IDP22-78	Rubber Washer.....		1
205	IDP22-205	Quill Assembly (#76-79, 81,82) .....		1
79	IDP22-79	Quill.....		1
80	IDP22-80	Drift Key .....		1
81	BB-6206	Ball Bearing .....	6206	1
82	IDP22-82	Spindle.....	MT3	1
83	561763	Morse Taper Arbor .....	MT3 x JT3	1
84	561708-CK	Chuck Key .....		1
85	561708	Chuck and Key .....	JT3, 5/8"	1
86	IDP22-86	Depth Stop Base .....		1
87	TS-0680041	Flat Washer .....	3/8"	1
88	TS-0561031	Hex Nut.....	3/8"	1
89	TS-0050031	Hex Cap Screw.....	1/4" x 3/4"	1
90	IDP22-90	Depth Stop Rod .....		1
91	TS-0561071	Hex Nut.....	5/8"	2
92	IDP22-92	Scale (mm) .....		1
93	IDP17-92	Spindle Guard Assembly .....		1
94	LM000146	Warning Label (not shown)....		1
95	LM000148	ID Label, IDP-22 (not shown) .....		1
96	LM000150	Spindle Speed Chart (not shown).....		1
97	LM000152	Motor Label (not shown) .....		1