



## Parts List for 362V Type 10

Item Number	Part Number	Description	Qty Required
1	909832	ARMATURE	1
2	887416	FIELD (360VS 362VS)	1
3	803483	BRUSH CAP	2
4	A22819	SWITCH	1
5	882313	CORD	1
6	873497	BRUSH HOLDER	2
7	N031635	BRUSH & SPRING	2
8	883201	SWITCH VS(360/2 VS)	1
11	803876SV	BEARING	2
12	804211	BEARING,NEEDLE	3
13	803846SV	BEARING	1
14	883202SV	BEARING	1
15	D883500	PINION	1
31	896468	GEAR	1
37	903809	BELT	1
38	903840	DRIVE PULLEY	1
39	904252	DRIVEN PULLEY	1
40	883196	SHAFT DRIVE PULLEY 4	1
41	885104	PULLEY SHAFT 4	1
51	A22833	RH FRAME	1
52	A22835	LH FRAME & COVE	1
53	882859	GEAR HSG COVER	1
54	910499	COVER-BELT	1
57	A23100	HANDLE SET	1
63	698496	PULLEY	1
64	839306	FRAME PROTECTOR BAR	1
65	823466	DRIVE PULLEY	1

## Parts List for 362V Type 10

Item Number	Part Number	Description	Qty Required
84	A03070	SS/A HANDLE SET	1
90	A23158	DUST BAG ASSY	1
100	883485	SCREW	7
101	888117	GASKET	1
102	883782	RUBBER PLUG	1
103	883483	SCREW	2
104	802388	SCREW	2
105	803496	WASHER	2
106	883183	BAFFLE-COOLING SEC	1
107	883182	BAFFLE-COOLING PRIM	1
108	883010	DUST BAFFLE	1
109	875322	SCREW	3
110	886538	SCREW	2
111	879678	SCREW	6
112	892780	SCREW	1
113	883480	SCREW	1
114	694010	SCREW	4
115	882185	SCREW MACHINE STEEL	3
116	883192	GEAR HSG GASLET	1
117	883486	SCREW	4
118	855284	BEARING	3
119	878563	KEY	1
120	801372	NUT	1
121	802942	RING	1
122	801852	SEAL	1
123	803365	CAP	1
124	803341	WASHER	2

## Parts List for 362V Type 10

Item Number	Part Number	Description	Qty Required
125	823254	NUT	1
126	A22837	TRACKING BOX	1
127	883479	SCREW	3
129	908909	SHOE ASSY	1
131	852310	SCREW	3
132	887650	YOKE	1
133	698507	CONTROL PLATE	1
134	883477	SCREW	2
135	698511	WEAR PLATE	1
136	698502	LEVER	1
137	848741	WASHER	3
138	874194	SHOULDER SCREW	1
139	858136	NUT	1
140	698504	SPRING	1
141	873946	SPRING	1
142	698500	SPRING	1
143	853455	RING	1
144	803317	WASHER	2
145	873945	SPRING	1
146	878262	SCREW	1
147	A22840	COVER PLATE	1
148	861434	CORD CLAMP	1
150	682063	CONNECTOR VS	1
153	887098	LEAD-ASSY360VS 362VS	1
154	888569	GASKET	1
155	897159	KNOB	1
156	883484	SCREW	2

## Parts List for 362V Type 10

Item Number	Part Number	Description	Qty Required
166	894223	SCREW	2
167	896743	COVER	1
174	A11331	WARNING LABEL	1
175	A23710	ID LABEL	1
176	A23322	ID LABEL	1
177	698775	PIN	1
178	A22850	NAMEPLATE	1
179	A23709	WARNING LABEL	1
800	879751	LUBRICANT 4 LBS	1
800	878499	TUBE GREASE	1
861	A02028	CASE-CARRYING	1