


Wiring Diagram

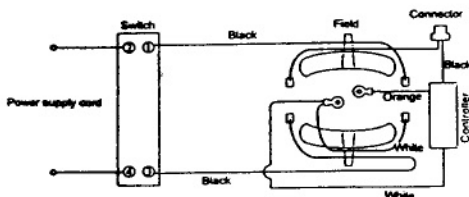

**IMPORTANT!** – To assure product SAFETY and RELIABILITY, repairs, maintenance or adjustments should be performed by MAKITA Service Centers, or other qualified service organizations. Always use MAKITA replacement parts.

Fig.	Part No.	Qty. Used	Description	Fig.	Part No.	Qty. Used	Description
1	664422-4	1	P. SUPPLY CORD AWG#18-2	29	922107-1	1	H. SOCKET HEAD BOLT M4X8
4	651286-5	1	SWITCH SGEL206C-5	30	313083-4	1	BLADE CRAMP
6	216008-6	1	STEEL BALL 4.0	31	323748-0	1	SAFETY WIRE
7	233151-6	1	COMPRESSION SPRING 4	32	416476-5	1	DUST COVER
8	961011-9	1	STOP RING E-4	33	313086-8	1	SLIDER SUPPORT
9	272239-7	1	LEVER 18	34	423307-1	1	POLYURETANE SPONGE
10	183051-9	1	HOUSING SET (INCL. 2 EA. RUBBER PIN 4 263002-9, INCL. FIG. 5,40,49)	35	344686-3	1	SEAL PLATE
13	643552-4	2	BRUSH HOLDER 5-8	36	266177-3	2	H. SOCKET HEAD BOLT M3X10
14	191956-9	1	CARBON BRUSH CB-75 (SET)	37	961002-0	1	RETAINING RING S-6
15	631265-9	1	CONTROLLER 100-120V	38	416703-0	1	DUST SEAL
16	210025-8	1	BALL BEARING 627LLB	39	633406-3	1	FIELD 115V
17	517266-0	1	ARMATURE ASS'Y 115V (INCL. FIG. 16,18)	40	183051-9	1	HOUSING SET (INCL. 2 EA. RUBBER PIN 4 263002-9, INCL. FIG. 5,10,49)
18	210005-4	1	BALL BEARING 608DDW	41	152601-1	1	RETAINER COMPLETE
19	152600-3	1	BEARING CASE COMPLETE	42	256117-9	1	PIN 4
20	344683-9	1	PUSH PLATE	43	343540-8	1	HOLDER
21	344614-8	1	BALANCE PLATE	44	163397-9	1	BASE
22	256254-9	1	PIN 3	45	344685-5	1	CLAMP COMPLETE
23	153260-4	1	GEAR COMPLETE	46	266178-1	1	HEX. SOCKET HEAD BOLT
24	313082-6	1	SLIDER GUIDE	47	265995-6	9	TAPPING SCREW 4X18
25	213038-8	2	O RING 5	48	266053-1	1	TAPPING SCREW 4X35
26	257683-9	1	COLLAR SLEEVE	<b>ACCESSORIES</b>			
27	344613-0	1	SLIDER	400	792538-6	1	JIG SAW BLADE B-10
28	232183-0	1	LEAF SPRING	401	783201-2	1	HEX. WRENCH 3