

No. 49-16-2796

Short Shaft Hedge Trimmer Attachment

Serial No. N97A

FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
9	05-78-0033	M5 x 20mm Pan Hd. Torx T-25 B Screw	(10)
10	-----	Guard	(1)
11	05-55-0019	Nut	(6)
12	-----	Clamp, Bottom Guard	(1)
13	-----	Hedge Trimmer Retaining Sleeve	(1)
14	-----	Beveled Internal Ring	(1)
15	-----	Ball Bearing	(2)
16	-----	Spline Coupler	(1)
17	-----	Bevel Pinion	(1)
18	05-78-0024	M5 x 10mm Pan Hd. Torx T-25 B Screw	(1)
19	06-57-0625	M6 Nylon Insert Lock Nut	(1)
20	05-85-0080	M8 x 8mm Hex Hd. Torx T-25 B Screw	(1)
21	05-78-0029	M5 x 8mm Pan Hd. Torx T-25 B Screw	(1)
22	28-20-0108	Cover, Gear Case	(1)
23	-----	Housing, Top Gear Case	(1)
24	-----	Ball Bearing	(1)
25	31-86-0045	Bevel C-Ring	(1)
26	32-05-0042	Bevel Gear	(1)
27	45-06-0108	Felt Seal	(1)
28	36-17-0022	Crank Shaft	(1)
29	-----	Blade	(1)
29e	-----	Tip Guard	(1)
29f	-----	M5 Acorn Nut	(2)
29g	-----	M5 Pan Hd. Screw	(2)
29j	-----	Washer	(2)
29k	-----	Bushing	(2)
30	42-40-0123	Bushing	(2)
31	05-78-0019	M5 x 25mm Pan Hd. Torx T-25 B Screw	(2)
32	43-44-048	Gasket, Gear Case	(1)
33	-----	Ball Bearing	(1)
34	-----	Housing, Bottom Gear Case	(1)
35	49-62-0018	Sheath	(1)
38	12-20-0384	Service Nameplate (Not Shown)	(1)
39	10-22-0274	Warning Label (Not Shown)	(1)
50	45-76-0139	Tube Assembly	(1)
51	43-62-0057	Handguard Assembly	(1)
52	28-14-0071	Gearcase Kit	(1)
53	42-26-0016	Blade Assembly	(1)
54	28-20-0111	Gearcase Cover with Bearing Kit	(1)
55	14-46-6784	Blade Tip Guard Kit	(1)

SCREW TORQUE SPECIFICATIONS				
FIG.	PART NO.	WHERE USED	SEAT TORQUE	
			(kgf-cm)	(lb-in)
9	05-78-0033	Guard (10)	18-24	15-20
9	05-78-0033	Housing, Top (23)	32-38	27-33
9	05-78-0033	Housing, Bottom (34)	27-33	23-28
18	05-78-0024	Housing, Top (23)	27-33	23-28
19	06-57-0625	Housing, Top (23)	21-26	18-22
20	05-85-0080	Cover (22)	26-32	23-27
21	05-78-0029	Cover (22)	21-26	18-22
31	05-78-0019	Housing, Bottom (34)	55-65	48-56

