



SERVICE PARTS LIST

BULLETIN NO.
54-24-3024

SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS		REVISED BULLETIN 54-24-3023	DATE May '84
3/4" ROTARY HAMMER			
CATALOG NO. 5351	STARTING SERIAL NO. 488-53000	WIRING INSTRUCTION 58-01-0182	
CAT. NO. 5351-6	START SER. NO. 488-53000	BILINGUAL LABEL 10-98-6400	

FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.	FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
1	49-96-0080	3/16 Socket Wrench	(1)	43	06-97-4050	1/4 Split Ring Lock Washer	(3)
2	48-86-0050	Drift Pin	(1)	44	45-88-7030	Ram Spring Washer	(1)
3	06-75-2900	1/4-20x3/8 Skt. Hd. Screw	(1)	45	06-97-2600	Internal Tooth Lock Washer	(1)
4	44-94-0140	Depth Gauge Rod	(1)	46	06-81-4700	1/4-20x1/2 Rd. Hd. Screw	(1)
5	43-76-0252	Nose Housing Assembly (Includes Fig. No. 6)	(1)	47	34-60-1600	Retaining Ring	(1)
6	42-40-0421	Nose Housing Bushing	(1)	48	28-14-1312	Gear Case Assembly	(1)
7	43-12-0081	Hex Driver	(1)	49	43-62-0410	Handle	(1)
8	06-77-0625	6x1/4 Rd. Driv-In Screw	(2)	50	38-50-4973	Spindle	(1)
9	45-22-0252	Sleeve Assembly (Includes Fig. No. 8)	(1)	51	02-50-2010	Needle Bearing	(1)
10	02-20-4000	Ball Bearing	(1)	52	36-66-4026	Intermediate Pinion Shaft	(1)
11	30-15-0075	Cam	(1)	53	32-42-1291	Intermediate Gear	(1)
12	34-80-3100	Retaining Ring	(1)	54	02-04-0820	Ball Bearing	(1)
13	49-62-0080	Hammer Dust Shield	(1)	55	34-40-0900	Shift Shaft O-Ring	(2)
14	48-03-3610	Adapter ("A" Taper)	(1)	56	45-08-0101	Shift Shaft	(1)
15	44-40-0301	Sleeve Nut	(1)	57	40-50-1200	Spring	(1)
16	43-46-0130	Depth Gauge Assembly	(1)	58	02-02-0180	3/16 Steel Ball	(1)
17	31-55-0050	Shield	(1)	59	34-60-0525	Shift Shaft Retaining Ring	(1)
18	34-80-2925	Internal Retaining Ring	(1)	60	02-04-0940	Ball Bearing	(1)
19	45-06-0150	Grease Seal	(1)	61	16-30-0110	120 V Armature	(1)
20	34-40-1400	O-Ring	(1)	62	10-98-5987	Caution Label (Not Shown) Omit For Canadian Tools	(1)
21	45-88-7040	Thrust Washer	(1)	63	31-05-0050	Baffle	(1)
22	38-50-5006	Chuck Spindle	(1)	64	06-57-2975	8-32 Flexlock Hex Nut	(2)
23	34-60-2020	Retaining Ring	(1)	65	18-30-0100	120 V Field	(1)
24	30-75-0072	Ram Assembly (Includes Fig. No. 25)	(1)	66	23-16-0456	Field Insulator	(1)
25	42-40-0431	Ram Bushing	(1)	67	31-55-0030	Coil Shield	(1)
26	40-50-7630	Ram Spring	(1)	68	02-04-0891	Ball Bearing	(1)
27	43-76-0211	Ram Housing Assembly (Includes Fig. Nos. 45 & 46)	(1)	69	28-50-6148	Motor Housing	(1)
28	43-44-0260	Gasket	(1)	70	12-99-0050	Nameplate Blank	(1)
29	06-81-7610	12-24x2-3/8 Fil. Hd. Sem	(3)	71	06-85-0200	Nameplate Screw	(2)
30	34-80-3100	Retaining Ring	(1)	★72	06-95-0700	8-32 x 1/2" Pan Hd. Screw	(4)
31	02-08-0750	Ball Bearing	(1)	★73	06-81-0473	8-32 x 1" Pan Hd. Screw	(5)
32	44-60-0370	Shift Pin	(1)	★74	06-55-0835	8-32 Hex Nut	(5)
33	40-50-7610	Shift Pin Spring	(1)	★75	31-44-1380	R.H. Half D Handle	(1)
34	32-75-2681	Spindle Gear	(1)	★76	06-95-5150	6-32 x 1/4" Ground Screw	(1)
35	06-42-0800	Woodruff Key	(2)	★77	44-76-0150	Cord Protector	(1)
36	06-81-3620	8-32x1/2 Oval Hd. Screw	(2)	★78	06-81-1058	Insulated Field Bolt	(2)
37	31-15-0050	Vent Cover	(2)	79	06-95-0215	8-18 x 1/2" Thread Form Screw	(1)
38	02-50-3100	Needle Bearing	(1)	80	23-66-0505	Switch	(1)
39	28-28-1432	Diaphragm (Includes 06-65-0800 Groove Pin)	(1)	★91	22-22-1330	Brush Holder Assembly	(1)
40	40-50-7620	Ram Buffer Disc Spring	(3)	★82	23-44-0190	Brush Retaining Screw	(2)
41	43-76-0221	Buffer Spring Housing	(1)	83	23-52-0160	Brush Spring	(2)
42	06-75-3200	1/4-20x1-1/4 Skt. Hd. Cap Screw	(3)	★84	22-16-0275	Carbon Brush	(2)
				★85	06-95-0075	6-32 x 3/8" Truss Hd. Taptite Screw	(2)
				★86	31-44-1375	L.H. Half D Handle	(1)
				★87	22-64-0155	Cord Set	(1)
				★88	31-17-0156	Cord Clamp (Not Shown)	(1)
				★89	06-95-0216	8-16 x 5/8" Cord Clamp Screws (Not Shown)	(2)

