


RB218

EXPLODED
VIEW AND SPARE PARTS LIST

SCHEMA ECLATE ET LISTE DES
PIECES DE RECHANGE

DESPIECE DE LA MAQUINA Y LISTA
DE RECAMBIOS

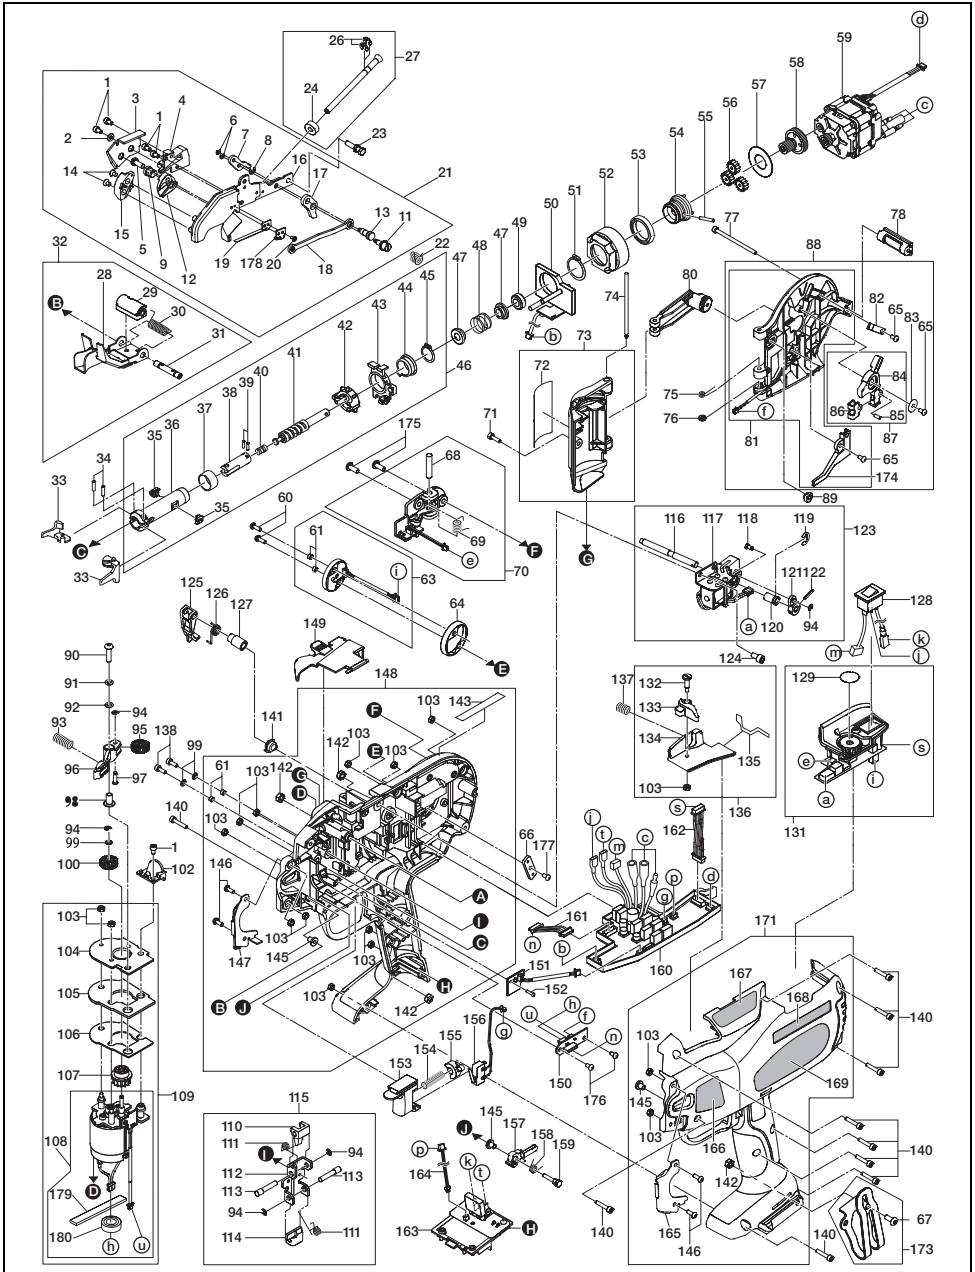

Tool Mod	Part NO	Part Code	Description
RB218	1	BB40481	BOLT 3X5
RB218	2	EE31122	WASHER 3X7
RB218	3	RB12229	ARM B
RB218	4	RB12230	WARE GUIDE B
RB218	5	FF41724	PIN 1724
RB218	6	JJ10109	E-RING 2
RB218	7	RB12090	CUTTER LEVER B
RB218	8	JJ10514	E-RING 3CF, REPLACES JJ10112
RB218	9	RB10379	FIXED CUTTER
RB218	10	FF51686	HOLLOW PIN
RB218	11	RB12710	SHAFT, REPLACES RB10386
RB218	12	RB10378	CUTTER
RB218	13	RB10392	PIN
RB218	14	AA22005	SCREW M2X5
RB218	15	RB10525	WIRE GUIDE A
RB218	16	RB70517	ARM A UNIT
RB218	17	RB12228	CUTTER LEVER A
RB218	18	RB12231	CONNECTING ROD
RB218	19	RB10540	LEAF SPRING
RB218	20	AA25113	PAN-HEAD SCREW 2X4
RB218	21	RB70516	ARM ASSY (RB217)
RB218	22	KK33370	TORSION SPRING, REPLACES KK33250
RB218	23	RB12003	SCREW
RB218	24	RB12007	PIPE SPONGE
RB218	26	JJ10509	E-RING 4CF, REPLACES JJ10101
RB218	27	RB81207	PIPE ASSY (RB217)
RB218	28	RB70511	CURL GUIDE UNIT (217)
RB218	29	RB12010	CURL GUIDE COVER
RB218	30	KK33365	TORSION SPRING
RB218	31	RB11708	STOPPER SHAFT, REPLACES RB10394
RB218	32	RB70510	CURL GUIDE ASSY (RB217)
RB218	33	RB11102	HOOK, REPLACES RB10522
RB218	34	RB81113	WS PIN 2.5x10, REPLACES FF21502
RB218	35	RB12014	KEY B
RB218	36	RB12017	SLEEVE A
RB218	37	RB12016	SLEEVE GUIDE
RB218	38	RB70675	TIP AXIS B
RB218	39	FF31599	PARALELL PIN 1599
RB218	40	KK23730	COMP SPRING 3730
RB218	41	RB12708	TIP AXIS A
RB218	42	RB12015	SLEEVE B
RB218	43	RB70412	CUTTER RING UNIT
RB218	44	RB12091	CUTTER RING GUIDE
RB218	45	JJ21011	C-RING 14
RB218	46	RB81274	TIP AXIS ASSY
RB218	47	RB12020	SPRING COLLAR
RB218	48	KK29026	COMP. SPRING 9026
RB218	49	RB12019	BUMPER
RB218	50	RB81177	TIP AXIS GUIDE ASSY
RB218	51	JJ21603	C-RING 20
RB218	52	RB10338	INTERNAL GEAR

RB218	53	LL11181	WHEEL 6704
RB218	54	RB70676	PLANET CAGE UNIT
RB218	55	FF31589	PIN 1589
RB218	56	RB10341	PLANET GEAR
RB218	57	RB10484	GEAR PRESS WHEEL
RB218	58	RB70418	SUN GEAR UNIT
RB218	59	RB70413	TWISTING MOTOR RS-550VF
RB218	60	AA21419	SCREW 3X8
RB218	61	FF51817	HOLLOW PIN 1817
RB218	63	RB81246	REEL GUIDE ASSY, REPLACES RB81182
RB218	64	RB12284	REEL GUIDE, REPLACES RB11989
RB218	65	AA05555	SCREW 3X6 CF
RB218	66	RB11687	NUT PLATE
RB218	67	BB41706	BOLT 4X10
RB218	68	FF31563	PIN 1563
RB218	69	KK34089	SPRING 4089
RB218	70	RB81181	RATCHET COVER ASSY
RB218	71	BB40715	BOLT 3X12
RB218	72	RB12100	WARNING LABEL A
RB218	73	RB70401	MOTOR COVER ASSY (397CE)
RB218	74	FF41871	STEP PIN 1871
RB218	75	KK34067	TORSION SPRING 4067
RB218	76	EE39609	RUBBER WASHER 1.8X6.2
RB218	77	BB40714	BOLT 3X50, REPLACES BB40515
RB218	78	RB12031	JOINT
RB218	80	RB81178	REEL HOLDER ASSY
RB218	81	RB81179	REEL MAGAZINE
RB218	82	RB12038	REEL STOPPER SPRING
RB218	83	EE39184	PLANE WASHER 3.1X1.8X1
RB218	84	RB12035	REEL STOPPER
RB218	85	FF21240	PIN 2,5X6
RB218	86	RB12036	STOPPER PLATE
RB218	87	RB70427	REEL STOPPER ASSY
RB218	88	RB81180	REEL MAGAZINE ASSY
RB218	89	RB12099	PLATE B
RB218	90	BB41707	BOLT 4X16
RB218	91	EE11103	SPRING WASHER 2-4
RB218	92	EE39825	WASHER 4.5X7.4X0.8
RB218	93	KK24175	COMP. SPRING 4175
RB218	94	JJ10113	E-RING 2.5
RB218	95	RB10359	FEEDING GEAR B2
RB218	96	RB10362	RELEASE LEVER
RB218	97	FF41809	STEP PIN 1809
RB218	98	FF51628	HOLLOW PIN 1628
RB218	99	EE32104	WASHER 2-3
RB218	100	RB10357	FEEDING GEAR B1
RB218	102	RB10364	WIRE GUIE C
RB218	103	CC41104	HEX. NUT 1-3
RB218	104	RB70434	PARTITION PLATE
RB218	105	RB12045	PARTITION SPONGE
RB218	106	RB12421	SPONGE SUPPORT, REPLACES RB12044
RB218	107	RB70509	FEEDING GEAR A ASSY

RB218	108	RB81266	FEEDING MOTOR ASSY, REPLACES RB81174
RB218	109	RB81267	FEEDING ASSY, REPLACES RB81183
RB218	110	RB10368	JAW A
RB218	111	KK33249	TORSION SPRING 3249
RB218	112	RB10370	JAW BASE
RB218	113	FF41822	STEP PIN 1822
RB218	114	RB10369	JAW B
RB218	115	RB70495	JAW BASE ASSY
RB218	116	RB12238	ROTARY PIN, REPLACES RB12026
RB218	117	RB81185	SOLENOID ASSY
RB218	118	FF41855	PIN 1855
RB218	119	JJ10106	E-RING 6
RB218	120	RB12030	PLATE C
RB218	121	RB12029	ROTARY PLATE
RB218	122	FF21620	PIN 2X12
RB218	123	RB70531	BRAKE ASSY, REPLACES RB70494
RB218	124	BB40712	BOLT 4X8
RB218	125	RB12025	REEL PRESS
RB218	126	KK33373	SPRING 3373
RB218	127	FF52114	HOLLOW PIN 2114, REPLACES FF52113
RB218	128	RB70457	MAIN SWITCH UNIT
RB218	129	RB12234	DIAL LABEL
RB218	131	RB81209	SWITCH BASE ASSY (RB217)
RB218	132	RB12054	STEP PIN
RB218	133	RB12053	RELEASE STOPPER
RB218	134	RB12055	STOPPER BASE
RB218	135	RB12056	SPONGE F
RB218	136	RB81139	STOPPER BASE ASSY
RB218	137	KK29133	COMPRESSION SPRING 9133
RB218	138	BB40710	BOLT 3X8
RB218	140	BB40709	BOLT 3X16
RB218	141	RB12236	PLATE A, REPLACES RB11978
RB218	142	CC42512	HEX NUT 1A M4
RB218	143	RB12521	NOTICE LABEL RB398
RB218	145	FF52111	PIN 2111
RB218	146	BB41503	BOLT 3X8
RB218	147	RB12226	COVER (RB217)
RB218	148	RB81270	FRAME L ASSY
RB218	149	RB11987	WINDOW
RB218	150	RB81195	RELAY BOARD UNIT
RB218	151	RB81191	SENSOR CIRCUIT D BOARD UNIT
RB218	152	AA31724	SCREW 2X8
RB218	153	RB12080	TRIGGER
RB218	154	KK23656	COMPRESSION SPRING 3656
RB218	155	RB12101	TRIGGER LOCK LEVER
RB218	156	RB70453	TRIGGER SWITCH UNIT
RB218	157	RB70473	SWITCH LEVER UNIT
RB218	158	KK34083	SPRING 4083
RB218	159	RB11686	SWITCH LEVER PIN
RB218	160	RB70522	MAIN CIRCUIT BOARD UNIT (RB217)
RB218	161	RB70465	REPLAY BOARD HARNESS UNIT
RB218	162	RB70454	INTERFACE HARNESS UNIT

RB218	163	RB81188	ELECTRODE UNIT
RB218	164	RB70464	BATTERY SIGNAL HARNESS UNIT
RB218	165	RB12224	COVER R (RB217)
RB218	166	RB11983	LABEL CURL GUIDE
RB218	167	RB11985	USAGE LABEL
RB218	168	RB12237	LABEL, MAIN SWITCH
RB218	169	RB12524	NAME LABEL
RB218	171	RB70599	FRAME R ASSY
RB218	173	RB81184	BELT HOOK ASSY
RB218	174	RB12039	LED COVER
RB218	175	BB41708	BOLT 4X10
RB218	176	AA31722	SCREW 3X8
RB218	177	AA31721	SCREW 3X6, REPLACES AA31504
RB218	178	RB11141	REAF SPRING GUIDE
RB218	179	RB12423	RING CORE SPONGE
RB218	180	RB81268	RING CORE UNIT
RB218	999	PJ70345	LATCH ASSY