


RB398

EXPLODED
VIEW AND SPARE PARTS LIST

SCHEMA ECLATE ET LISTE DES
PIECES DE RECHANGE

DESPIECE DE LA MAQUINA Y LISTA
DE RECAMBIOS

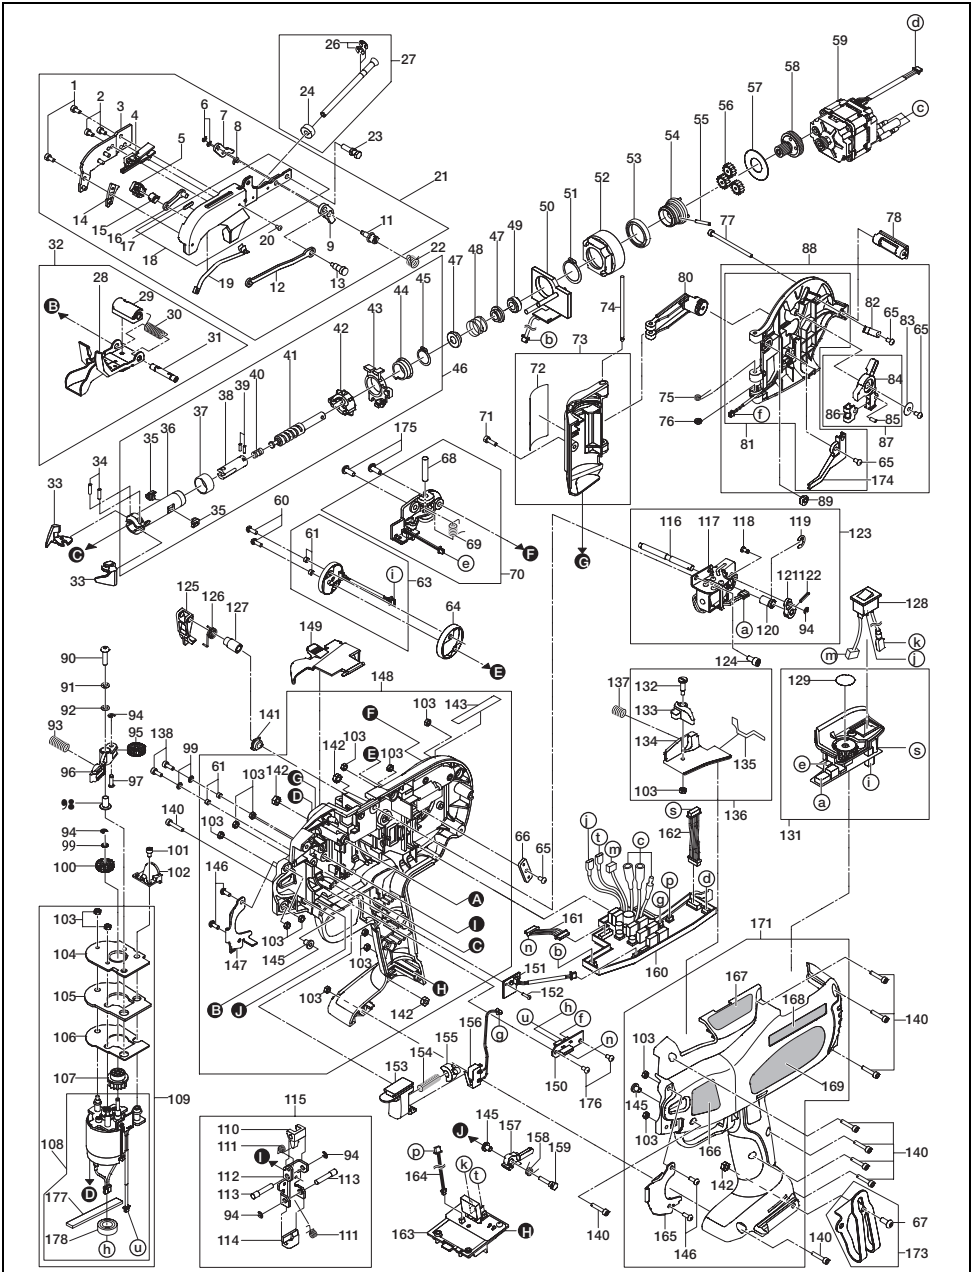

Tool Mod	Part NO	Part Code	Description
RB398	1	BB40112	BOLT 3X6
RB398	2	BB86701	TORX BOLT 3X5
RB398	3	RB70404	ARM B UNIT
RB398	4	RB11999	WIRE GUIDE B
RB398	5	RB12000	CUTTER
RB398	6	JJ10109	E-RING 2
RB398	7	RB12090	CUTTER LEVER B
RB398	8	JJ10514	E-RING 3CF, REPLACES JJ10112
RB398	9	RB12005	CUTTER LEVER A
RB398	11	RB12710	SHAFT, REPLACES RB10386
RB398	12	RB12004	CONNECTING ROD
RB398	13	RB10392	PIN
RB398	14	RB11998	WIRE GUIDE A
RB398	15	RB12121	FIXED CUTTER, REPLACES RB12001
RB398	16	RB70493	CUTTER PLATE UNIT
RB398	17	RB12085	PLATE
RB398	18	RB81175	ARM A UNIT
RB398	19	RB11997	LEAF SPRING
RB398	20	AA25113	PAN-HEAD SCREW 2X4
RB398	21	RB70402	ARM ASSY
RB398	22	KK33370	TORSION SPRING, REPLACES KK33250
RB398	23	RB12003	SCREW
RB398	24	RB12007	PIPE SPONGE
RB398	26	JJ10509	E-RING 4CF, REPLACES JJ10101
RB398	27	RB81136	PIPE ASSY
RB398	28	RB70565	CURL GUIDE UNIT
RB398	29	RB12010	CURL GUIDE COVER
RB398	30	KK33365	TORSION SPRING
RB398	31	RB11708	STOPPER SHAFT, REPLACES RB10394
RB398	32	RB70567	CURL GUIDE ASSY
RB398	33	RB11816	HOOK
RB398	34	RB81113	WS PIN 2.5x10, REPLACES FF21502
RB398	35	RB12014	KEY B
RB398	36	RB12017	SLEEVE A
RB398	37	RB12016	SLEEVE GUIDE
RB398	38	RB70675	TIP AXIS B
RB398	39	FF31599	PARALELL PIN 1599
RB398	40	KK23730	COMP SPRING 3730
RB398	41	RB12708	TIP AXIS A
RB398	42	RB12015	SLEEVE B
RB398	43	RB70412	CUTTER RING UNIT
RB398	44	RB12091	CUTTER RING GUIDE
RB398	45	JJ21011	C-RING 14
RB398	46	RB81274	TIP AXIS ASSY
RB398	47	RB12020	SPRING COLLAR
RB398	48	KK29026	COMP. SPRING 9026
RB398	49	RB12019	BUMPER
RB398	50	RB81177	TIP AXIS GUIDE ASSY
RB398	51	JJ21603	C-RING 20
RB398	52	RB10338	INTERNAL GEAR
RB398	53	LL11181	WHEEL 6704

RB398	54	RB70676	PLANET CAGE UNIT
RB398	55	FF31589	PIN 1589
RB398	56	RB10341	PLANET GEAR
RB398	57	RB10484	GEAR PRESS WHEEL
RB398	58	RB70418	SUN GEAR UNIT
RB398	59	RB70413	TWISTING MOTOR RS-550VF
RB398	60	AA21419	SCREW 3X8
RB398	61	FF51817	HOLLOW PIN 1817
RB398	63	RB81246	REEL GUIDE ASSY, REPLACES RB81182
RB398	64	RB12284	REEL GUIDE, REPLACES RB11989
RB398	65	AA05555	SCREW 3X6 CF
RB398	66	RB11687	NUT PLATE
RB398	67	BB41706	BOLT 4X10
RB398	68	FF31563	PIN 1563
RB398	69	KK34089	SPRING 4089
RB398	70	RB81181	RATCHET COVER ASSY
RB398	71	BB40715	BOLT 3X12
RB398	72	RB10421	LABEL FCC
RB398	73	RB70476	MOTOR COVER ASSY
RB398	74	FF41871	STEP PIN 1871
RB398	75	KK34067	TORSION SPRING 4067
RB398	76	EE39609	RUBBER WASHER 1.8X6.2
RB398	77	BB40714	BOLT 3X50, REPLACES BB40515
RB398	78	RB12031	JOINT
RB398	80	RB81178	REEL HOLDER ASSY
RB398	81	RB81179	REEL MAGAZINE
RB398	82	RB12038	REEL STOPPER SPRING
RB398	83	EE39184	PLANE WASHER 3.1X11.8X1
RB398	84	RB12035	REEL STOPPER
RB398	85	FF21240	PIN 2,5X6
RB398	86	RB12036	STOPPER PLATE
RB398	87	RB70427	REEL STOPPER ASSY
RB398	88	RB81180	REEL MAGAZINE ASSY
RB398	89	RB12099	PLATE B
RB398	90	BB41707	BOLT 4X16
RB398	91	EE11103	SPRING WASHER 2-4
RB398	92	EE39825	WASHER 4.5X7.4X0.8
RB398	93	KK24175	COMP. SPRING 4175
RB398	94	JJ10113	E-RING 2.5
RB398	95	RB10359	FEEDING GEAR B2
RB398	96	RB10362	RELEASE LEVER
RB398	97	FF41809	STEP PIN 1809
RB398	98	FF51628	HOLLOW PIN 1628
RB398	99	EE32104	WASHER 2-3
RB398	100	RB10357	FEEDING GEAR B1
RB398	101	BB40481	BOLT 3X5
RB398	102	RB10364	WIRE GUIDE C
RB398	103	CC41104	HEX. NUT 1-3
RB398	104	RB70434	PARTITION PLATE
RB398	105	RB12045	PARTITION SPONGE
RB398	106	RB12421	SPONGE SUPPORT, REPLACES RB12044
RB398	107	RB70509	FEEDING GEAR A ASSY

RB398	108	RB81266	FEEDING MOTOR ASSY, REPLACES RB81174
RB398	109	RB81267	FEEDING ASSY, REPLACES RB81183
RB398	110	RB10368	JAW A
RB398	111	KK33249	TORSION SPRING 3249
RB398	112	RB10370	JAW BASE
RB398	113	FF41822	STEP PIN 1822
RB398	114	RB10369	JAW B
RB398	115	RB70495	JAW BASE ASSY
RB398	116	RB12238	ROTARY PIN, REPLACES RB12026
RB398	117	RB81185	SOLENOID ASSY
RB398	118	FF41855	PIN 1855
RB398	119	JJ10106	E-RING 6
RB398	120	RB12030	PLATE C
RB398	121	RB12029	ROTARY PLATE
RB398	122	FF21620	PIN 2X12
RB398	123	RB70531	BRAKE ASSY, REPLACES RB70494
RB398	124	BB40712	BOLT 4X8
RB398	125	RB12025	REEL PRESS
RB398	126	KK33373	SPRING 3373
RB398	127	FF52114	HOLLOW PIN 2114, REPLACES FF52113
RB398	128	RB70457	MAIN SWITCH UNIT
RB398	129	RB12078	LABEL, TORQUE DIAL
RB398	131	RB81186	SWITCH BASE ASSY
RB398	132	RB12054	STEP PIN
RB398	133	RB12053	RELEASE STOPPER
RB398	134	RB12055	STOPPER BASE
RB398	135	RB12056	SPONGE F
RB398	136	RB81139	STOPPER BASE ASSY
RB398	137	KK29133	COMPRESSION SPRING 9133
RB398	138	BB40710	BOLT 3X8
RB398	140	BB40709	BOLT 3X16
RB398	141	RB12236	PLATE A, REPLACES RB11978
RB398	142	CC42512	HEX NUT 1A M4
RB398	143	RB12521	NOTICE LABEL RB398
RB398	145	FF52111	PIN 2111
RB398	146	BB41503	BOLT 3X8
RB398	147	RB11979	COVER L
RB398	148	RB81271	FRAME L ASSY RB398
RB398	149	RB11987	WINDOW
RB398	150	RB81195	RELAY BOARD UNIT
RB398	151	RB81191	SENSOR CIRCUIT D BOARD UNIT
RB398	152	AA31724	SCREW 2X8
RB398	153	RB12080	TRIGGER
RB398	154	KK23656	COMPRESSION SPRING 3656
RB398	155	RB12101	TRIGGER LOCK LEVER
RB398	156	RB70453	TRIGGER SWITCH UNIT
RB398	157	RB70566	SWITCH LEVER UNIT
RB398	158	KK34083	SPRING 4083
RB398	159	RB11686	SWITCH LEVER PIN
RB398	160	RB70605	MAIN CIRCUIT BOARD UNIT (RB398)
RB398	161	RB70465	REPLAY BOARD HARNESS UNIT
RB398	162	RB70454	INTERFACE HARNESS UNIT

RB398	163	RB81188	ELECTRODE UNIT
RB398	164	RB70464	BATTERY SIGNAL HARNESS UNIT
RB398	165	RB11981	COVER R
RB398	166	RB11983	LABEL CURL GUIDE
RB398	167	RB11985	USAGE LABEL
RB398	168	RB11982	LABEL, MAIN SWITCH
RB398	169	RB12536	LABEL
RB398	171	RB70592	FRAME R ASSY RB398
RB398	173	RB81184	BELT HOOK ASSY
RB398	174	RB12039	LED COVER
RB398	175	BB41708	BOLT 4X10
RB398	176	AA31722	SCREW 3X8
RB398	177	RB12423	RING CORE SPONGE
RB398	178	RB81268	RING CORE UNIT
RB398	999	PJ70345	LATCH ASSY