

Parts List for 6614 Type 1

Item Number	Part Number	Description	Qty Required
1	887753	ARMATURE	1
1	876466	ARMATURE	1
1	811350	BAFFLE	1
1	811531	FAN	1
2	886949	FIELD 230V	1
2	876479	FIELD	1
3	N119739	BRUSH & SPRING	2
3	694301	BRUSH HOLDER	2
3	694298	BRUSH INSULATOR	2
4	885315	SWITCH 230V	1
4	888146	SWITCH VSR	1
4	875868	BUTTON-FWD/REV	1
5	891461	CORD & PLUG	1
5	695854	CORDSET	1
11	802214	WASHER-LCK INT	10
11	855284	BEARING	3
13	330004-00	BEARING,NEEDLE	3
19	000000-00	No Longer Available	3
19	330004-00	BEARING,NEEDLE	3
32	D697680	GEAR ASSY	1
32	000000-00	No Longer Available	1
38	D697725	SPINDLE & GEAR ASSY.	1
52	876677	MOTOR HSG PKG	1
53	000000-00	No Longer Available	1
53	697684SV	INTERMEDIATE PLATE	1
57	000000-00	No Longer Available	1
57	876612	HANDLE SET	1

Parts List for 6614 Type 1

Item Number	Part Number	Description	Qty Required
83	865344	CHUCK	1
92	875134	CHUCK KEY	1
100	810716	RELIEVER	1
101	842323	WRENCH HOLDER	1
102	861434	CORD CLAMP	1
103	882703	SCREW	10
104	900826	SCREW	10
105	866340	SCREW	10
106	864137	SCREW	10
107	000000-00	No Longer Available	1
108	864136	SCREW	10
109	694432	BEARING MOUNT	3
110	847564	SNAP RING	1
112	876651	SCREW	10
114	852714	SLINGER	1
115	848741	WASHER	10
116	698609	GASKET	1
117	802648	WASHER	10
118	694015	SCREW	10
119	859382	RING	10
120	000000-00	No Longer Available	10
121	000000-00	No Longer Available	10
122	875861	BELT CLIP	1
123	800740	SCREW	10
124	875862	NUT	10
125	849328	SPACER	10
126	886582	WASHER-INSULATOR 230	10

Parts List for 6614 Type 1

Item Number	Part Number	Description	Qty Required
127	886627	RING-RTNG 230V	10
128	886620	INSULATOR 230V	1
129	000000-00	No Longer Available	1
130	000000-00	No Longer Available	1
131	000000-00	No Longer Available	1
132	000000-00	No Longer Available	1
133	878499	TUBE GREASE	1
134	879751	LUBRICANT 4 LBS	1