

Parts

Ordering Replacement Parts

To order parts or reach our service department, call 1-800-274-6848 Monday through Friday (see our website for business hours, www.waltermeier.com). Having the Model Number and Serial Number of your machine available when you call will allow us to serve you quickly and accurately.

Parts List

Note: Parts without part numbers are for reference only and cannot be purchased individually.

Index No.	Part No.	Description	Size	Qty
1	JMS10SCMS-1	Shaft Sleeve		1
2	JMS10SCMS-2	Knob		1
3	JMS10SCMS-3	Locator Pin		1
4	JMS10SCMS-4	Label: Miter Quick Lock		1
5	JMS10SCMS-5	Compression Spring		1
6	JMS10SCMS-6	Cushion		2
7		Lock Screw		2
8	JMS10SCMS-8	Nut		1
9		Link		1
10	JMS10SCMS-10	Cord Clamp		1
11	JMS10SCMS-11	Warning Label		1
12	JMS10SCMS-12	Compression Spring		1
13	JMS10SCMS-13	Bumper		1
14	JMS10SCMS-14	Knob		1
15	JMS10SCMS-15	Collar		1
16	JMS10SCMS-16	Guard Spring		1
17	JMS10SCMS-17	Center Bolt		1
18	JMS10SCMS-18	Arbor Collar		2
19	JMS10SCMS-19	Blade Wrench		1
20	JMS12SCMS-27	Power Cord Clamp		1
21	JMS10SCMS-21	Pin		1
23		Ball Bearing	6003LLU	1
24		Ball Bearing	607ZZ	1
25		Ball Bearing	608ZZ	1
26		Ball Bearing	6001ZZ	1
27	TS-1550031	Flat Washer	M5	1
28	TS-1550041	Flat Washer	M6	2
29	TS-155010	Flat Washer	M16	2
30	TS-1550041	Flat Washer	M6	2
31	JMS10SCMS-31	Flat Washer	8x16x2.5	1
32	JMS10SCMS-32	Flat Washer	1/4x7/16x1/16	4
33	JMS10SCMS-33	Flat Washer	1/4x1/2x3/32	1
34	JMS10SCMS-34	Flat Washer	1/4x5/8x3/32	1
35	TS-0680041	Flat Washer	3/8	1
36	JMS10SCMS-36	External Tooth Lock Washer	M5	2
37	JMS10SCMS-37	Wave Washer	WW-8	2
38		Spring Pin	.05x16	4
39		Spring Pin	.02.5x8	2
40		C-Ring	A-12	1
41	JMS10SCMS-41	E-Clip	E-6	1
42	JMS10SCMS-42	O-Ring	P10	1
43	JMS10SCMS-43	O-Ring	P7	1
45	TS-1482051	Hex Cap Screw	M6x25	2
46	TS-1490081	Hex Cap Screw	M8x45	1
47	TS-1503041	Socket Head Cap Screw	M6x16	3

Parts List

Index No.	Part No.	Description	Size	Qty
48	TS-1504031	Socket Head Cap Screw.....	M8x16	1
49	TS-1504061	Socket Head Cap Screw.....	M8x30	2
50	TS-1504121	Socket Head Cap Screw.....	M8x60	1
52	TS-1524041	Socket Set Screw	M8x16	1
53	TS-1523031	Socket Set Screw	M6x10	2
54	JMS10SCMS-54	Arbor Bolt	1
55	JMS10SCMS-55	Socket Head Cap Screw with Lock Washer	M6x16	1
56	JMS10SCMS-56	Socket Head Cap Screw with Washer.....	M8x25	4
57	JMS10SCMS-57	Hex Socket Truss Head Screw w/Lock Washer...	M6x16	4
58	TS-1534051	Flat Head Screw.....	M6x16	1
59	JMS10SCMS-59	Truss Head Screw	M5x8	2
60	JMS10SCMS-60	Truss Head Screw	M6x8	4
61	JMS10SCMS-61	Round Washer Head Screw.....	M5x12	1
62	JMS10SCMS-62	Truss Head Round Neck Screw.....	M6x18	1
63	JMS10SCMS-63	Truss Head Round Neck Screw.....	M6x10	2
64	JMS10SCMS-64	Truss Head Round Neck Screw.....	M6x14	1
65	JMS10SCMS-65	Pan Head Tapping Screw.....	M3-24x10	2
66	TS-2284082	Pan Head Screw	M4x8	7
67	JMS10SCMS-72	Pan Head Screw	M5x8	2
68	JMS10SCMS-68	Pan Head Tapping Screw	M5-16x25	1
69	JMS10SCMS-69	Pan Head Tapping Screw	M4-18x25	5
70	JMS10SCMS-70	Truss Head Tapping Screw	M4-16x12	1
71	TS-1532052	Pan Head Screw	M4x16	4
72	JMS10SCMS-72	Pan Head Screw	M5x8	3
73	TS-1533062	Pan Head Screw	M5x20	1
74	Pan Head Screw	M5x10	4
75	JMS10SCMS-75	Pan Head Screw	M6x8	2
76	TS-1534052	Pan Head Screw	M6x16	3
77	JMS10SCMS-77	Pan Head Round Neck Screw	M4x7.5	2
78	JMS10SCMS-78	Pan Head Round Neck Screw	M6x12	1
79	Rivet.....	Ø4x6.35	5
81	TS-1541011	Nylon Insert Lock Nut	M5	1
82	TS-1541021	Nylon Insert Lock Nut	M6	4
83	TS-1541031	Nylon Insert Lock Nut	M8	2
84	TS-2342161	Nylon Insert Lock Nut	M16	1
85	JMS10SCMS-85	Strain Relief.....	1
86	JMS10SCMS-86	Cable Clamp	1/2"	2
88	JMS10SCMS-88	Terminal	2
89	TS-1541041	Nylon Insert Lock Nut	M10	1
90	JMS10SCMS-90	Dust Bag	1
91	TS-1540041	Hex Nut	M6	2
92	JMS10SCMS-92	Washer.....	M8x23x1.5	1
93	JMS10SCMS-93	Label: Rotation	1
94	Pin.....	Ø5x16	2
95	JMS10SCMS-95	Knob	2
96	JMS10SCMS-96	Stop Screw.....	1
97	JMS10SCMS-97	Bevel Lock Handle.....	1
98	JMS10SCMS-98	Pointer.....	1
99	JMS10SCMS-99	Disc	1
100	JMS10SCMS-100	Anchor Plate.....	1
101	JMS10SCMS-101	Pulley	1
102	JMS10SCMS-102	Power Cord	1
103	JMS10SCMS-103	Warning Label: Avoid Exposure	1
104	JMS10SCMS-104	Bushing	1
105	JMS10SCMS-105	Locking Rod	1


Parts List

Index No.	Part No.	Description	Size	Qty
106		Slide Bar, Right		1
107		Slide Bar, Left		1
108	JMS10SCMS-108	Pivot Shaft		1
109	JMS10SCMS-109	Label: Bevel Lock		1
110	JMS10SCMS-110	Table Insert, Right		1
111	JMS10SCMS-111	Table Insert, Left		1
112		Collar		1
113		Shaft		1
114	JMS10SCMS-114	Set Nut		1
115	JMS10SCMS-115	Screw Stop		1
116	JMS10SCMS-116	Lock Knob		1
117	JMS10SCMS-117	Lock Knob		1
118	JMS10SCMS-118	Anchor Plate		1
119	JMS10SCMS-119	Compression Spring		1
120	JMS10SCMS-120	Pin	Ø4x22	1
121	JMS10SCMS-121	Compression Spring		1
122	TS-1523051	Socket Set Screw	M6x16	2
124	JMS10SCMS-124	SHCS with Lock Washer & Flat Washer	M5x12	4
125		Helix Gear		1
126	JMS10SCMS-126	Base		1
127	JMS10SCMS-127	Fence		1
128	JMS10SCMS-128	Fence Extension, Left		1
129	JMS10SCMS-129	Fence Extension, Right		1
130	JMS10SCMS-130	Slide Plate		3
131		Lock Handle		1
132	JMS10SCMS-132	Table		1
133	JMS10SCMS-133	Pointer, Left		1
134	JMS10SCMS-134	Pointer, Right		1
136	JMS10SCMS-136	Handle		1
137		Pivot Support		1
138		Rear Slide Bar Seat		1
139		Arbor		1
140		Bracing Plate		1
141	JMS10SCMS-141	Guard Plate		1
142		Blade Guard		1
143	JMS10SCMS-143	Gear Box Cover		1
144	JMS10SCMS-144	Lever		1
145	JMS10SCMS-145	Saw Arm		1
146	TS-1482031	Hex Cap Screw	M6x16	1
147	JMS10SCMS-147	SHCS with Lock Washer & Flat Washer	M5x40	1
148	JMS10SCMS-148	Upper Handle Segment		1
149	JMS10SCMS-149	Lower Handle Segment		1
150	JMS10SCMS-150	Collar		1
151	JMS10SCMS-151	Plate		2
152		Gear Shaft		1
153	JMS10SCMS-153	Torsion Spring		1
154		Bearing Protector		1
155	JMS10SCMS-155	Washer		4
156	JMS10SCMS-156	V-Ribbed Belt	195J8	1
157	JMS10SCMS-157	Pivot Shaft		1
158	JMS10SCMS-158	Locating Bar		1
159	JMS10SCMS-159	Linear Motion Bearing	LM30LLU	1
160	JMS10SCMS-160	Blade Guard Assembly		1
161	JMS10SCMS-161	Locking Handle Assembly		1
162	JMS10SCMS-162	Slotted Set Screw	M6x8	4
163	JMS10SCMS-163	Gasket		1


Parts List

Index No.	Part No.	Description	Size	Qty
164	JMS10SCMS-164	Compression Spring		1
165	JMS10SCMS-165	Truss Head Screw	M3x12	1
166		Key	4x4x8	1
167	JMS10SCMS-167	Gear Shaft Assembly		1
168	JMS10SCMS-168	Arbor Assembly		1
169	JMS10SCMS-169	Base Rear Extension		1
170	JMS10SCMS-170	Rocker Switch		1
171	JMS10SCMS-171	Warning Label		1
172	JMS10SCMS-172	Label: Do Not Remove		2
173	JMS10SCMS-173	Insulator		1
174	JMS10SCMS-174	Rivet		2
175	JMS10SCMS-175	Locking Knob		1
176	JMS10SCMS-176	Upper Handle		1
177	JMS10SCMS-177	Lower Handle		1
178	JMS10SCMS-178	Laser Housing		1
179	JMS10SCMS-179	Slide Bar Guard		1
180	JMS10SCMS-180	Pulley Cover		1
181	JMS10SCMS-181	Locking Handle Assembly		1
182	JMS10SCMS-182	Release Lever		1
183	JMS10SCMS-183	Clear Panel		1
184	JMS10SCMS-184	Locking Handle Assembly		2
185		Lock Handle		2
186	JMS10SCMS-186	Guard Plate		2
187	JMS10SCMS-187	Green Laser Controller Assembly		1
188	JMS10SCMS-188	Green Laser		1
190	JMS10SCMS-190	Slide Bar Assembly		1
191	JMS10SCMS-191	Motor		1
	JMS10SCMS-191MB	Motor Brush (not shown)		2
	JMS10SCMS-191MBC	Motor Brush Cover (not shown)		2
192	JMS10SCMS-192	Saw Blade	10"x40Tx5/8" Arbor	1
193	JMS10SCMS-193	Guard		1
194	JMS10SCMS-194	Clamp Hold Down Assembly		1
195	JMS10SCMS-195	Lead Wire		1
196	JMS10SCMS-196	Laser Housing Bracket		1
198	JMS10SCMS-198	Label: Laser Caution		1
199	JMS10SCMS-199	JET Label for Pulley Cover		1
200	JMS10SCMS-200	Label: Laser On/Off		1
201	JMS10SCMS-201	JET Label for Slide Bar Guard		1
202	JMS10SCMS-202	JET Label		1
203	JMS10SCMS-203	ID Label		1
204	JMS10SCMS-204	JET Label for Handle		1
205	JMS10SCMS-205	Bevel Angle Scale		1
206	TS-0680041	Flat Washer	3/8	1
207	JMS10SCMS-207	Special Bolt		1
208	JMS10SCMS-208	Trigger Switch		1
209	JMS10SCMS-209	Miter Angle Scale		1
210	JMS10SCMS-210	Cable Clamp	1/8"	1
211	JBTS10MJS-70	Pan Head Tapping Screw	M3-24x6	1
212	JMS10SCMS-212	O-Ring	30x3.5	2
213	TS-1502051	Socket Head Cap Screw	M5x20	4
214	JMS10SCMS-214	Cover Plate		1
215	JMS10SCMS-215	Cover Plate		1
216	JMS10SCMS-216	Slide/Bevel Arm		1
217	JMS10SCMS-217	Collar		1
218	JMS10SCMS-218	Linear Motion Bearing	LM30SUU	1


Assembly Drawing

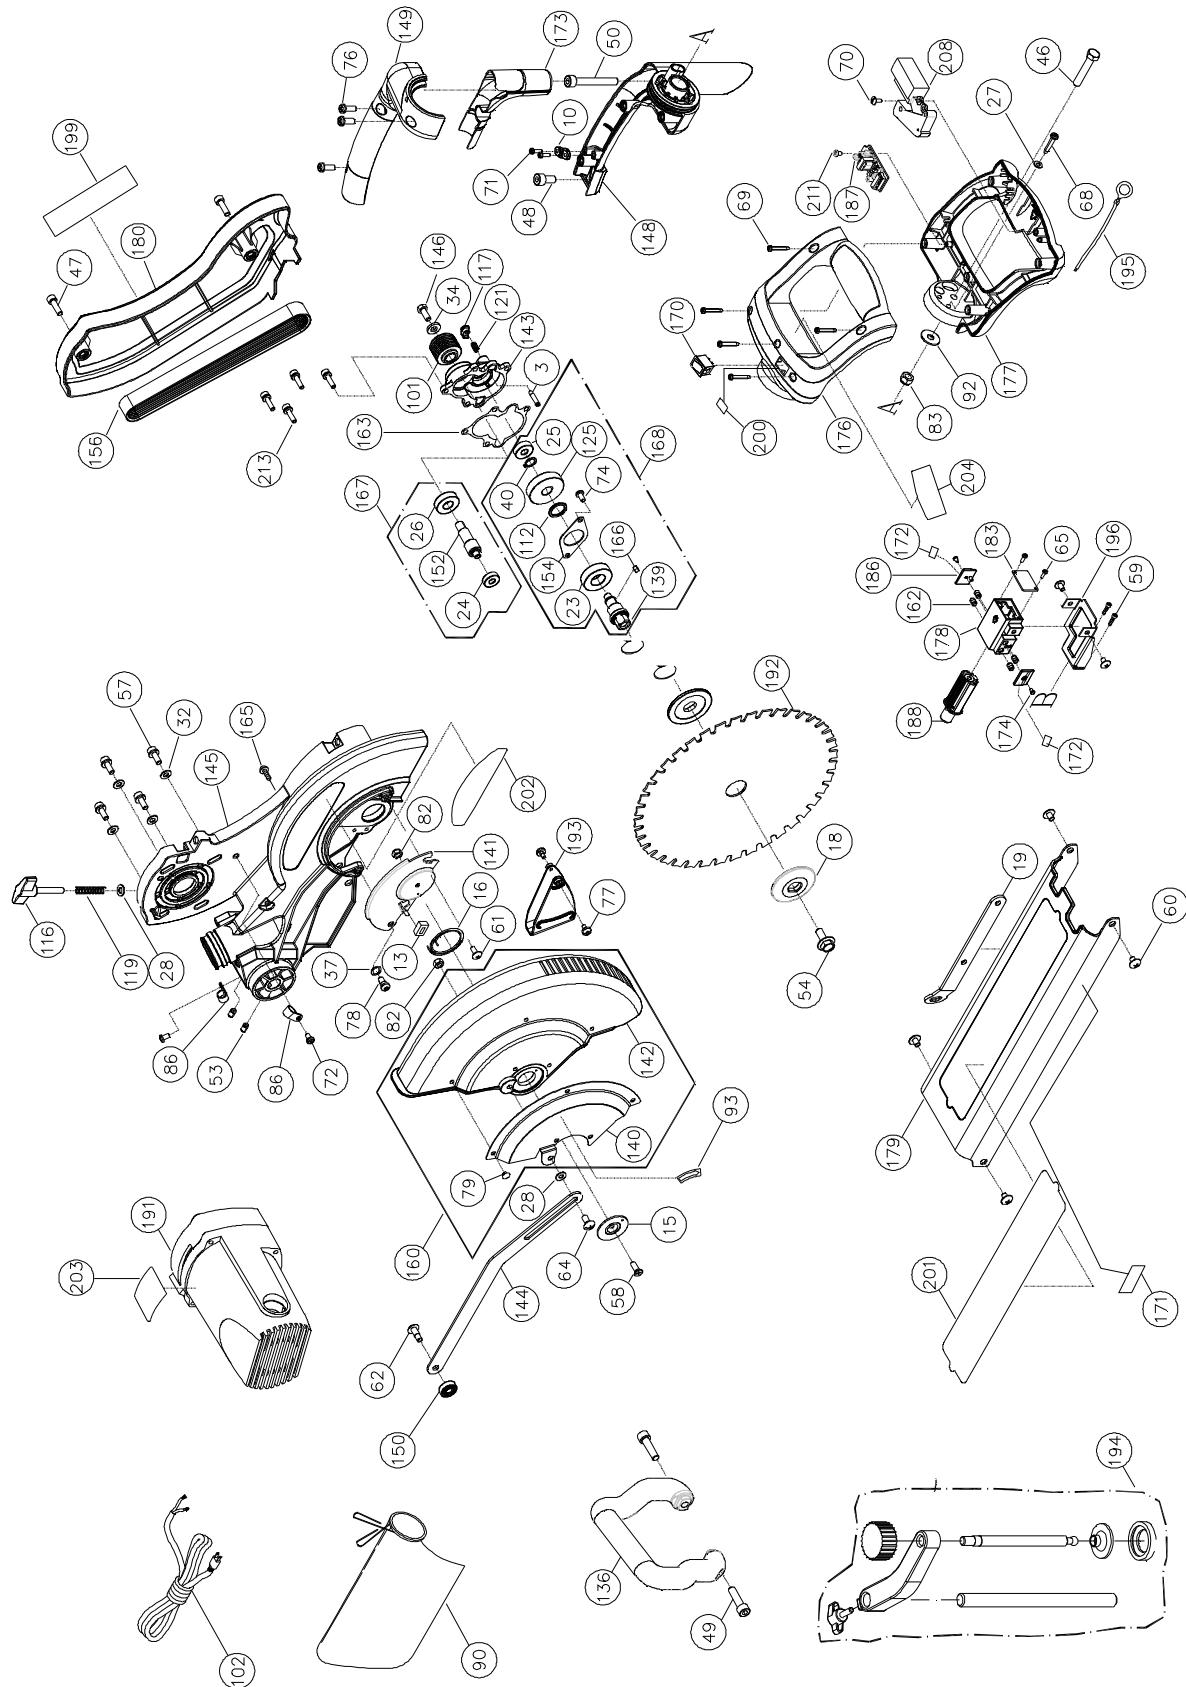


Assembly Drawing

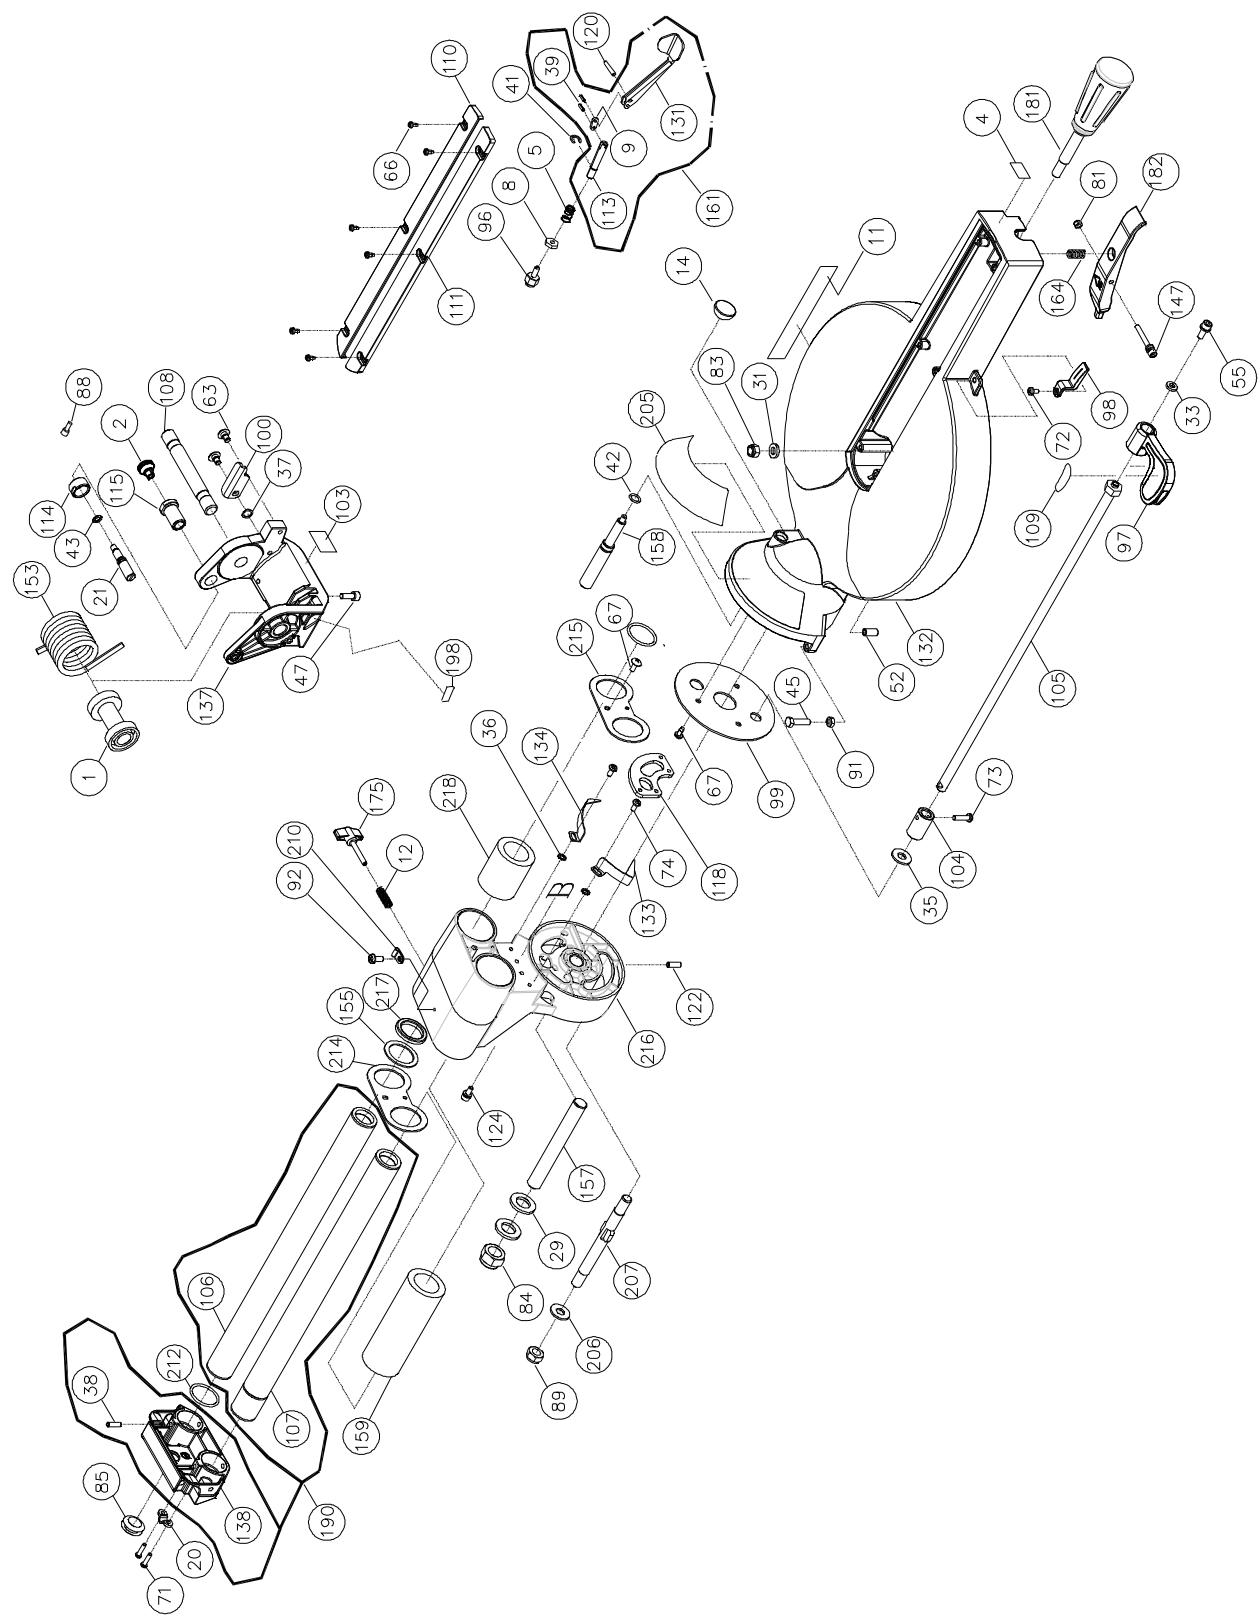

Assembly Drawing

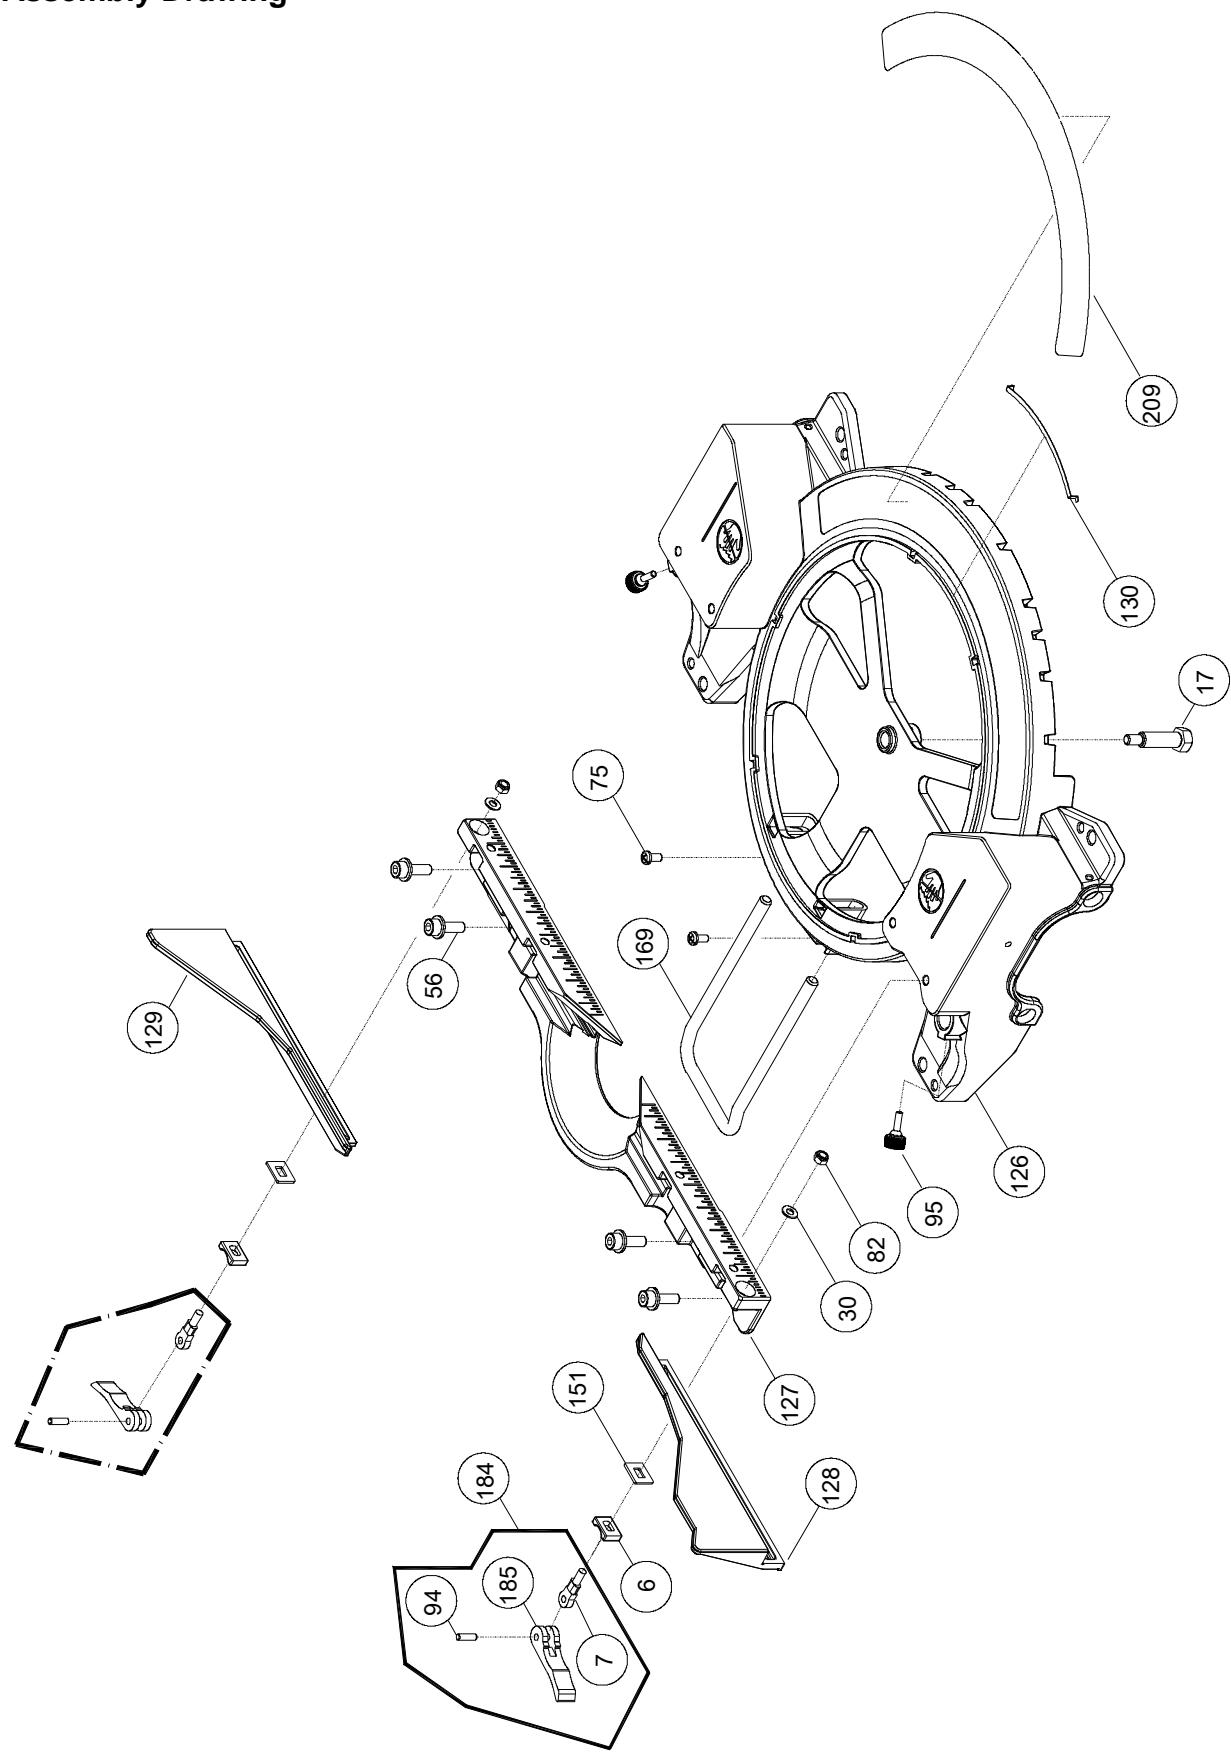

Wiring Diagram

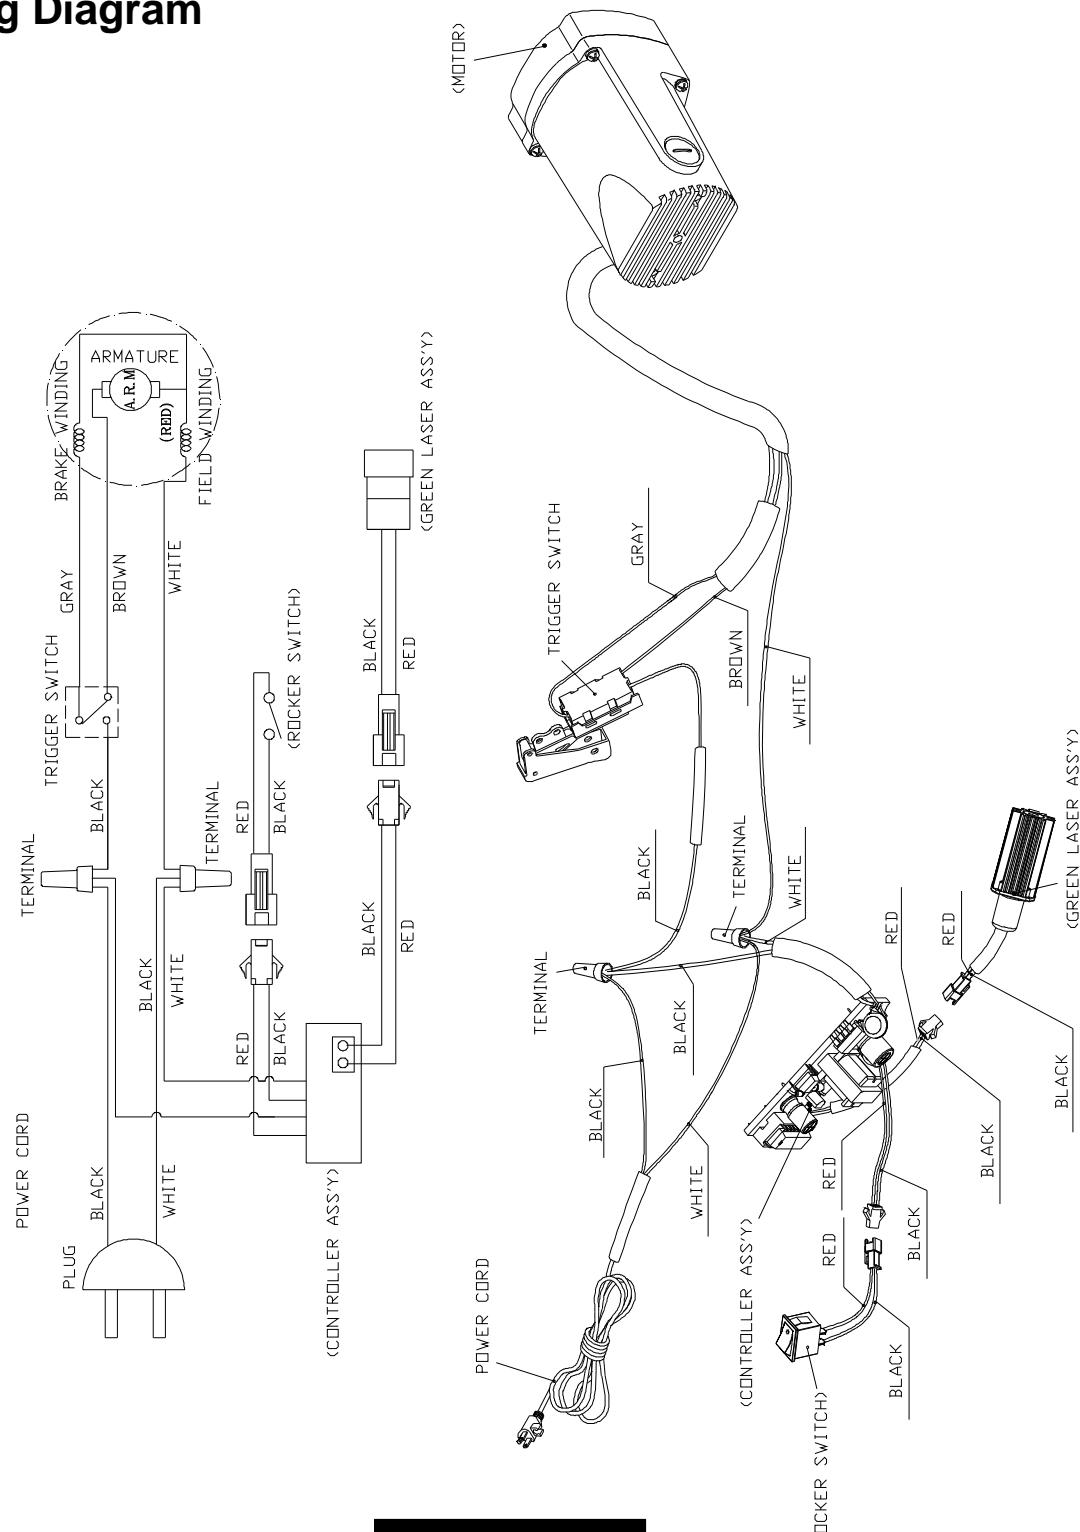

JET
®

WALTER MEIER (Manufacturing) Inc.

427 New Sanford Road
LaVergne, Tennessee 37086
Phone: 800-274-6848
www.waltermeier.com