



# Operating Instructions and Parts Manual

## JWL-1442VS Wood Lathe




**JET**

427 New Sanford Road  
LaVergne, Tennessee 37086  
Ph.: 800-274-6848  
[www.jettools.com](http://www.jettools.com)

**Part No. M-708358**  
Revision D2 06/2014  
Copyright © 2014 JET

## Bed Assembly Parts List

Index No.	Part No.	Description	Size	Qty
1.....	JWL1442-201	Bed .....		1
2.....	JWL1442-202	Stud .....		3
3.....	JWL1442-124	C-Ring.....	S19 .....	3
4.....	6295703	Hex Socket Cap Screw.....	10-24 x 5/8"	4
5.....	JWL1442-205	Tool Rest.....		1
6.....	JWL1442-206	Tool Support Handle.....		1
7.....	JWL1442-207	Tool Support Base.....		1
8.....	JWL1442-208	End Cover .....		1
9.....	JWL1442-128	Bolt.....		2
10.....	JWL1442-210A	Tool Support Rod .....		1
11.....	JWL1442-211	Handle.....		1
12.....	JWL1442-212	Handwheel .....		1
13.....	JWL1442-213	Tailstock.....		1
14.....	JWL1442-214	Lead Screw .....		1
15.....	JWL1442-215	Quill.....		1
16.....	JWL1442-216	Live Center.....		1
17.....	JWL1442-217	Tailstock Rod.....		1
18.....	JWL1442-218	Tailstock Quill Handle.....		1
19.....	JWL1442-219	JET Label.....		1
20.....	TS-0267021	Set Screw.....	1/4"-20 x 1/4"	2
21.....	JWL1442-127	Bushing .....		1
22.....	JWL1442-126	Key.....	5 x 5 x 30 .....	1
23.....	JWL1442-154	Clamp.....		2
24.....	TS-0561081	Hex Nut.....	3/4"-10.....	2
26.....	JWL1442-226	Extension Tool Rest .....		1
27.....	JWL1442-227	Locking Handle.....		1
28.....	JWL1442-228	C-Ring.....	S25 .....	1
	JWL1442-TCA	Tailstock Complete Assembly (not shown) .....		1
	JWL1442-TRCA	Tool Rest Complete Assembly (not shown) .....		1

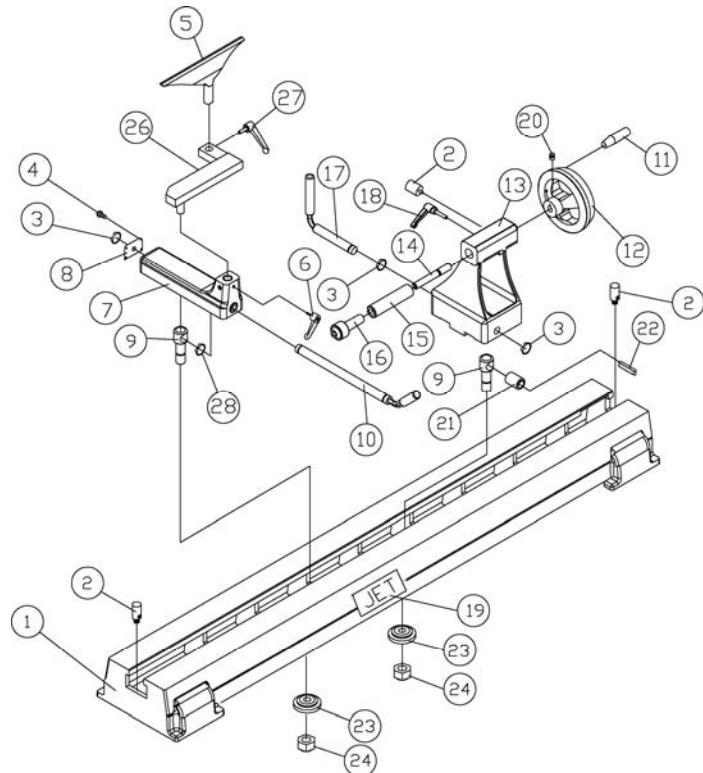

## Headstock Assembly – Parts List


Index No.	Part No.	Description	Size	Qty
1.....	JWL1442-101 .....	Spur Center.....	MT2.....	1
2.....	JWL1442-102 .....	Face Plate.....	6" .....	1
3.....	JWL1442-103 .....	Spindle.....		1
4.....	JWL1442-104 .....	Key.....	4 x 4 x 80 .....	1
5.....	JWL1442-105 .....	E-Ring.....	E-19 .....	1
6.....	BB-6205ZZ .....	Ball Bearing.....	6205ZZ .....	1
7.....	JWL1442-107 .....	Headstock.....		1
8.....	JWL1442-108 .....	Wave Washer.....		1
9.....	BB-6304LLB .....	Ball Bearing.....	6304LLB .....	1
10.....	JWL1442-110 .....	Lock Nut.....	3/4"-16 .....	1
11.....	JWL1442-111 .....	Hand wheel .....		1
12.....	TS-0207031 .....	Hex Socket Cap Screw.....	1/4"-20 x 5/8" .....	1
13.....	JWL1442-113A .....	Speed Selector Assembly.....		1
14.....	JWL1442-114 .....	Handle.....		1
15.....	TS-081C052 .....	Round Head Machine Screw .....	10-24 x 3/4 .....	2
16.....	JWL1442-116 .....	Spring.....		1
17.....	JWL1442-117 .....	Switch Bracket.....		1
18.....	JWL1442-118 .....	Switch Assembly .....		1
19.....	TS-081C022 .....	Round Head Machine Screw .....	10-24 x 3/8" .....	2
20.....	TS-081C052 .....	Round Head Machine Screw .....	10-24 x 3/4" .....	2
21.....	JWL1442-121 .....	Bracket.....		1
22.....	JWL1442-122 .....	Spindle Lock Pin.....		1
23.....	TS-0206031 .....	Hex Socket Cap Screw.....	10-24 x 5/8" .....	2
24.....	JWL1442-124 .....	C-Ring.....	S19 .....	2
25.....	JWL1442-125 .....	Lever.....		1
26.....	JWL1442-126 .....	Key.....	5 x 5 x 30 .....	1
27.....	JWL1442-127 .....	Bushing.....		1
28.....	JWL1442-128A .....	Bolt.....		1
29.....	JWL1442-129 .....	Support Bracket.....		1
30.....	JWL1442-130 .....	Index Bracket .....		1
31.....	TS-0561081 .....	Hex Nut.....	3/4"-10 .....	1
32.....	TS-0267021 .....	Set Screw.....	1/4"-20 x 1/4" .....	6
33.....	JWL1442-133 .....	Motor Cord .....		1
34.....	JWL1442-134 .....	Key.....	4 x 4 x 80 .....	1
35.....	JWL1442-135 .....	Motor.....	1HP, 1Ph.....	1
	JWL1442-MF .....	Motor Fan (not shown).....		1
	JWL1442-MFCA .....	Motor Fan Cover (not shown) .....		1
	JWL1442-CS .....	Centrifugal Switch (not shown) .....		1
	JWL1442-CC .....	Capacitor Cover (not shown) .....		2
	JWL1442-SC .....	Starting Capacitor (not shown).....	200MFD, 125VAC .....	1
	JWL1442-RC .....	Running Capacitor (not shown).....	25uF, 250VAC .....	1
36.....	JWL1442-136 .....	Switch Box .....		1
37.....	JWL1442-137 .....	Spring.....		1
38.....	JWL1442-138 .....	Sleeve .....		1
39.....	JWL1442-139 .....	C-Ring.....	S16 .....	1
40.....	JWL1442-140 .....	Power Cord .....		1
41.....	JWL1442-141 .....	Belt.....	3V-250 .....	1
42.....	JWL1442-142 .....	Spring.....		1
43.....	BB-6006LLB .....	Ball Bearing.....	6006LLB .....	1
44.....	JWL1442-144 .....	C-Ring.....	S32 .....	1
45.....	JWL1442-145 .....	Shifting Lever Bracket.....		1
46.....	JWL1442-146 .....	Rack.....		1
47.....	JWL1442-147 .....	Strain Relief Bushing .....		2
48.....	TS-0207061 .....	Hex Socket Cap Screw.....	1/4"-20 x 1" .....	1
49.....	TS-0561011 .....	Hex Nut.....	1/4"-20 .....	1
50.....	JWL1442-150 .....	Pulley Cover.....		1

## Headstock Assembly – Parts List

Index No.	Part No.	Description	Size	Qty
51	TS-0081031	Hex Head Bolt	5/16"-18 x 3/4"	2
52	TS-0720081	Lock Washer	5/16"	2
53	JWL1442-153	Plate		1
54	JWL1442-154	Clamp		1
55	JWL1442-155	JET Label		1
56	JWL1442-156	Warning Label		1
57	JWL1442-157	Speed Label		1
58	JWL1442-158	Motor Label		1
59	JWL1442-159	Motor Pulley (left)		1
60	JWL1442-160	Motor Pulley (right)		1
61	JWL1442-161	Spindle Pulley (left)		1
62	JWL1442-162	Spindle Pulley (right)		1
63	TS-081C022	Round Head Machine Screw	10-24 x 3/8"	4
64	JWL1442-164	Knock Out Rod		1
65	TS-081C082	Pan Head Screw	10-24 x 1-1/2"	1
66	JWL1442-166	Clip		1
67	TS-056007	Hex Nut	10-24	2
68	JWL1442-168	Spanner Wrench		1
69	JWL1442-169	Index Pin		1
70	JWL1442-170	Star Washer	3/16"	1
71	JWL1442-171	Hex Socket Cap Screw		1
72	JWL1442-172	Spring		1
73	JWL1442-173	Index Knob		1
74	JWL1442-174	Index Shaft		1
75	JWL1442-175	Spring		1
76	JWL1442-176	Index Bushing		1
77	JWL1442-PL	Headstock Pivot Label		1
78	JWL1442-178	Spring Pin	Ø3x25	1
79	JWL1442-179	Fixed Block		1
80	JWL1442-180	Rod		1
81	JWL1442-181	Spring		1
82	JWL1442-182	Spring		1
83	JWL1442-183	Pin		1


## Headstock Assembly

25

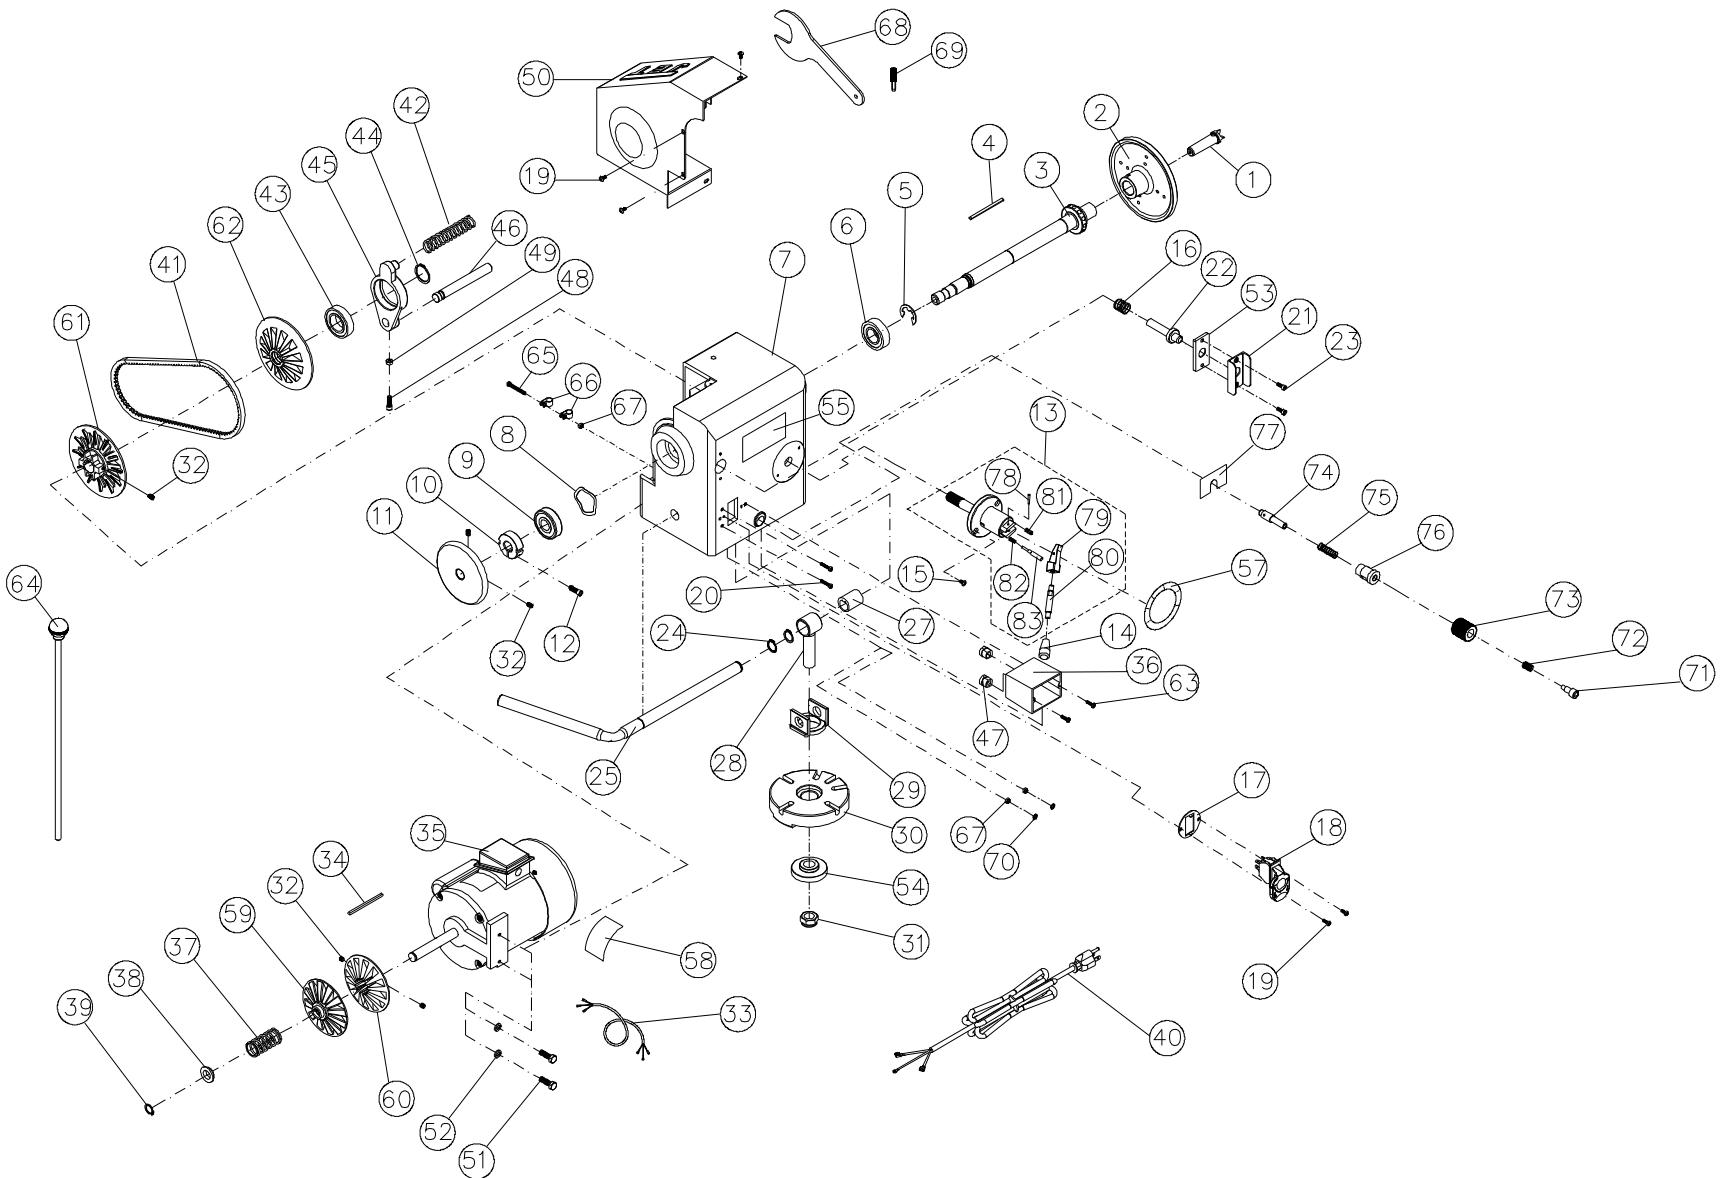


## Stand Assembly

Index No.	Part No.	Description	Size	Qty
3.....	JWL1642-203 .....	Stand .....		2
5.....	JWL1642-205 .....	JET Stripe .....		1
6.....	JWL1642-206 .....	Adjustable Foot .....	3/8"	4
7.....	TS-0561031 .....	Hex Nut .....	3/8"	4
9.....	TS-0208081 .....	Hex Socket Cap Screw.....	5/16"-18 x 1-1/2"	8
10.....	TS-0680032 .....	Flat Washer.....	5/16"	8

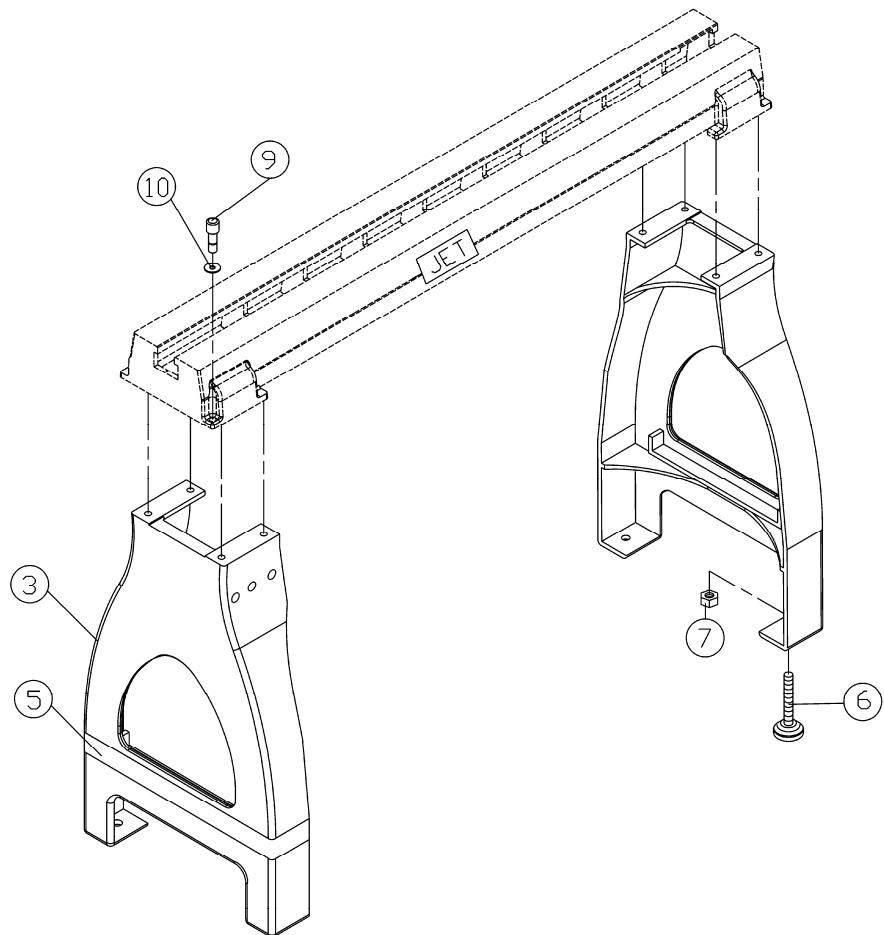


## Safety Guard Assembly

Index No.	Part No.	Description	Size	Qty
1.....	JWL1442-301 .....	Guard Bracket .....		1
2.....	TS-0270011 .....	Set Screw.....	5/16"-18x1/4"	2
3.....	JWL1642-187 .....	Collar .....		2
4.....	TS-0680041 .....	Flat Washer.....	3/8"	2
5.....	TS-0720091 .....	Lock Washer .....	3/8"	2
6.....	TS-0209071 .....	Socket Head Cap Screw.....	3/8"-16x1-1/2"	2
7.....	JWL1642-168 .....	Plunger.....		1
8.....	JWL1642-179 .....	Guard.....		1

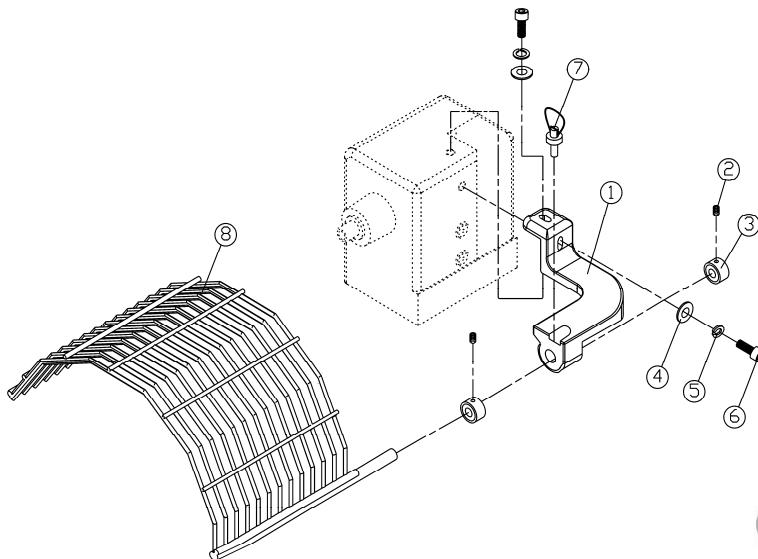

*Safety Guard Assembly*

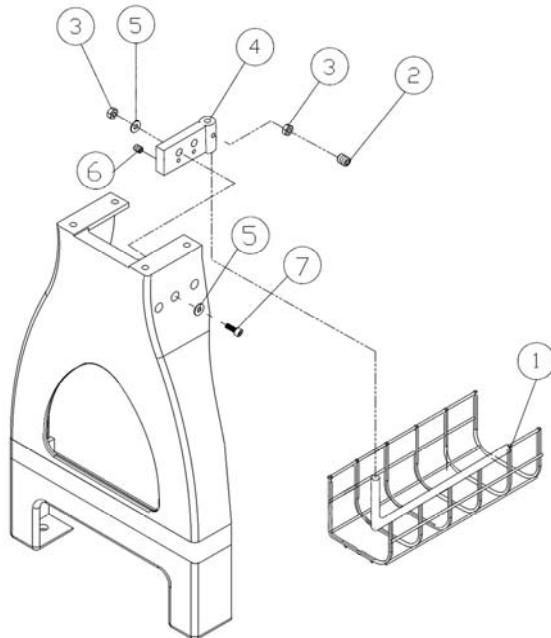

**Basket Assembly**

*Basket Assembly*

Index No.	Part No.	Description	Size	Qty
1.....	JWL1642-228 .....	Basket .....		1
2.....	TS-0270061 .....	Set Screw.....	5/16"-18x5/8"	1
3.....	TS-0570021 .....	Hex Nut.....	5/16"	3
4.....	JWL1642-226 .....	Bracket.....		1
5.....	TS-0680032 .....	Flat Washer.....	5/16"	4
6.....	TS-0267021 .....	Set Screw.....	1/4"-20x1/4"	2
7.....	TS-0208081 .....	Hex Socket Cap Screw.....	5/16"-18x1-1/2"	2