


Disc Sander Assembly Breakdown

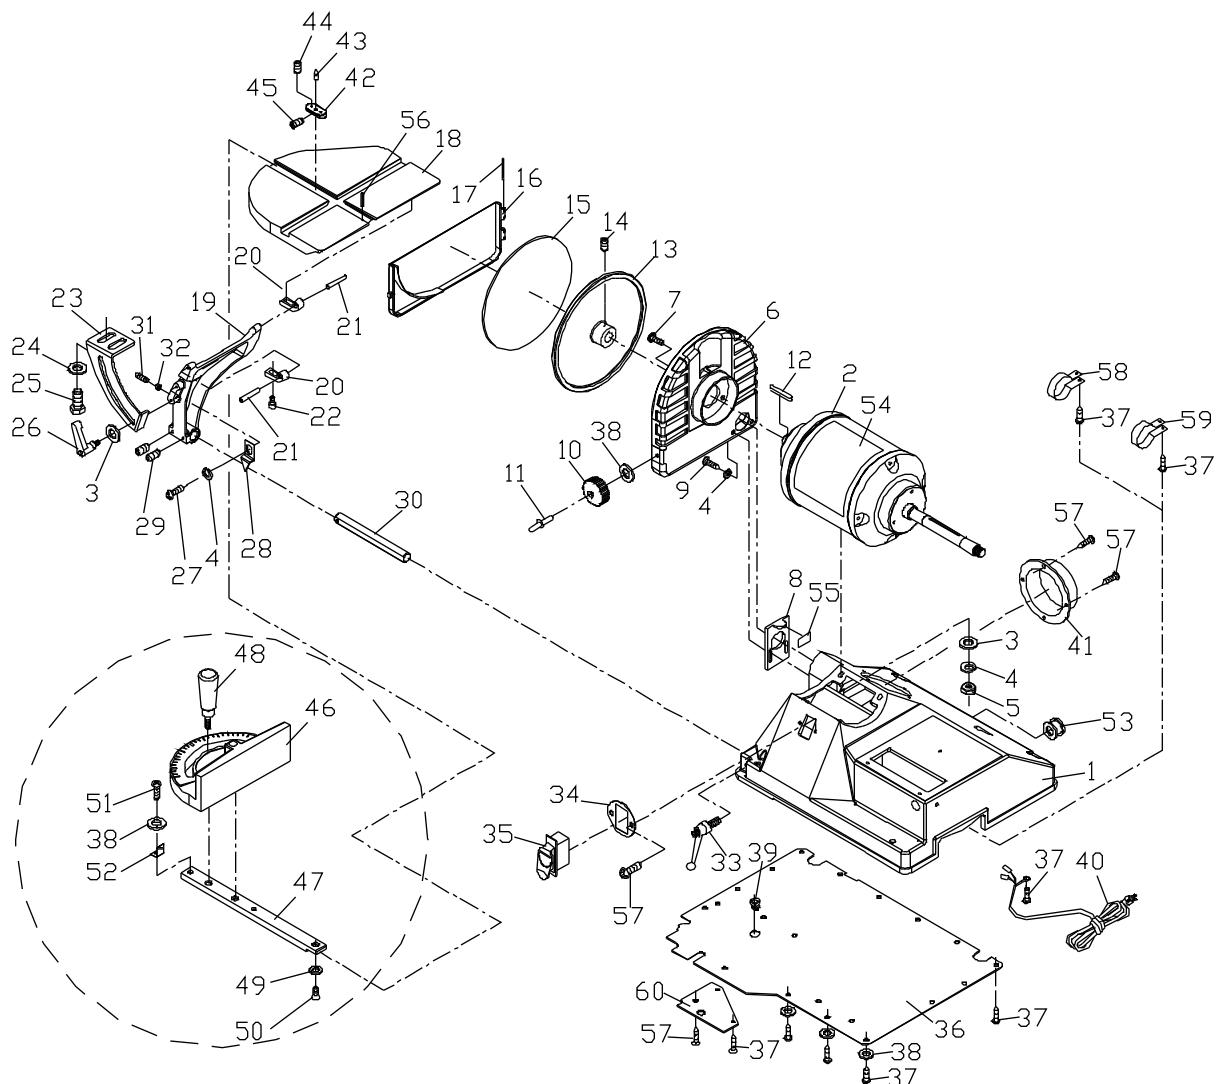


Parts List for the Disc Sander Assembly

Index No.	Part No.	Description	Size	Qty
1.....	JSG96-101A.....	Base		1
2.....	JSG96-102.....	Motor		1
	JSG96-102A.....	Starting Capacitor (not shown).....	150MFD, 125VAC.....	1
	JSG96-102B.....	Running Capacitor (not shown).....	20uF, 250VAC.....	1
3.....	TS-1550041.....	Flat Washer.....	M6.....	4
4.....	TS-1551041.....	Lock Washer	M6.....	7
5.....	TS-1540041.....	Hex Nut.....	M6.....	1
6.....	JSG96-106.....	Disc Cover		1
7.....	JSG96-107.....	Screw w/Washer.....	1/4x3/8.....	3
8.....	JSG96-108.....	Air Controller		1
9.....	JSG96-109.....	Tap Screw.....	1/4x1/2.....	2
10.....	JSG96-110.....	Lock Knob		1
11.....	JSG96-111.....	Tap Screw.....	1/4x1	1
12.....	JSG96-112.....	Key	5x5x25.....	1
13.....	JSG96-113.....	Disc		1
14.....	JSG96-114.....	Set Screw	#10x3/8.....	1
15.....	JSG96-115.....	Sanding Disc		1
16.....	JSG96-116.....	End Cover		1
17.....	JSG96-117.....	Pin.....		1
18.....	JSG96-118.....	Compound Table		1
19.....	JSG96-119.....	Table Bracket		1
20.....	JSG96-120.....	Trunnion		2
21.....	JSG96-121.....	Pin.....		2
22.....	JSG96-122.....	Hex Socket Cap Screw	#10x5/8.....	2
23.....	JSG96-123.....	Table Support w/Scale		1
24.....	TS-0680031.....	Flat Washer*	5/16	2
25.....	TS-0051021.....	Hex Head Screw.....	5/16x5/8.....	2
26.....	JSG96-126.....	Lock Handle*		1
27.....	JSG96-127.....	Screw	1/4x3/8.....	1
28.....	JSG96-128.....	Pointer		1
29.....	TS-0270031.....	Set Screw	5/16x3/8.....	2
30.....	JSG96-130.....	Rod		1
31.....	JSG96-131.....	Set Screw	1/4x1	1
32.....	TS-0561011.....	Hex Nut.....	1/4	1
33.....	JSG96-133.....	Lock Handle	5/16x1	1
34.....	JSG96-134.....	Switch Plate		1
35.....	JSG96-135.....	Switch		1
	JSG96-135A.....	Switch Key (not shown).....		1
36.....	JSG96-136.....	Plate		1
37.....	JSG96-137A.....	Tap Screw.....	3/16x3/8.....	19
38.....	TS-0680011.....	Flat Washer.....	3/16	5
39.....	JSG96-139.....	Strain Relief		1
40.....	JSG96-140.....	Power Cord		1
41.....	JSG96-141.....	Dust Chute		1
42.....	JSG96-142.....	Circle Gauge*		1
43.....	JSG96-143.....	Tip		1
44.....	JSG96-144.....	Set Screw	1/4x1/4	2
45.....	JSG96-145.....	Set Screw	M4x6	1
46.....	JWBS18-403.....	Miter Gauge Body.....		1
47.....	JSG96-147.....	Guide Bar		1
48.....	JWBS18-401.....	Lock Handle		1
49.....	JWBS20-156.....	Guide Disc		1
50.....	JSG96-150.....	Pan Head Screw.....	1/4x5/16	1
51.....	JSG96-151.....	Screw	#10x5/16	1
52.....	JWBS18-406.....	Pointer		1

Index No.	Part No.	Description	Size	Qty
53	JSG96-153	Bushing.....		1
54	JSG96-154	I.D. Label		1
55	JSG96-155	Indication Label		1
56	JSG96-156	Pin.....		1
57	JSG96-157	Tap Screw.....	1/4"×3/8"	7
58	JSG96-158	Holder-Small (Running Capacitor).....		1
59	JSG96-159	Holder-Big (Starting Capacitor)		1
60	JSG96-160	Plate		1
	JSG96-MGA	Miter Gauge Assembly (Items 38, 46 thru 52)		1
	JSG96-CGA	Circle Gauge Assembly (Items 42 thru 45).....		1

* items marked with an asterisk are part of the Hardware Kit, page 21.

Belt Sander Assembly Breakdown

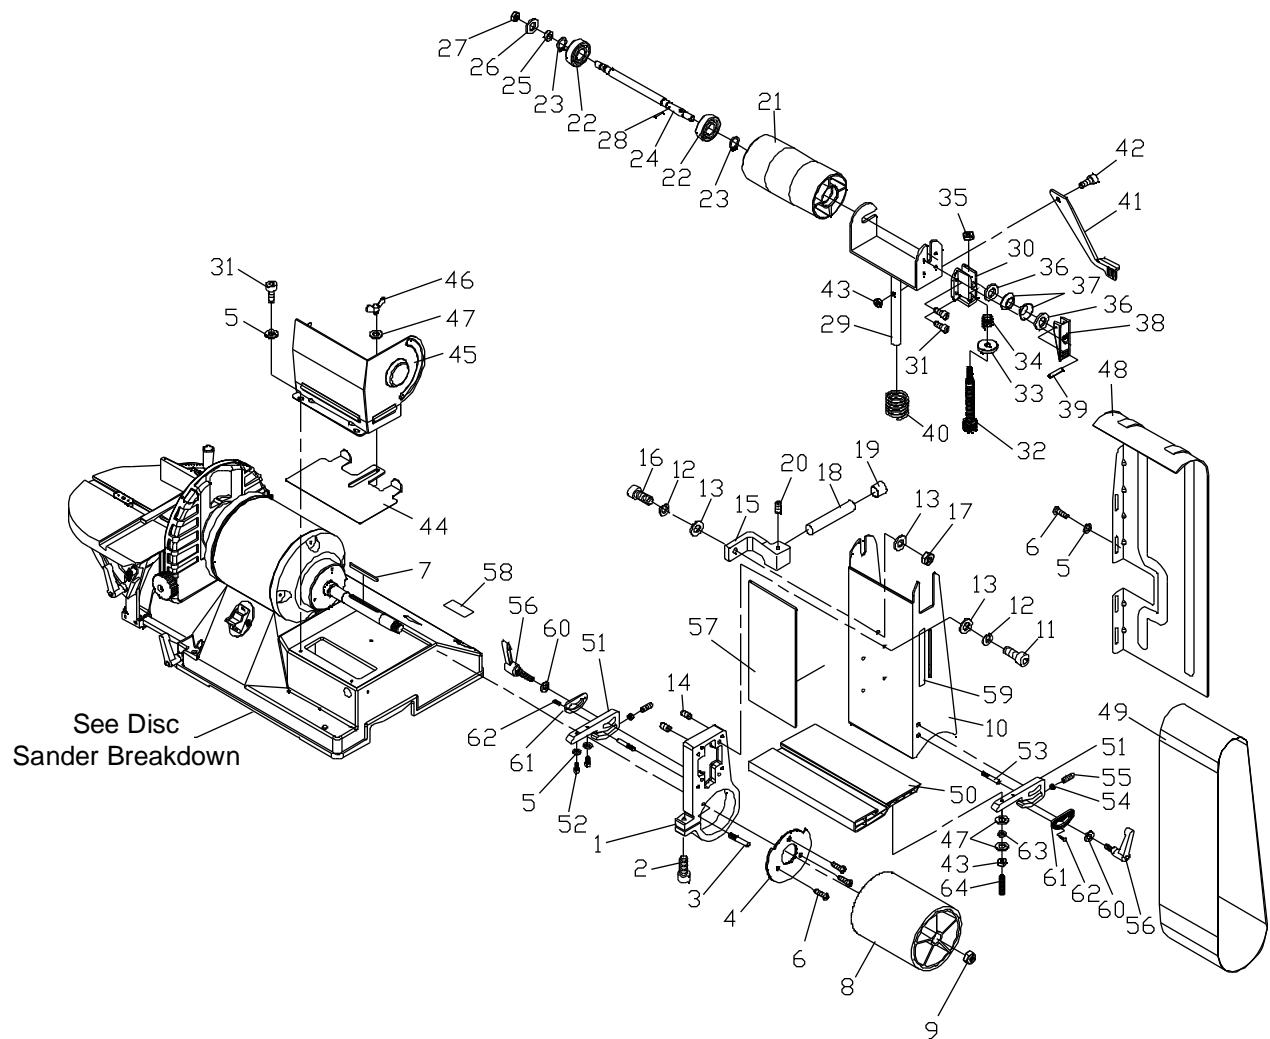


Parts List for the Belt Sander Assembly

Index No.	Part No.	Description	Size	Qty
1.....	JSG96-201.....	Bracket		1
2.....	TS-0208071.....	Hex Socket Cap Screw5/16x1-1/4	1
3.....	JSG96-203.....	Pin		1
4.....	JSG96-204.....	Fixed Plate		1
5.....	TS-0680021.....	Flat Washer1/4	8
6.....	JSG96-206.....	Screw1/4x3/8	3
7.....	JSG96-207.....	Key5x5x70	1
8.....	JSG96-208.....	Drive Drum		1
9.....	JSG96-209.....	Lock Nut5/8-18UNF	1
10.....	JSG96-210.....	Belt Support		1
11.....	JSG96-211.....	Hex Socket Cap Screw5/16x5/8	4
12.....	TS-0720081.....	Lock Washer5/16	5
13.....	TS-0680031.....	Flat Washer5/16	6
14.....	TS-0270031.....	Set Screw5/16x3/8	4
15.....	JSG96-215.....	Bracket		1
16.....	TS-0208061.....	Hex Socket Cap Screw5/16x1	1
17.....	TS-0561021.....	Hex Nut5/16	1
18.....	JSG96-218.....	Rod		1
19.....	JSG96-219.....	Pad		1
20.....	JSG96-220.....	Set Screw1/4x3/8	1
21.....	JSG96-221.....	Follow Roller		1
22.....	BB-6201ZZ.....	Ball Bearing		2
23.....	JSG96-223.....	C-Ring	STW-11	2
24.....	JSG96-224.....	Shaft		1
25.....	JSG96-225.....	Bushing		1
26.....	TS-0680041.....	Flat Washer3/8	1
27.....	JSG96-227.....	Lock Nut3/8	1
28.....	JSG96-228.....	Roll Pin4x20	1
29.....	JSG96-229.....	Support Bracket		1
30.....	JSG96-230.....	Micro-Adjusting Seat		1
31.....	TS-0207021.....	Hex Socket Cap Screw1/4x1/2	6
32.....	JSG96-232.....	Screw		1
33.....	JSG96-233.....	Adjusting Knob		1
34.....	JSG96-234.....	Spring		1
35.....	JSG96-235.....	Lock NutM6	1
36.....	JSG96-236.....	Washer		2
37.....	JSG96-237.....	Disc Spring		2
38.....	JSG96-238.....	Lock Handle		1
39.....	JSG96-239.....	Roll Pin3x20	1
40.....	JSG96-240.....	Spring		1
41.....	JSG96-241.....	Eccentric Handle		1
42.....	JSG96-242.....	Hex Socket Cap Screw1/4x1-1/4	1
43.....	JSG96-243.....	Lock Nut1/4	2
44.....	JSG96-244.....	Air Controller (Belt)		1
45.....	JSG96-245.....	Dust Chute		1
46.....	JSG96-246.....	Wing Screw1/4x1/2	1
47.....	JSG96-247.....	Flat Washer1/4x3/4	3
48.....	JSG96-248.....	Back Cover		1
49.....	JSG96-249.....	Sanding Belt		1
50.....	JSG96-250.....	Belt Table		1
51.....	JSG96-251.....	Trunnion		2
52.....	TS-0050021.....	Hex Socket Cap Screw1/4x5/8	2
53.....	JSG96-253.....	Guide Pin		2
54.....	TS-0561011.....	Hex Nut1/4	2
55.....	JSG96-255.....	Set Screw1/4x3/4	2


Index No.	Part No.	Description	Size	Qty
56	JSG96-256	Lock Handle*	.5/16x1-1/4	2
57	JSG96-257	Graphite Pad		1
58	JSG96-155	Indication Label		1
59	JSG96-259	Loosen/Tighten Label		1
60	JSG96-260	Flat Washer	.1/4x9/16x1/8	2
61	JSG96-261	Serrated Plate		2
62	JSG96-262	Phillips Tap Screw	M3x10	4
63	JSG96-263	Lock Washer	1/4	1
64	JSG96-264	Set Screw	.1/4x1-1/2	1
..... JSG96-HK.....Hardware Kit (Includes items marked with *, and a 6mm hex wrench)				

Open Stand Assembly (Optional)

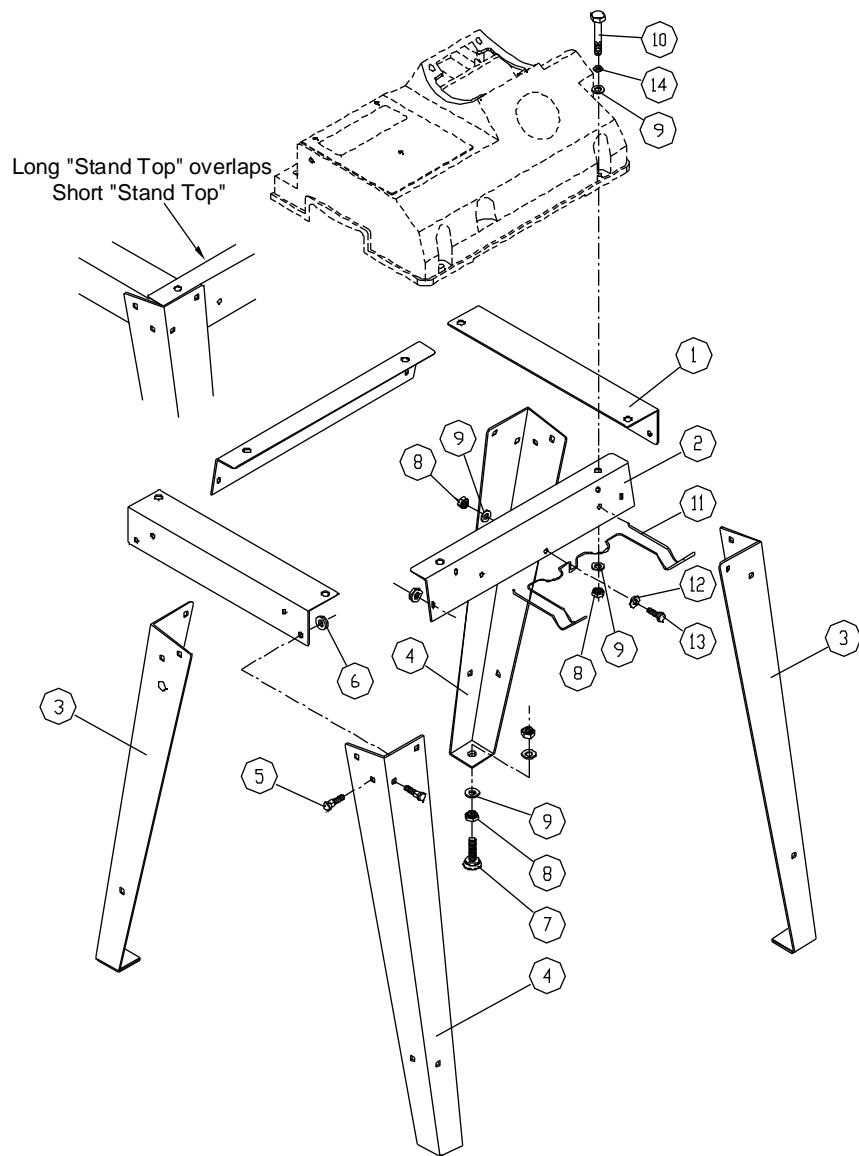

Index No.	Part No.	Description	Size	Qty
1.....	JSG96-401	Stand Top (front and rear, short).....		2
2.....	JSG96-402	Stand Top (left and right, long).....		2
3.....	JSG96-403	Stand Leg w/Tool Holder		2
4.....	JSG96-404	Stand Leg		2
5.....	JSG96-405	Carriage Bolt*	5/16x5/8	16
6.....	JSG96-406	Lock Nut w/Flange*	5/16	16
7.....	JSG96-407	Leveling Pad*		4
8.....	TS-0561031	Hex Nut*	3/8	13
9.....	TS-0680041	Flat Washer*	3/8	17
10.....	TS-0060131	Hex Head Screw*	3/8x3	4
11.....	JSG96-314	Tool Shelf		1
12.....	JSG96-316	Flat Washer*	3/8x1-1/8	1
13.....	TS-0060031	Hex Head Screw*	3/8x3/4	1
14.....	TS-0720091	Lock Washer*	3/8	4
..... JSG96-HKA.....Hardware Kit for Open Stand (includes items marked with *)				

Closed Stand Assembly (Optional)

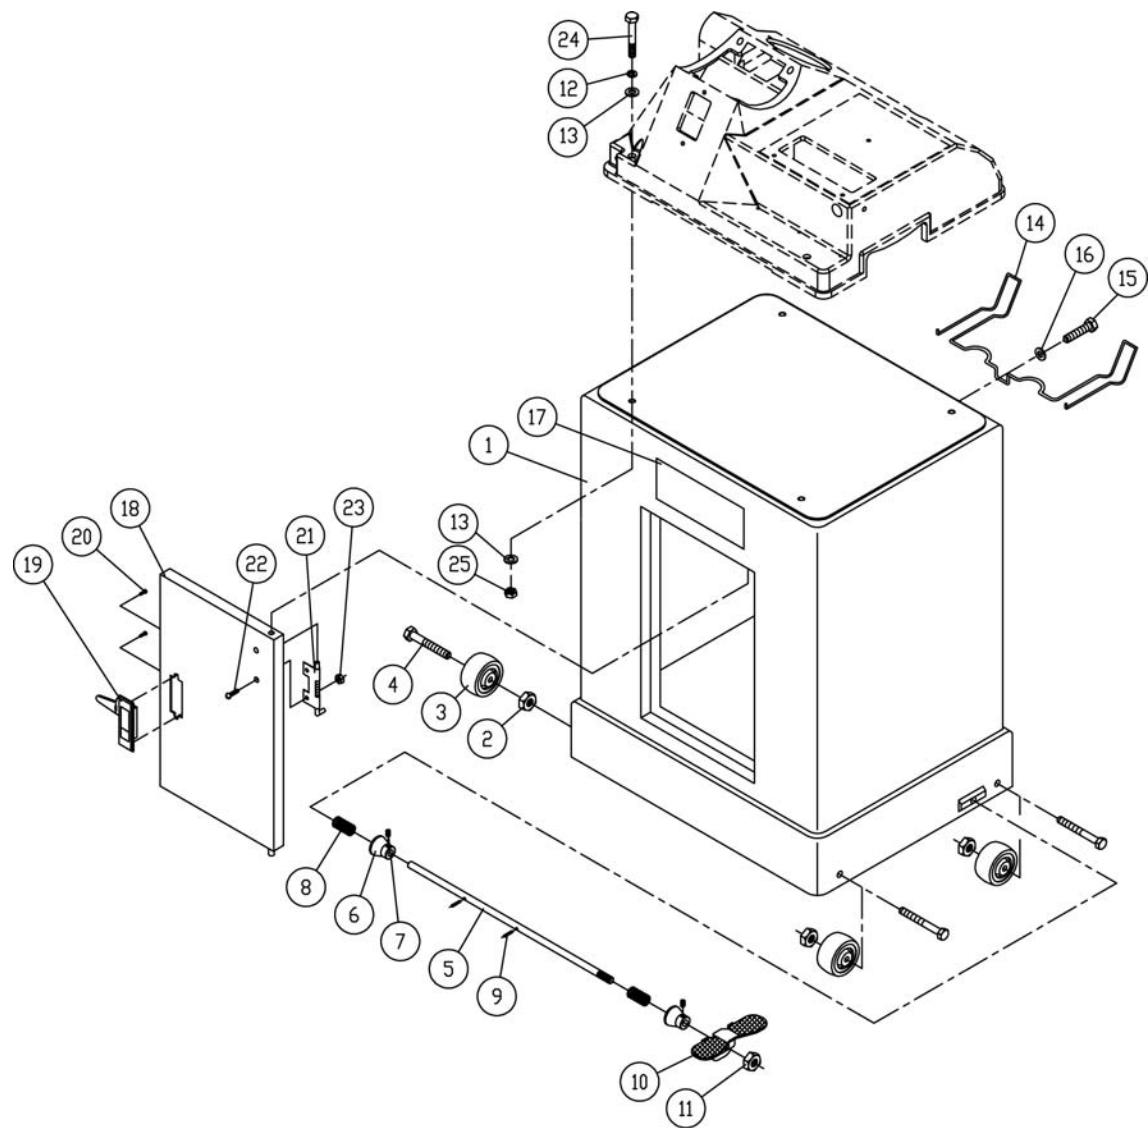

Parts List for Closed Stand (Optional)

Index No.	Part No.	Description	Size	Qty
1.....	JSG96-301.....	Base		1
2.....	JSG96-302.....	Lock Nut	3/8.....	4
3.....	PJE-S05.....	Wheel		4
4.....	JSG96-304.....	Hex Head Screw.....	3/8x2-1/2.....	4
5.....	JSG96-305.....	Shaft.....		1
6.....	PJN-S04	Eccentric Cam.....		2
7.....	JSG96-307.....	Set Screw	M6x10.....	2
8.....	JSG96-308.....	Spring		2
9.....	JSG96-309.....	Roll Pin	4x16	2
10.....	PJN-S02	Foot Brake		1
11.....	JSG96-311.....	Lock Nut	M10x1.5.....	1
12.....	TS-0720091.....	Lock Washer*.....	3/8.....	4
13.....	TS-0680041.....	Flat Washer*	3/8.....	8
14.....	JSG96-314.....	Tool Shelf.....		1
15.....	TS-0060031.....	Hex Head Screw*	3/8x3/4.....	1
16.....	JSG96-316.....	Washer*	3/8x1-1/8.....	1
17.....	JSG96-317.....	JET Plaque		1
18.....	JSG96-318.....	Door		1
19.....	JSG96-319.....	Latch		1
20.....	JSG96-320.....	Screw	M3.....	2
21.....	JSG96-321.....	Door Pivot		1
22.....	JSG96-127.....	Screw	1/4x3/8.....	2
23.....	TS-0561011.....	Hex Nut.....	1/4.....	2
24.....	TS-0060131.....	Hex Head Screw*	3/8x3	4
25.....	TS-0561031.....	Hex Nut*	3/8.....	4
..... JSG96-HKC Hardware Kit for Closed Stand (includes items marked with *)				



WALTER MEIER (Manufacturing) Inc.

427 New Sanford Road
LaVergne, Tennessee 37086
Phone: 800-274-6848
www.waltermeier.com