



Schematic & Parts List

No.	Description	Qty.	No.	Description	Qty.	No.	Description	Qty.
1	Screw M6*45	3	33	Side Cover	1	65	O-Ring 9 x 1.8	2
2	Washer M6	3	34	Spring Pin 3 x 20	1	*66	Nut	1
3	Exhaust Cover C901	1	35	Outlet site	1	67	Spring	1
4	Screw M6 x 25	4	36	Screw M8 x 25	4	*68	Remote Core C	1
5	Washer #6	6	37	Screw M8 x 20	1	69	Seal Air	1
6	Cylinder Cap	1	38	#8 Washer	1	70	Steel Ball ø3	1
7	Gasket	1	39	Gasket	1	71	O-Ring 11.5 x 1.5	3
8	Gasket	1	40	Tail Cover	1	72	Spacer	1
9	Trigger valve head	1	41	Screw M5 x 18	3	*73	Trigger Valve Guide A	1
10	Screw M5X6	1	42	Air Plug	1	*74	Remote Core A	1
11	Gasket	1	43	Pusher	1	75	Nail Tank	1
12	Stopper	1	44	Spring	1	76	Screw M6 x 16	2
13	Exhaust valve assembly	1	45	Wheel guide	1	77	Nut M6	2
14	O-Ring 50. 5 x 3	1	46	Pin	1	78	Magazine Support	1
15	Driver Blade	1	47	Screw M6 x 10	1	79	Screw M5 x 45	1
16	Piston head	3	48	Release Catch A	1	80	Special Blade	1
17	O-Ring 62.7 x 2.45	1	49	Steel Ball ø3	2	81	Screw M4 x 16	1
18	O-Ring 90 x 2	1	50	Feeder Spring 71*3.2	2	82	Washer #4	1
19	Spacer	1	51	Screw	1	83	Sleeve	1
20	O-Ring 79 x 2.45	1	52	Release Catch B	1	84	Click Lever	1
21	O-Ring 69 x 2.45	1	53	Spring	1	85	Washer	4
22	Cylinder Cap	1	*54	Catch Guide Plate	1	86	Sleeve	1
23	Lantern ring	1	*55	Trigger	1	87	Nut M5	1
24	Collar	1	56	Spring Pin 3 x 30	1	88	Handle Grip	1
25	Feeder Spring 71*3.2	1	57	Spring Pin 3 x 45	1	89	Seal Air	1
26	Washer C901	1	58	Spring	1	90	Belt Hook	1
27	Body	1	59	O-Ring 3.8 x 1.9	2	91	Screw M5 x 14	1
28	O-Ring 63.5 x 2.	1	60	Remote Core B	1			
29	Bumper	2	61	Nut M4	1			
30	Gasket	1	*62	Trigger Valve Guide	1			
31	Screw M6 x 14	1	63	O-Ring 4.5 x 1.5	1			
32	Washer	1	64	O-Ring 6.5 x 1.5	1			

* Not Compatible with Metabo/Hitachi NR83A5