



Parts List for 74148 Type 1

Item Number	Part Number	Description	Qty Required
1	330013-02	SCREW,PLASTIC	8
4	242558-00	BLADE	1
5	242641-00	GEAR,DRIVE	1
6	242560-00	WASHER,DRIVE	1
7	680945-00	SCREW	2
10	243258-01SV	BATTERY PACK	1
12	000000-00	No Longer Available	2
13	90522204	CHARGER	1
16	242555-01	GEAR,INTERMEDTE	1
18	33314-00	CONNECTOR	4
19	243271-00	PLATE,COVER	1
20	000000-00	No Longer Available	1
24	383994-00	SWITCH,ON/OFF	1
27	157315-00	WASHER,SPRING	1
28	000000-00	No Longer Available	1
800	790206-00	GREASE, 6 OZ.	1
835	000000-00	No Longer Available	1