





### Parts List for 892 Type 3

Item Number	Part Number	Description	Qty Required
1	A22701	MOTOR HOUSING	1
3	886538	SCREW	2
4	N489982	POWER CORD ASSEMBLY	1
5	696276	SCREW	2
6	610559-00	SWITCH	1
7	908697	BUSHING	1
8	A13684	BRUSH & HOLDER ASSY	2
9	682063	CONNECTOR VS	1
10	823030	SNAP-RING	1
11	42975	3/8 INCH COLLET ASSY	1
11	44008	COLLET 8MM	1
11	42975	3/8 INCH COLLET ASSY	1
11	000000-00	No Longer Available	1
11	5140103-66	COLLET ASSY.	1
11	876669	COLLET 1/4 INCH	1
11	876671	COLLET 1/2 INCH	1
11	42999	1/4 INCH COLLET ASSY	1
11	44006	COLLET 6MM	1
11	42950	1/2 INCH COLLET ASSY	1
12	882185	SCREW MACHINE STEEL	3
13	861434	CORD CLAMP	1
14	330003-64	BALL BEARING	1
15	A22699	SWITCH ACTUATOR	1
16	A22697	COVER	1
17	A22698	COVER	1
18	912755SV	INSULATING SLEE	1
19	912032	WASHER	1

### Parts List for 892 Type 3

Item Number	Part Number	Description	Qty Required
20	911807	RACK	1
21	908596	PIN	1
22	879999	SCREW	2
23	901287	SPINDLE LOCK RETAINE	1
24	803831SV	BEARING	1
25	875893	COLLET NUT	1
26	903053	CHUCK	1
27	250403	MAGNETIC DISC	1
28	912753	ARMATURE	1
30	N471109	MOTOR HOUSING	1
31	N471110	CAP	1
32	A21384	SCREW	6
34	N530574	CONTROL MODULE	1
35	861737	RING	1
37	N488957	LEAD WIRE	1
40	893792	SCREW	2
44	800835	PIN	2
45	893728	FAN	1
55	A24391	WARNING LABEL	1
56	698709	SPRING	1
57	913226	INSULATING TAPE	1
59	A22709	OPEN-END WRENCH	1
62	A22702	CLAMP	1
65	911800	WEAR PLATE	1
66	911801	INSERT	1
67	911751	ROD	1
68	910601	PLUG	1

### Parts List for 892 Type 3

Item Number	Part Number	Description	Qty Required
69	911802	NUT	1
70	908572	HANDLE	2
71	908577	RING	1
72	911803	SCREW	1
73	908576	KNOB	1
75	911809	SCREW	2
76	810425	PLUG	1
78	911804	RETAINING RING	1
79	911796	SPRING	1
81	911797	LEVER	1
82	911710	DISK	1
83	681472	SCREW	1
84	904936	BASE-SUB	1
139	802350	SCREW	3
160	A22700	BASE HOUSING	1
161	911799	AXLE	1
260	A22727	ID LABEL	1
262	A22976	WARNING LABEL	1
263	N473441	RATING LABEL	1
265	A22735	WARNING LABEL	1
856	75301	R TABLE ACCY KIT	1
856	42690	ROUTER EDGE GUIDE	1
861	A22987	KITBOX	1