




SERVICE PARTS LIST

BULLETIN NO.
55-26-8000

SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS		REVISED BULLETIN	DATE
VARIABLE SPEED 1/2" D.I. IMPACT WRENCH			Sept. 2004
CATALOG NO. 9072-55	STARTING SERIAL NO.	WIRING INSTRUCTION	
	A12A	58-03-1827	

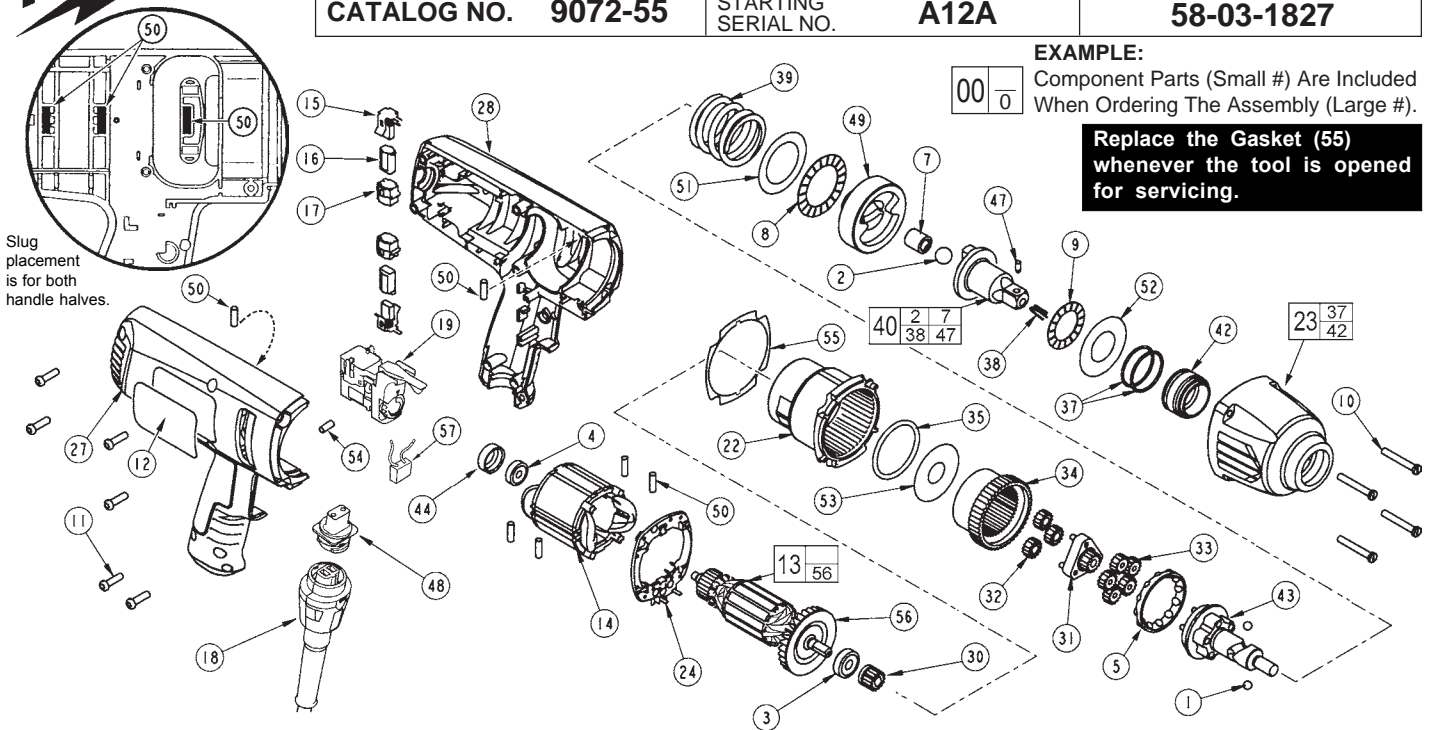

EXAMPLE:
Component Parts (Small #) Are Included
When Ordering The Assembly (Large #).

**Replace the Gasket (55)
whenever the tool is opened
for servicing.**

Slug
placement
is for both
handle halves.

FIG.	PART NO.	DESCRIPTION OF PART	NO.REQ.
1	02-02-0250	1/4" Ball	(2)
2	-----	1/2" Ball	(1)
3	02-04-0852	Ball Bearing	(1)
4	02-04-0645	Ball Bearing	(1)
5	02-40-0050	Angular Contact Bearing	(1)
7	-----	Drawn Cup Bearing	(1)
8	02-80-0200	Thrust Bearing	(1)
9	02-80-3256	Thrust Bearing	(1)
10	05-88-5988	K50 x 35mm Screw	(4)
11	06-95-6290	M5 x 2.24 x 18 Plastite Screw	(6)
12	12-20-9074	Service Nameplate Kit	(1)
13	16-10-2275	Armature	(1)
14	18-07-2275	Field	(1)
15	22-18-0040	Brush Assembly	(2)
16	22-20-0110	Brush Tube	(2)
17	22-20-0465	Brush Tube Holder	(2)
18	22-64-0676	Quik-Lok Cord Set	(1)
19	23-66-2775	Switch	(1)
22	28-14-0175	Gearcase	(1)
23	14-38-0100	Front Housing Assembly	(1)
24	31-15-2045	Field Connector	(1)
27	31-44-2176	Right Handle	(1)
28	31-44-2181	Left Handle	(1)
30	32-60-0150	Sun Gear	(1)
31	32-60-0175	Sun Gear	(1)
32	32-62-0215	Planet Gear	(3)
33	32-62-0215	Planet Gear	(5)
34	32-65-0005	Ring Gear	(1)
35	34-40-0070	O-Ring	(1)
37	-----	O-Ring	(2)
38	40-50-8320	Detent Spring	(1)
39	40-50-0241	Spring	(1)
40	14-73-0145	Anvil Assembly	(1)
42	-----	Bushing	(1)
43	14-73-0300	Cam Shaft Assembly	(1)
44	42-96-0015	Bearing Cup	(1)
47	44-60-1170	Detent Pin	(1)
48	22-56-0040	Blade Housing Assembly	(1)
49	44-82-0205	Ram	(1)
50	45-30-0025	Rubber Slug	(6)

FIG.	PART NO.	DESCRIPTION OF PART	NO.REQ.
51	45-88-0535	Washer	(1)
52	45-88-1575	Washer	(1)
53	45-88-3250	Washer	(1)
54	45-30-0021	Rubber Slug	(1)
55	43-44-0991	Gasket	(1)
56	22-84-0375	Fan	(1)
57	22-33-0550	Suppressor Assembly	(1)

- FIG. NOTES:**
- 4 Orient bearing seal (black side) toward the commutator.
 - 10 Torque to 37-42 in./lbs.
 - 11 Torque to 25-30 in./lbs.
 - 17 At the time of brush replacement, the tool should be relubricated with Type "Z" grease, No. 49-08-7655.
- FIG. LUBRICATION (Type "Z" Grease, No.49-08-7655):**
- 23,34,42, 43,49 Lightly coat with grease the Ring Gear (34) and the bearing races of the Camshaft Planet Carrier (43), the back bearing surface of the Ram (49) and the I.D. the Front Housing Bushing (42).
 - 7,40 Place a dab of grease in the Needle Bearing (7) inside the Anvil (40).
 - 31,32,33,43 Fill with grease the center of the five Planet Gears (33) on the Camshaft Assembly (43). Fill the center of the three Planet Gears (32) on the Sun Gear (31).
 - 49 Place approximately 1/2 oz. of grease in the front cavity of the Ram.
 - 43 Place approximately 1/2 oz. grease on the Camshaft (43) inside the Spring (39).