

FIG.	PART NO.	DESCRIPTION OF PART	NO.REQ.		ART NO.
1	02-02-0250	1/4" Ball	(2)		-82-0205
2		1/2" Ball	(1)		-30-0025
3	02-04-0852	Ball Bearing	(1)		-88-0535
4	02-04-0645	Ball Bearing	(1)		-88-1575
5	02-40-0050	Angular Contact Bearing	(1)		-88-3250
7		Drawn Cup Bearing	(1)		-30-0021
8	02-80-0200	Thrust Bearing	(1)		-44-0991
9 10	02-80-3256	Thrust Bearing K50 x 35mm Screw	(1)	56 22	-84-0375
10	05-88-5988	M5 x 2.24 x 18 Plastite Screw	(4)	FIG.	NOTES:
12	06-95-6290		(6)	гю. 4	Orient bearin
12	16-14-2220	Service Nameplate Armature	(1) (1)	4	Oneni beani
13	18-04-2210	Field		10	Torque to 45
14	22-18-0040	Brush Assembly	(1) (2)	10	Torque to 40
16	22-10-0040	Brush Tube		11	Torque to 25
17	22-20-0110	Brush Tube Holder	(2) (2)		101900 10 20
18	22-20-0405	Power Cord	(2) (1)	16	At the time c
19	23-66-2775	Switch	(1)		relubricated
22	28-14-0175	Gearcase	(1)		
23	14-38-0100	Front Housing Assembly	(1)	FIG.	LUBRICATI
23	31-15-2045	Field Connector	(1)	23,34,42,	Lightly coat
24	31-17-0261	Left Cord Clamp	(1)	43,49	bearing race
26	31-17-0201	Right Cord Clamp	(1)		back bearing
27	31-44-2176	Right Handle	(1)		Front Housir
28	31-44-2181	Left Handle	(1)		
30	32-60-0150	Sun Gear	(1)	7,40	Place a dab
31	32-60-0175	Sun Gear	(1)		the Anvil (40
32	32-62-0215	Planet Gear	(3)		— ———————————————————————————————————
33	32-62-0215	Planet Gear	(5)	31,32,33,43	0
34	32-65-0005	Ring Gear	(1)		on the Cams three Planet
35	34-40-0070	O-Ring	(1)		three Planet
37		O-Ring	(2)	49	Place approx
38	40-50-8320	Detent Spring	(1)	49	of the Ram.
39	40-50-0241	Spring	(1)		or the Marn.
40	14-73-0145	Anvil Assembly	(1)	43	Place approx
42		Bushing	(1)	40	(43) inside th
43	14-73-0300	Cam Shaft Assembly	(1)		(40) 110100 1
44	42-96-0015	Bearing Cup	(1)		MILWAUI
47	44-60-1170	Detent Pin	(1)		
48	44-76-0210	Cord Protector	(1)		13135 W.
-			· / I		

FIG. 49 50 51 52 53 54 55 56	44-8 45-3 45-8 45-8 45-3 45-3	RT NO. 32-0205 30-0025 38-0535 38-1575 38-3250 30-0021 44-0991 34-0375	DESCRIPTION OF PART Ram Rubber Slug Washer Washer Washer Rubber Slug Gasket Fan	NO.REQ. (1) (6) (1) (1) (1) (1) (1) (1) (1)			
FIG. 4		NOTES: Orient bearing seal (black side) toward the commutator.					
10		Torque to 45-50 in./lbs.					
11		Torque to 25-30 in./lbs.					
16		At the time of brush replacement, the tool should be relubricated with Type "Z" Grease, No.49-08-7655.					
FIG. 23,34,42, 43,49		LUBRICATION (Type "Z" Grease, No.49-08-7655): Lightly coat with grease the Ring Gear (34) and the bearing races of the Camshaft Planet Carrier (43), the back bearing surface of the Ram (49) and the I.D. the Front Housing Bushing (42).					
7,40		Place a dab of grease in the Needle Bearing (7) inside the Anvil (40).					
31,32,33,43		Fill with grease the center of the five Planet Gears (33) on the Camshaft Assembly (43). Fill the center of the three Planet Gears (32) on the Sun Gear (31).					
49		Place approximately 1/2 oz. of grease in the front cavity of the Ram.					
43		Place approximately 1/2 oz. grease on the Camshaft (43) inside the Spring (39).					

135 W. LISBON RD., BROOKFIELD, WI 53005

