



Parts List for BR318-AR Type 1

Item Number	Part Number	Description	Qty Required
1	573379-14	CORD & PLUG	1
2	90511285	CORD PROTECTOR	1
3	329301-00	CLAMP,CORD	1
4	330065-06	SCREW	2
5	587233-00	SWITCH	1
6	588563-01	BRUSH ASSY.	2
7	90514796	HOUSING ASSY.	1
8	330065-08	SCREW	5
11	90513108	BAFFLE	1
12	90513103	COVER	1
15	330065-26	SCREW	7
16	90511220	DRIVE PULLEY	1
17	90511221	DRIVEN PULLEY	1
18	90511237	TIMING BELT	1
19	90513104	COVER	1
20	90513114	SHAFT	1
21	573119-06	BALL BEARING	1
22	90513087	HOUSING	1
23	573119-05	BALL BEARING	1
24	588100-00	NEEDLE BEARING	2
25	90511284	GEAR	1
26	587228-00	DRIVE SHAFT	1
28	587229-00	WASHER,THRUST	1
29	587230-00	WASHER, THRUST	1
30	90514806	DRIVE ROLLER	1
31	90514447	CARRIER ASSY.	1
32	90511522	COMPRESSION SPRING	1

Parts List for BR318-AR Type 1

Item Number	Part Number	Description	Qty Required
33	90513232	HOUSING	1
34	90511244	PLATEN	1
35	588562-01	DUST BAG ASSY	1
36	90513228	FIELD	1
37	90513229	ARMATURE	1
38	330065-01	SCREW	3
39	90513182	SCREW	2
120	90522239	NAME PLATE	1
121	90515485	ID LABEL	1
131	90513247	SANDING BELT	1
800	790206-00	GREASE, 6 OZ.	1