



Parts List for BT1400-B3 Type 2

Item Number	Part Number	Description	Qty Required
1	5140015-01	SCREW	1
2	5140015-02	WASHER,SPRING	1
3	5140015-03	WASHER	1
4	5140015-04	SCREW	1
5	5140015-05	WASHER	1
6	5140015-06	TORSION SPRING	1
7	5140015-07	SHIELD	1
8	5140015-08	SHIELD	1
9	5140015-09	NUT	1
10	5140015-10	SHIELD	1
11	5140015-11	SHIELD	1
12	5140015-12	RING	1
13	5140015-13	SCREW	1
14	5140015-14	SCREW	1
15	5140015-15	DUST EXTRACTION	1
16	5140015-16	SPRING PIN	1
17	5140015-17	SPRING PLATE	1
18	5140015-18	SPRING	1
19	5140015-19	BOLT	1
20	5140015-20	NUT	1
21	5140015-21	SCREW	1
22	5140015-22	BOLT	1
23	5140015-23	OUTER FLANGE	1
24	5140015-24	INNER FLANGE	1
25	5140015-25	SCREW	1
26	5140015-26	COVER,FRONT	1
27	5140015-27	SPINDLE	1

Parts List for BT1400-B3 Type 2

Item Number	Part Number	Description	Qty Required
28	5140015-28	GEAR	1
29	5140015-29	WASHER	1
30	5140015-30	SCREW	1
31	5140015-31	RING	1
32	5140015-32	KEY	1
33	5140015-33	BEARING	1
34	5140015-34	BEARING	1
35	5140015-35	SPRING	1
36	5140015-36	BUTTON	1
37	5140015-37	SPINDLE LOCK	1
38	5140015-38	SCREW	1
39	5140015-39	GEAR CASE	1
40	5140015-40	O-RING	1
41	5140015-41	BEARING	1
42	5140012-95	ARMATURE	1
43	5140015-43	BEARING	1
44	5140015-44	RUBBER SLEEVE	1
45	5140015-45	BAFFLE, FAN	1
46	5140015-46	SCREW	1
47	5140012-97	FIELD	1
48	5140015-48	FIELD CASE	1
49	5140015-49	SCREW	1
50	5140015-50	BRUSH	1
51	5140015-51	BRUSH HOLDER	1
52	5140015-52	SPRING	1
53	5140015-53	SCREW	1
54	5140015-54	SCREW	1

Parts List for BT1400-B3 Type 2

Item Number	Part Number	Description	Qty Required
55	5140015-55	CAP	1
56	5140026-58	NAMEPLATE	1
57	5140015-57	SCREW	1
58	5140015-58	SCREW	1
59	5140015-59	HANDLE & COVER	1
60	5140012-91	CORD & PLUG	1
61	5140015-61	CORD PROTECTOR	1
62	5140015-62	PROTECTOR	1
63	5140015-63	CORD CLAMP	1
64	5140015-64	NUT	1
65	5140015-65	BUFFER	1
66	5140015-66	BUFFER	1
67	5140015-67	CLAMSHELL	1
68	5140015-68	CAPACITOR	1
69	5140017-72	SWITCH	1
70	5140015-70	TRIGGER	1
71	5140015-71	SCREW	1
72	5140015-72	SHIELD	1
73	5140015-73	SHIELD	1
74	5140015-74	TORSION SPRING	1
75	5140015-75	SCREW	1
76	5140015-76	PIVOT PLATE	1
77	5140015-77	BOLT	1
78	5140015-78	SHIELD	1
79	5140015-79	SCREW	1
80	5140015-80	WASHER	1
81	5140015-81	BEVEL KNOB	1

Parts List for BT1400-B3 Type 2

Item Number	Part Number	Description	Qty Required
82	5140015-82	BAFFLE	1
83	5140015-83	NUT	1
84	5140015-84	PIN,SPLIT	1
85	5140015-85	LOCKING PIN	1
86	5140015-86	CAP	1
87	5140015-87	BEVEL SCALE	1
88	5140015-88	TRUNNION	1
89	5140015-89	HANDLE,ADJ.	1
90	5140015-90	STUD	1
91	5140015-91	PIVOT SHAFT	1
92	5140015-92	SCREW	1
93	5140015-93	SPRING WASHER	1
94	5140015-94	WASHER	1
95	5140015-95	BEVEL POINTER	1
96	5140015-96	NUT	1
97	5140015-97	WASHER	1
98	5140015-98	TABLE	1
99	5140015-99	BEVEL POINTER	1
100	5140016-00	DETENT SPRING	1
101	5140016-01	BUTTON	1
102	5140016-02	HANDLE	1
103	5140016-03	SCREW	1
104	5140016-04	CLAMP PLATE	1
105	5140016-05	SCREW	1
106	5140016-06	DETENT PLATE	1
107	5140016-07	KERF PLATE	1
108	5140016-08	WEAR PLATE	1

Parts List for BT1400-B3 Type 2

Item Number	Part Number	Description	Qty Required
109	5140016-09	BASE	1
110	5140016-10	BOLT	1
111	5140016-11	BRACKET	1
112	5140016-12	WRENCH	1
113	5140016-13	CLAMP	1
114	5140016-14	DUST BAG	1
115	5140016-15	BLADE	1
116	HFBT0116-00	SOFT START MODULE	1
117	HFBT0117-00	PADLOCK	1
118	5140042-78	BRAND LABEL	1
119	5140042-79	LABEL	1
120	5140042-81	CAUTION LABEL	1
121	5140042-82	LABEL	1
122	5140042-83	HANDS WARNING	1