

Parts List for BT2000L-B2 Type 1

Item Number	Part Number	Description	Qty Required
1	489290-00	UPPER ARM	1
1	488759-00	DUST FINGER	1
1	489291-00	MOUNTING PLATE	1
1	488766-00	CHEESE HEAD SCREW	1
1	488767-00	RIVET	1
1	490921-00	PAN HEAD SCREW	2
1	489293-00	NOSE COVER	1
1	187819-00	LASER LABEL	1
2	489294-00	LASER	1
2	000000-00	No Longer Available	1
2	489296-00	LOCK NUT	1
2	489297-00	SET SCREW	1
2	490950-00	CARRIAGE	1
2	489299-00	HEX SOC HD SCR	1
2	489300-00	LOCK NUT	1
2	490950-00	CARRIAGE	1
2	187821-00	LABEL	1
3	187813-00	ID LABEL	1
4	187820-00	GUARD LABEL	1
6	488829-00	SCREW	1
6	488910-00	CABLE CLAMP	1
7	000000-00	No Longer Available	1
7	000000-00	No Longer Available	1
8	488771-00	HEX NUT	1
9	488772-00	HEX HEAD SCREW	1
10	488875-00	BEVEL BRACKET	1
13	488874-00	LOCK WASHER	2

Parts List for BT2000L-B2 Type 1

Item Number	Part Number	Description	Qty Required
14	488873-00	HEX SOC HD SCR	2
15	493353-00	SPRING KEEPER	2
16	488792-00	SPRING	1
17	489285-00	WASHER	1
17	000000-00	No Longer Available	1
18	488877-00	HANDLE ASSEMBLY	1
19	488793-00	FLAT WASHER	1
20	488848-00	CHEESE HEAD SCREW	1
21	488794-00	CHEESE HEAD SCREW	1
23	488795-00	PINCH GUARD	1
25	488871-00	LOCK NUT	1
26	488796-00	SHAFT	1
27	491647-00	SCREW	1
28	488806-00	GUARD LINK PLATE	1
28	045687-00	STAR WASHER	1
28	488807-00	FLAT WASHER	1
28	488808-00	LOCK WASHER	1
29	488809-00	SCREW	1
30	488810-00	BUFFER BLOCK	2
31	488879-00	STUD	1
32	488880-00	O-RING	1
33	488811-00	LOCK NUT	1
34	488881-00	E-RING	1
35	488882-00	BEVEL SCALE	1
36	488852-00	RIVET	2
37	488812-00	HEX HEAD SCREW	2
38	488813-00	LOCK WASHER	2

Parts List for BT2000L-B2 Type 1

Item Number	Part Number	Description	Qty Required
39	488772-00	HEX HEAD SCREW	1
40	488771-00	HEX NUT	2
41	490936-00	BRACKET	1
42	488886-00	HEX HEAD SCREW	1
43	488887-00	TRUNNION	1
44	488890-00	STUD	1
44	577627-00	WASHER	4
44	490117-00	SPRING WASHER	2
45	488829-00	SCREW	1
46	488807-00	FLAT WASHER	1
47	489306-00	POINTER	1
48	488845-00	FLAT HEAD SCREW	6
49	489307-00	INSERT	1
50	489308-00	TABLE	1
51	489316-00	HEX SOC HD SCR	1
52	489310-00	SLIDING FENCE	1
53	187822-00	LABEL	1
54	489311-00	RIGHT FENCE	1
55	187811-01	NAME PLATE	1
56	489312-00	HEX SOC HD SCR	4
57	488813-00	LOCK WASHER	4
58	488822-00	FLAT WASHER	4
59	489908-00	CLAMP KNOB	1
60	489909-00	SET SCREW	1
61	489309-00	LEFT FENCE	1
67	488849-00	SPRING PIN	2
68	489313-00	STABILIZER BAR	1

Parts List for BT2000L-B2 Type 1

Item Number	Part Number	Description	Qty Required
69	489314-00	BASE	1
70	488852-00	RIVET	5
71	489315-00	SCALE	1
73	489317-00	POINTER	1
74	489318-00	CLAMP SHAFT	1
75	489319-00	RELEASE SPRING	1
76	489910-00	HANDLE	1
77	490922-00	INDEX HANDLE	1
78	489330-00	LOCK NUT	1
79	489331-00	INDEX PIN	1
80	489330-00	LOCK NUT	1
80	489332-00	NYLON PAD	1
80	489333-00	LOCKING CLAMP	1
80	489334-00	SPRING	1
80	489335-00	INDEX TRIGGER	1
80	489336-00	NYLON INSERT	8
81	000000-00	No Longer Available	1
82	489913-00	FLAT WASHER	1
85	489338-00	PIVOT STUD	1
86	488837-00	WARNING LABEL	2
90	489340-00	SCREW	1
91	489341-00	FLAT WASHER	1
92	489342-00	CLAMP CUP	1
93	489343-00	SUPPORT	1
94	493812-00	SHAFT	1
95	493810-00	KNOB	1
95	489339-00	CLAMP ASSEMBLY	1

Parts List for BT2000L-B2 Type 1

Item Number	Part Number	Description	Qty Required
95	489348-00	SPRING PIN	1
96	489349-00	RETAINER	1
97	489340-00	SCREW	2
104	488912-00	GROMMET	1
105	488913-00	SCREW	2
106	490844-00	CLAMP	1
107	488913-00	SCREW	3
108	90512450	BRUSH	2
109	489357-00	BRUSH HOUSING	2
110	488871-00	LOCK NUT	2
111	489358-00	MOTOR HOUSING	1
111	488911-00	SCREW	3
111	488807-00	FLAT WASHER	3
111	488808-00	LOCK WASHER	1
111	045687-00	STAR WASHER	1
112	187814-01	WARNING LABEL	1
114	90513140	FIELD 230V	1
115	488808-00	LOCK WASHER	2
116	330019-19	SCREW	2
117	90513141	ARMATURE ASSEMBLY	1
118	489159-00	BALL BEARING	1
119	488950-00	BALL BEARING	1
124	489375-00	GEAR HOUSING	1
124	489353-00	COVER	1
124	490923-00	PAN HEAD SCREW	1
124	489355-00	PAN HEAD SCREW	1
125	488957-00	BEARING ROLLER	1

Parts List for BT2000L-B2 Type 1

Item Number	Part Number	Description	Qty Required
126	488958-00	PAN HEAD SCREW	2
127	488953-00	LOCK WASHER	5
128	490924-00SV	JACKSHAFT ASSEMBLY	1
128	488960-00	ARBOR SHAFT	1
128	488961-00	KEY	1
128	488962-00	PLATE	1
128	488963-00	BALL BEARING	1
128	488964-00	BEARING HOUSING	1
128	488965-00	GEAR	1
128	488966-00	STOP RING	1
128	488967-00	STOP RING	1
130	488968-00	RING	1
131	488969-00	WAVE WASHER	1
133	489376-00	END COVER	1
134	489378-00	LOWER HANDLE	1
135	000000-00	No Longer Available	1
136	488974-00	PAN HEAD SCREW	2
137	489379-00	TOP HANDLE	1
138	489919-00	PAN HEAD SCREW	4
138	489382-00	SCREW	3
141	489377-00	JUMPER	1
142	90513135	POWER CORD	1
143	488979-00	WIRE NUT	1
144	000000-00	No Longer Available	1
145	488981-00	TOOTH WASHER	2
150	488895-00	DUST BAG ASSEMBLY	1
151	488823-00	PAN HEAD SCREW	1

Parts List for BT2000L-B2 Type 1

Item Number	Part Number	Description	Qty Required
152	488824-00	BLADE	1
153	488820-00	OUTER FLANGE	2
154	488825-00	ARBOR BOLT	1
155	488867-00	CARRIAGE HEAD SCREW	1
156	490926-00	GUARD SPRING	1
157	90513612	BLADE GUARD	1
158	489385-00	OUTER PLATE ASSY.	1
159	488826-00	GUARD LINKAGE	1
160	488871-00	LOCK NUT	1
161	488905-00	BLADE WRENCH	1
162	488906-00	5MM HEX WRENCH	1
164	489386-00	BRACKET	1
164	489387-00	SWITCH	1
164	489388-00	BATTERY COVER	1
164	489389-00	LEAD WIRE	1
164	490927-00	WIRE NUT	2
164	489390-00	BATTERY SEAT	1
164	489391-00	FLAT HD SCREW	1
164	489392-00	FLAT HEAD SCREW	1
174	187816-00	LABEL	1
180	489394-00	E-RING	2
181	489395-00	SHAFT	1
182	489396-00	EXTENSION WING	2
183	488807-00	FLAT WASHER	4
184	488808-00	LOCK WASHER	4
185	489397-00	CHEESE HEAD SCREW	1
190	489398-00	INSULATOR SLEEVE	1

Parts List for BT2000L-B2 Type 1

Item Number	Part Number	Description	Qty Required
191	489399-00	1/8 HEX WRENCH	1
846	489925-00SV	HARDWARE BAG	1