



Parts List for BV2200-B2 Type 1

Item Number	Part Number	Description	Qty Required
1	5140057-32	CONNECTOR	1
2	5140057-33	SOFT JACKET	1
3	5140057-34	SWITCH ACTUATOR	1
4	5140057-35	SWITCH ASSEMBLY	1
5	5140057-36	SPEED CONTROL	1
6	5140057-37	CAPACITOR	1
7	5140057-38	BELT	1
8	5140057-39	RIGHT HOUSING	1
9	5140057-40	RIGHT HOUSING	1
10	5140057-41	FRONT TUBE ASSY.	1
11	5140057-42	REAR TUBE ASSY.	1
12	5140057-43	AXLE	1
13	5140057-44	WHEEL ASSY.	2
14	5140057-45	LOCK ASSY	1
15	5140057-46	MOTOR ASSY.	1
15	5140062-04	BRUSH	2
15	5140062-05	BRUSH HOLDER	2
16	5140057-47	WASHER	1
17	5140057-48	FAN	1
18	5140057-49	LOCK NUT	1
19	5140057-50	COVER	1
20	5140057-66	POWER CORD	1
21	5140057-52	CORD PROTECTOR	1
22	5140057-53	SCREW	33
23	5140057-54	HOUSING,LEFT	1
24	5140057-55	SWITCH ASSEMBLY	2
25	5140057-56	KNOB,SELECTOR	1

Parts List for BV2200-B2 Type 1

Item Number	Part Number	Description	Qty Required
26	5140057-57	HOUSING,LEFT	1
27	5140057-58	DEFLECTOR	1
28	5140057-59	SCREW	1
29	5140057-60	DUST OUTLET	1
30	5140057-61	DUST BAG ASSEMBLY	1
31	5140057-62	RUBBER WASHER	2