



Parts List for CD1402K Type 1

Item Number	Part Number	Description	Qty Required
2	311978-01	F/R ACTUATOR	1
3	148354-03	BIT CLIP	1
4	497784-37	MOTOR & PINION	1
5	5102940-00	TRANSMISSION	1
6	419233-10	KEYLESS CHUCK	1
7	149518-01	SCREW	1
8	000000-00	No Longer Available	1
10	5102537-01	ID LABEL	1
11	498511-00	SCREW	1
12	311993-00	SCREW	6
14	5101240-00	SPRING PIN	1
866	PS140	14.4V BATTERY	1
871	90500931	CHARGER	1