



Parts List for CD140S Type 3

Item Number	Part Number	Description	Qty Required
1	149518-01	SCREW	1
2	419233-06	KEYLESS CHUCK	1
3	5101240-00	SPRING PIN	1
4	148354-03	BIT CLIP	1
5	311978-01	F/R ACTUATOR	1
6	330019-00	SCREW	6
7	498511-00	SCREW	1
8	5102567-06	MOTOR & GEARBOX	1
9	5102766-20	VSR SWITCH	1
14	5103596-02	CLAMSHELL SET	1
16	5102565-33	NAMEPLATE	1
17	5102537-01	ID LABEL	1
19	5103587-00	BIT HOLDER ASSY	1
23	5100976-00	TERMINAL BLOCK	1
25	5100035-01	SPRING	2
856	71-399	MAG.BIT TIP HOLDER	1
861	497641-05	LATCH	2
861	499124-13	KIT BOX	1
866	HPB14	BATTERY	1
867	5102026-00	BATTERY CAP	1
871	5103069-09	CHARGER ASSY.	1