



Parts List for CD142SK Type 1

Item Number	Part Number	Description	Qty Required
1	149518-01	SCREW	1
2	419233-06	KEYLESS CHUCK	1
3	046376-00	PIN	1
4	148354-03	BIT CLIP	1
5	311978-01	F/R ACTUATOR	1
6	330019-00	SCREW	6
7	498511-00	SCREW	1
8	5102940-00	TRANSMISSION	1
9	5102586-04	VSR SWITCH	1
14	5103596-00	CLAMSHELL	1
15	497785-35	MOTOR & PINION	1
16	5102565-05	NAMEPLATE	1
17	5102537-01	ID LABEL	1
19	5103587-00	BIT HOLDER ASSY	1
856	71-399	MAG.BIT TIP HOLDER	1
861	497641-05	LATCH	2
861	499124-13	KIT BOX	1
866	FSB14	BATTERY	1
867	5102026-00	BATTERY CAP	1
871	90500933	CHARGER	1