



Parts List for CD1440SKA Type 1

Item Number	Part Number	Description	Qty Required
1	90526943	CLAMSHELL SET	1
2	311978-01	F/R ACTUATOR	1
3	148354-03	BIT CLIP	1
4	607918-41	SCREWDRIVER BIT	1
5	90529734	SWITCH VSR	1
6	90529869	MOTOR & GEARBOX	1
8	311993-00	SCREW	4
9	5147554-00	KEYLESS CHUCK	1
10	149518-01	SCREW	1
11	311975-01	TOP,INSERT	1
12	90526938	NAMEPLATE	1
13	497017-23	ID LABEL	1
14	046376-00	PIN	1
15	330019-00	SCREW	2
23	5100976-00	TERMINAL BLOCK	1
861	497641-05	LATCH	2
861	499124-13	KIT BOX	1
866	HPB14	BATTERY	1
867	5102026-00	BATTERY CAP	1
871	90500931	CHARGER	1