



Parts List for CD1800SKA Type 1

Item Number	Part Number	Description	Qty Required
1	5148409-00	CLAMSHELL SET	1
2	311978-01	F/R ACTUATOR	1
3	148354-03	BIT CLIP	1
4	419581-01	BIT	1
5	5148920-00	VSR SWITCH	1
6	5148919-00	MOTOR & GEARBOX	1
9	419233-10	KEYLESS CHUCK	1
10	149518-01	SCREW	1
11	311975-01	TOP,INSERT	1
12	5148407-00	NAMEPLATE	1
13	497017-24	LABEL,ID	1
14	046376-00	PIN	1
23	5100976-00	TERMINAL BLOCK	1
862	000000-00	No Longer Available	1
866	HPB18	BATTERY	1
867	5102026-00	BATTERY CAP	1
871	5103069-10	CHARGER	1