



Parts List for CD180SK Type 1

Item Number	Part Number	Description	Qty Required
1	149518-01	SCREW	1
2	419233-06	KEYLESS CHUCK	1
3	046376-00	PIN	1
4	148354-03	BIT CLIP	1
5	311978-01	F/R ACTUATOR	1
6	330019-00	SCREW	6
7	498511-00	SCREW	1
8	5102940-00	TRANSMISSION	1
9	5102766-22	VSR SWITCH	1
14	5102939-08	CLAMSHELL SET	1
15	5102349-03	DC MOTOR ASM	1
16	5102589-19	NAMEPLATE	1
17	5102537-01	ID LABEL	1
19	5103587-00	BIT HOLDER ASSY	1
856	71-399	MAG.BIT TIP HOLDER	1
861	499124-13	KIT BOX	1
866	HPB18	BATTERY	1
867	5102026-00	BATTERY CAP	1
871	5102767-12	CHARGER	1