



Parts List for CD632K Type 1

| Item Number | Part Number | Description | Qty Required |
|-------------|-------------|---------------------|--------------|
| 1 | 497014-23 | CLAMSHELL SET | 1 |
| 2 | 311978-01 | F/R ACTUATOR | 1 |
| 3 | 148354-03 | BIT CLIP | 1 |
| 4 | 607918-41 | SCREWDRIVER BIT | 1 |
| 5 | 497030-40 | VSR SWITCH | 1 |
| 6 | 497015-01 | TOP COVER | 1 |
| 7 | 311979-00 | SHIFTER BUTTON | 1 |
| 8 | 330013-03 | SCREW | 4 |
| 9 | 330075-26 | KEYLESS CHUCK | 1 |
| 10 | 149518-01 | SCREW | 1 |
| 11 | 311965-01 | SHIFTER WIRE | 1 |
| 12 | 497018-11 | NP:CD632 T1 | 1 |
| 13 | 000000-00 | No Longer Available | 1 |
| 14 | 497025-00 | MOTOR & PINION | 1 |
| 15 | 497026-02 | GEARBOX/CLUTCH | 1 |
| 16 | PS140 | 14.4V BATTERY | 1 |
| 17 | 418352-02 | PS180 14.4V CHARGER | 1 |
| 18 | 330019-00 | SCREW | 2 |
| 19 | 046376-00 | PIN | 1 |
| 861 | 499125-00 | KIT BOX | 1 |