



Parts List for CDC140ASB Type 2

Item Number	Part Number	Description	Qty Required
1	90503056-02	CLAMSHELL SET	1
2	90503047	F/R ACTUATOR	1
3	148354-03	BIT CLIP	1
5	90503088	MOTOR & GEARBOX	1
6	419233-10	KEYLESS CHUCK	1
7	149518-01	SCREW	1
8	90510011	VSR SWITCH	1
9	90501715	NAMEPLATE	1
10	90501711	BRAND LABEL	1
11	5106167-00	SCREW	2
12	311993-00	SCREW	4
13	5146421-00	SCREW	2
14	90503048	REAR COVER	1
15	419581-01	BIT	1
16	5145496-00	SPRING	2
861	90514038	SOFT CARRYING CASE	1
866	HPB14	BATTERY	1
867	5102026-00	BATTERY CAP	1
871	90500931	CHARGER	1
871	5103069-09	CHARGER ASSY.	1