



BOSCH

Circular hand saw

CS10 | 0 601 672 073

Table of Content

Spare parts list.....	2
Illustration - Type.....	4

Illustration - Type - E

0 601 672 062
Issue | 05-09
Stand | 18-10-17

Fig./Abb. 1

