



## Parts List for CS180B Type 1

Item Number	Part Number	Description	Qty Required
1	497492-00	HANDLE ASSY.	1
2	497496-03	CLAMSHELL SET	1
3	498175-00	SHROUD ASSY	1
4	486563-00	SCREW	2
5	497549-00	BAFFLE	1
6	497515-08	SWITCH (ON-OFF)	1
7	000000-00	No Longer Available	1
8	497486-01	PIVOT SCREW	1
9	497525-03	MOTOR & GEARBOX	1
10	497524-00	STOPPER	1
11	497577-00	EYELET	1
12	498156-00	SCREW	1
13	497526-00	SCREW,M4 X 17	10
14	497503-00	CRANK,LOCK-OFF	1
15	497504-02	SPRING,LOCK-OFF	1
16	497476-00	SCREW,BLADE	1
17	497477-00	WASHER,OTR BLD	1
18	340781-30	BLADE 73-280	1
19	497478-01	IN.CLAMP WASHER	1
20	497479-00	RING,RETAINING	1
21	497480-00	GUARD,LOWER	1
22	000000-00	No Longer Available	1
23	98000-09	WRENCH,HEX-4MM	1
24	497550-00	SHOE	1
25	497552-00	KERF INDICATOR	1
26	497551-02	SCREW	1
27	497583-00	PLUG,WRENCH	1

## Parts List for CS180B Type 1

Item Number	Part Number	Description	Qty Required
28	497915-00	KNOB	1
29	497558-00	BOLT	1
30	497898-00	NUT,ACORN	1
31	497576-01	LEVER	1
32	497575-00	E-RING	1
33	5100035-01	SPRING	2
34	497485-00	HEXSCREW,M6X15	1
35	498513-00	WASHER,SPRING	1
39	497472-03	LABEL,IDENT.	1
40	497473-03	NAMEPLATE	1
41	497474-00	LABEL	1
861	5100857-01	STORAGE BAG	1
866	90503508	BATTERY PACK	1
871	5103069-12	CHARGER	1