



## Parts List for DC390K Type 1

Item Number	Part Number	Description	Qty Required
1	650666-00	CLAMSHELL SET	1
1	605059-00	CLAMSHELL SET	1
2	605062-00	COVER,MOTOR	1
3	605063-00	END CAP	1
4	330019-04	SCREW,PLASTITE	8
5	398987-00	SCREW	4
6	619339-00	IDENT. LABEL	1
7	98000-11	WRENCH	1
8	613275-00	TRIGGER SWITCH	1
9	605107-00	LOCK-OFF BUTTON	1
10	330019-40	SCREW	1
11	389120-00	SPRING	1
12	388531-00	PIN	1
13	620354-00	TERMINAL BOARD	1
14	659417-00	SPINDLE ASSEMBLY	1
15	605081-01	GASKET	1
16	613783-00	SCREW	8
17	605094-00	RUBBER WIPER	1
18	629444-00	SPINDLE LOCK	1
19	58698-00	SPRING	1
20	605070-02	UPPER GUARD	1
21	389132-00	BUMPER	1
22	610134-00	SCREW,SHOULDER	1
23	614048-00	SPIRAL PIN	1
24	611925-00	LOWER GUARD	1
25	N035365	TORSION SPRING	1
26	150383-00	RING,RETAINING	1

## Parts List for DC390K Type 1

Item Number	Part Number	Description	Qty Required
27	605076-00SV	SHOE ASSEMBLY	1
28	605105-00	LEVER	1
29	618901-00	SHAFT	1
30	330045-14	SCREW,M5 X 16MM	1
31	142013-00	WASHER	1
32	098128-85	CARRIAGE BOLT	1
33	395889-00	KNOB	1
34	N022876	CARRAIGE BOLT	1
35	381069-00	SET SCREW	1
36	058287-00	SPRING	1
37	396992-02	KNOB	1
38	650109-00	CLMP WASHER IN	1
39	610048-00	OTR CLMP WASHER	1
40	605097-00	BLADE BOLT	1
41	330003-64	BALL BEARING	1
44	605065-00SV	ARMATURE ASSY.	1
45	611202-00SV	MAGNET RING	1
46	610107-00	BEARING SUPPORT	1
47	391032-00	BEARING & BOOT	1
48	610124-00	BAFFLE	1
49	610126-00	BRUSH BOX	2
50	330019-25	SCREW,THD.FORM	2
51	605082-00SV	GEARCASE ASSY	1
52	330045-45	SCREW	4
59	N056524	LEAD ASSY.	1
60	605109-00	LEAD WIRE ASSY	1
70	384127-01	SCREW	3

## Parts List for DC390K Type 1

Item Number	Part Number	Description	Qty Required
71	605064-00	NAMEPLATE	1
800	761995-01	GREASE, 6 OZ.	1
800	283484-01	GREASE,32 OZ.	1
856	628425-00	BLADE	1
856	381091-00	GUIDE,EDGE	1
861	N087498	KITBOX	1
866	DC9096	BATTERY PACK	1
867	645221-00	BATTERY CAP	1
871	388683-12	1 HOUR CHARGER	1