



Parts List for DCS551B Type 2

Item Number	Part Number	Description	Qty Required
1	N401266	HOUSING ASSEMBLY	1
2	N401267	MOTOR & SHAFT ASSY	1
3	389461-00	COMP. SPRING	1
4	N401268	COLLAR ASSEMBLY	1
7	N380688	DETENT SPRING	2
8	N405520	RUBBER SPACER	2
9	389244-00	1/4 COLLET	1
9	389243-00	1/8 COLLET	1
10	389245-00	COLLET NUT	1
11	330019-03	SCREW,PLASTITE	6
12	145312-00	PLUG,RUBBER	6
13	N401269	SWITCH & MODULE	1
14	N324203	SWITCH ACTUATOR	1
15	625759-00	BOOT	1
16	626734-00	EXT RET RING	1
17	389459-00	GUIDE	1
18	389460-00	GUIDE BASE	1
19	045687-00	STAR WASHER	1
20	396992-01	KNOB	1
21	N412815	RATING LABEL	1
22	N389197	IDENT LABEL	1
23	N388450	WARNING LABEL	1
856	391023-00	DRYWALL BIT	1
862	N261499	SOFT BAG	1
866	DCB203	BATTERY PACK	2
871	DCB115	CHARGER	1