









## Parts List for DG3000 Type 1

Item Number	Part Number	Description	Qty Required
1	640043-01	LOWER FRAME	1
2	640045-01	UPPER FRAME	1
3	1000001830	SPREADER BAR	1
4	640939-00	ENGINE	1
6	N000552	FUEL TANK	1
8	1000001769	ALTERNATOR	1
10	637707-00	ISOLATOR	4
11	640062-00	GROMMET	2
12	000000-00	No Longer Available	2
13	640059-00	INSERT	3
14	640058-00	GROMMET	3
18	637767-00	RUBBER SEAL	1
19	645054-00	BOLT,FLANGED	2
20	640060-00	INSERT	2
22	645060-00	BOLT	4
23	A17233	SELF TAPPING SCREW	4
24	000000-00	No Longer Available	2
25	645025-00	BOLT	5
26	645033-00	WASHER	5
27	645024-00	NUT	4
28	330016-04	WASHER	1
29	000000-00	No Longer Available	1
30	644408-00	NAMEPLATE	1
31	330015-08	JAM NUT	1
33	D21172	SCREW .250-20X.500 H	1
35	1000003134	BRACKET	1
36	1000003746	SUPPORT PLATE	2

## Parts List for DG3000 Type 1

Item Number	Part Number	Description	Qty Required
37	000000-00	No Longer Available	1
37	000000-00	No Longer Available	1
38	1000003747	BOLT,FLANGED	4
39	5140070-25	PLUG	1
40	646564-00	WARNING LABEL	1
44	N004046	WARNING LABEL	1
45	SS-6506-CD	WASHER FLAT	1
103	285820-72	FUEL CAP	1
104	285816-33	FUEL FILTER	1
105	285816-35	GAUGE	1
106	285816-21	BOLT	2
107	285818-33	FUEL VALVE	1
107	285816-18	FUEL VALVE	1
108	285816-54	LABEL	1
109	285816-56	ID LABEL	1
110	285816-57	ID LABEL	2
267	GS-0118	STRAP GROUND	1
280	GS-0644	RECEPTACLE GFCI 120V	1
282	GS-0480	RECEPTACLE 125V 20A	1
285	D27260	SWITCH IDLE CONTROL	1
293	641521-03	CIRCUIT BREAKER	1
300	643151-00	PANEL ASSEMBLY	1
321	643315-00	BOLT	1
322	643316-00	NUT	1
323	643317-00	WINGNUT	1
400	285814-00	BOLT	4
401	285814-02	DRAIN PLUG	2

## Parts List for DG3000 Type 1

Item Number	Part Number	Description	Qty Required
402	285814-03	BOLT	1
404	285814-06	BOLT	2
406	285814-07	WASHER	8
407	285814-09	WASHER	2
408	285814-11	SPECIAL NUT	1
409	285814-15	OIL SEAL	2
410	285814-17	DOWEL PIN	2
411	285814-19	DOWEL PIN	2
412	285814-21	BALL BEARING	2
413	285800-98	SPARK PLUG	1
414	285814-24	GASKET	1
415	285814-27	GASKET	1
416	285814-29	CYLINDER HEAD	1
417	285820-77	COVER	1
419	285814-35	CRANK CASE	1
420	285820-65	SWITCH ASSEMBLY	1
421	285814-40	OIL ALERT UNIT	1
422	285814-41	CASE COVER	1
423	285814-44	GASKET	1
424	285814-47	CAP ASSY.	2
427	285814-52	CRANKSHAFT	1
428	285817-20	WOODRUFF KEY	1
429	285814-57	PIN	1
430	285814-60	CLIP	2
431	285814-62	RING SET	1
432	285814-65	CONNECTING ROD	1
433	285814-68	LIFTER	2

## Parts List for DG3000 Type 1

Item Number	Part Number	Description	Qty Required
434	285814-70	PUSH ROD	2
435	285814-73	INTAKE VALVE	1
436	285814-76	VALVE	1
437	285814-79	VALVE SPRING	2
438	285814-83	RETAINER	4
439	285814-84	SEAL	1
440	285814-86	ROTATOR VALVE	2
441	285814-89	CAMSHAFT	1
442	285814-92	PLATE ASSY.	1
443	285814-94	ARM	2
444	285814-99	SHROUD	1
445	285815-02	GASKET	1
446	285815-06	GASKET	1
447	285815-09	CLIP	4
448	285816-30	CLIP	1
450	285815-14	FAN	1
451	285815-17	PULLEY	1
452	285815-20	FLYWHEEL	1
455	285815-25	IGNITION COIL	1
457	285815-29	GASKET	1
458	285815-32	GASKET	1
460	285814-54	PISTON	1
461	285815-38	SPRING	1
462	285815-40	SPRING	1
463	N041178	ARM	1
464	285815-46	SHAFT	1
465	285815-49	LOCK PIN	1



## Parts List for DG3000 Type 1

Item Number	Part Number	Description	Qty Required
466	285815-51	GOVERNOR ASSY.	1
470	N035919	STARTER ASSY.	1
471	285817-34	INSULATOR	1
472	285815-11	CARBURETOR	1
473	285815-65	AIR FILTER	1
474	285815-50	CONTROL ASSY	1
475	285818-19	HOSE	1
476	285815-73	NUT	2
477	285815-74	NUT	8
479	285815-84	BOLT	5
480	285815-85	BOLT	8
482	285815-86	BOLT	3
483	285815-88	BOLT	6
484	285815-90	BOLT	2
486	285815-89	BOLT	1
488	285815-95	HOUSING COVER	1
489	285814-05	BOLT	2
491	285816-03	BLOWER HOUSING	1
493	285816-08	BRACKET	1
494	1000004017	MUFFLER	1
495	285815-36	ROD	1
496	285816-24	STUD	2
497	285816-41	BOLT	1
506	285814-82	RETAINER	2
508	285816-40	CONNECTING WIRE	1
509	285815-92	BOLT	6
510	285817-82	LABEL	1

## Parts List for DG3000 Type 1

Item Number	Part Number	Description	Qty Required
511	285816-43	LABEL	1
512	285816-53	ID LABEL	1
515	1000002765	LABEL	1
517	285816-59	MUFFLER COVER	1
518	285816-60	MUFFLER COVER	1
520	285817-01	BOLT	4
521	1000004021	GASKET	1
522	285816-72	SPARK ARRESTER	1
523	285816-67	BOLT	2
524	285816-76	RATCHET	2
525	285816-77	SPRING	1
526	285816-78	BOLT	1
527	285816-79	SPRING	2
528	285816-80	PULLEY	1
529	285816-81	SPRING	1
530	285816-82	ROPE	1
531	285816-83	CAP ASSY.	1
532	285818-25	AIR FILTER	1
533	285818-25	AIR FILTER	1
534	285817-00	COVER	1
535	285817-14	FLOAT	1
536	285817-10	VALVE	1
537	285818-23	BOWL	1
538	285817-09	PIN	1
539	285817-11	O-RING	1
540	285817-15	NOZZLE	1
541	285817-05	BOLT	1

## Parts List for DG3000 Type 1

Item Number	Part Number	Description	Qty Required
542	285817-06	GASKET	1
543	285820-70	MAIN JET	1
543	285818-73	MAIN JET	1
545	285817-13	LEVER	1
546	285817-07	BOLT	1
547	285817-12	SCREW	1
548	285817-02	SEAL	1
549	285817-08	GASKET	1
552	1349856	PAN HEAD SCREW	1
553	285817-19	SPRING	1
554	285816-06	TUBE	1
555	285817-46	FUEL FILTER	1
559	285818-39	HANDLE	1
560	285815-61	PLATE	1
806	D23215	OIL SAE 10W-30 SJ 32	1