

Parts List for DW130V-AR Type 1

Item Number	Part Number	Description	Qty Required
1	616828-06	FIELD CASE	1
3	624114-00	HANDLE COVER	1
4	622397-01	END CAP	1
5	5140032-53	CHUCK & KEY	1
5	135514-00	CHUCK & KEY	1
7	052819-00	SCREW	2
8	450485-00	GASKET	1
9	447735-02	SCREW	1
10	330003-12	BEARING,BALL	1
11	N209034	GEAR CASE	1
12	623442-00	GEAR CASE COVER ASSY.	1
13	449486-00SV	GEAR & PINION	1
14	449489-00SV	GEAR&SPINDLE	1
15	147195-00	SPINDLE	1
16	655537-00	FAN BAFFLE	1
17	658752-01SV	ARMATURE	1
18	624841-01SV	FIELD	1
19	445217-02	SLEEVE	1
20	616857-00	BRUSH HOLDER	2
21	617848-03	BRUSH	2
22	625228-00	VSR SWITCH	1
24	450877-00	CORD CLAMP	1
25	330080-91	CORD & PLUG	1
26	330019-30	SCREW	4
27	330019-13	SCREW,M4X19	8
28	330019-17	SCREW	2
33	605523-00	ID LABEL	1

Parts List for DW130V-AR Type 1

Item Number	Part Number	Description	Qty Required
34	176951-00	SCREW	2
36	653630-00	NAMEPLATE	1
69	383387-00	SPRING,BRUSH	2
70	625712-00	SIDE HANDLE	1
71	628037-00	SPADE HANDLE	1
72	065288-01	CH KEY HOLDER	1
74	382531-00	KNOB	1
75	330034-03	CHUCK KEY	1
76	616852-00	LEAD WIRE	1
77	616852-01	LEAD WIRE	1
78	616852-02	LEAD WIRE	1
79	616852-03	LEAD WIRE	1
80	616852-04	LEAD	1
83	616852-05	LEAD	1
100	330004-02	BEARING,NEEDLE	3
101	135937-00	BEARING,ROLLER	1
102	330003-09	BEARING,BALL	1
103	91286-00	PIN	2
104	400147-00	GEAR	1
105	007027-00	KEY	1
106	330003-04	BEARING,BALL	1
107	464230-00	TERMINAL	2
108	330005-01	PROTECTOR,CORD	1
109	147196-00	SPACER	1
110	449493-00	BEARING, NEEDLE	1
111	99371-06	NUT	1
112	623785-00	CAP	1

Parts List for DW130V-AR Type 1

Item Number	Part Number	Description	Qty Required
800	429698-00	GREASE:4 LB CAN	1
836	233804-33	SRT PRESS PLATE	1