



Parts List for DW476-AR Type 2

Item Number	Part Number	Description	Qty Required
1	574370-08	ARMATURE	1
2	949406-07	FIELD	1
3	949825-04	SWITCH,LOCK-ON	1
4	403485-03	BRUSH	2
5	937139-00	CABLE	1
6	931771-00	FLANGE	1
7	933058-00	SCREW	3
8	932369-00	WASHER	3
9	930927-00	FLANGE	1
10	860083-03	NUT	1
11	930925-00	WASHER	1
12	930929-00	FLANGE,GUARD	1
13	949892-07	SCREW	1
14	932525-02	7IN GUARD	1
15	330024-14	SCREW,PLASTIC	4
16	947962-00	COVER,GEARCASE	1
17	578243-00	SPINDLE	1
18	574853-11	BEARING	1
19	930924-00	FLANGE	1
20	930923-00	RING,-V-	1
21	930922-00	SPACER	1
22	932576-00	GEAR & PINION	1
23	930930-00	SCREW	4
24	401048-00	GEARCASE ASSY	1
25	937098-49	CLIP,RETAINING	1
26	930909-00	WASHER,FELT	1
27	574853-09	BEARING	1

Parts List for DW476-AR Type 2

Item Number	Part Number	Description	Qty Required
28	931067-00	WASHER,FELT	1
29	931062-00	SPACER	1
30	930028-00	RING, O	1
31	931066-00	FLANGE	1
32	938331-00	SPACER	1
33	330003-36	BEARING,BALL	1
34	938332-00	COVER,BEARING	1
35	933499-00	HANDLE,SIDE	1
36	000000-00	No Longer Available	2
37	402808-00	BAFFLE	1
38	949405-03	BRUSH PLATE	1
39	402816-00	SPRING,BRUSH	2
40	576184-02	FIELD CASE	1
41	N097875	HANDLE & COVER	1
42	933364-02	COVER,BRUSH	2
43	930934-00	ABSORBER,SHOCK	4
44	947964-01	PROTECTOR,CORD	1
45	931297-00	SCREW	4
46	931469-02	SCREW	1
47	930284-01	SCREW	2
48	931477-00	CLAMP,CORD	1
49	938733-00	WRENCH	1
50	807043-00	WRENCH	1
51	403462-00	LEAD	2
800	575762-02	GREASE	1