





Parts List for DW618 Type 2

Item Number	Part Number	Description	Qty Required
1	396310-00	MOTOR HOUSING	1
2	146555-01	BEARING, BALL	1
3	394219-00	CLAMP NUT	1
4	N577846	ARMATURE ASSEMBLY	1
5	330045-45	SCREW	3
6	399064-00	TOGGLE SWITCH	1
7	399028-00	SWITCH BOOT	1
8	397500-00	RECEPTACLE	1
9	397501-00	WIRE GUARD	1
10	N471112	END CAP	1
11	033055-00	PLUG	1
12	330045-09	SCREW	4
13	150036-00	SCREW,GROUND	1
14	399063-02	CORD SET	1
15	605040-20	BALL BEARING	1
16	053650-03	TERMINAL	1
17	608552-00	GROUND WIRE	1
19	N473422	BRUSH RING ASM	1
20	398139-01	BRUSH ASSY.	2
21	397569-01SV	FIELD	1
22	330019-27	SCREW,TORX	2
23	398216-00	FIELD CASE	1
24	326286-04	COLLET & NUT	1
24	326286-03	COLLET & NUT	1
25	399068-00	WRENCH	1
26	N473432	RATING LABEL	1
27	399029-00	MAGNET RING	1

Parts List for DW618 Type 2

Item Number	Part Number	Description	Qty Required
28	5140028-50	SPINDLE LOCK COVER	1
29	658797-00	SPINDLE LOCK BUTTON	1
30	400001-00	COMP. SPRING	1
32	N530573	CONTROL MODULE ASSY	1
34	607523-00	SUB BASE ALIGN. CONE	1
35	607522-00	BASE ALIGN. SHAFT	1
36	607545-00	TERMINAL	1
38	N488748	WHITE LEADWIRE	1
39	N488749	RED LEAD WIRE	1
40	882185	SCREW MACHINE STEEL	1
100	396308-00	FIXED BASE	1
101	330041-45	ROLL PIN	3
102	397560-00	KNOB	2
103	607395-00	SCREW	2
104	098197-09	LOCKWASHER	2
105	397531-01	SUB BASE	1
105	397531-00	SUB BASE	1
106	609842-00	SCREW	4
107	397503-00	CLAMP LEVER	1
108	397504-00	THREADED ROD	1
109	330021-01	NUT,STOP	1
110	606623-00	SPACER	1
111	397406-00	LATCH RELEASE	2
112	397411-00	SPRING	2
113	330041-44	ROLLER PIN	2
114	397450-00	ID LABEL	1
115	397451-00	LABEL	1

Parts List for DW618 Type 2

Item Number	Part Number	Description	Qty Required
116	396311-00	ADJUSTING RING	1
117	N398134	ADJUSTING RING	1
862	N037466	TOOL BAG	1