



Parts List for DW680-BR Type 1

Item Number	Part Number	Description	Qty Required
1	327403-03	ARMATURE	1
2	373874-09	FIELD	1
3	327383-03	SWITCH ASSY.	1
4	575963-02	BRUSH & HOLDER	1
7	770235	CORD PROTECTOR	1
8	329301-00	CLAMP,CORD	1
9	330065-06	SCREW	2
10	320340-00	LEAD	1
12	323635-16	LEAD	2
13	326592-00	CAP	1
14	328772-00	NUT	1
15	326590-01	BASE	1
16	326589-06	SCALE	1
17	326381-01	RATCHET	1
18	327344-00	WASHER,SPRING	1
19	328509-04	MOTOR HSG/SHOE	1
20	326388-00	COVER,BRUSH	1
21	326636-00	POST	2
22	330065-08	SCREW	16
25	323722-00	SPRING	1
26	326823-01	BUSHING	1
27	326519-01	SCREW	1
30	578758-00	IDENT. LABEL	1
32	572255-00	SPRING	1
34	870052-00	BEARING COVER	1
35	330003-31	BEARING,BALL	1
37	326389-00	BAFFLE	1

Parts List for DW680-BR Type 1

Item Number	Part Number	Description	Qty Required
40	327420-00	HOUSING,BEARING	1
41	330003-21	BEARING,BALL	1
42	330003-03	BEARING,BALL	1
43	329142-00	PULLEY	1
44	329141-00	PULLEY	1
45	329140-00	BELT	1
47	329273-00	BELT COVER	1
48	326385-01	COVER,HANDLE	1
58	326573-01	SCREW,WING	1
59	326398-01	FENCE	1
64	327052-00	RABBET COVER	1
65	330004-25	BEARING,NEEDLE	1
67	330065-04	SCREW	2
68	330065-02	SCREW	2
69	327417-00	INSULATOR	1
71	320867-00	LEAD	1
72	326635-01	STAND	1
73	574523-00	SCREW	6
75	326586-00	OUTER CLAMP	2
76	574524-00	SCREW	4
77	326588-01	CLAMP	2
78	573732-00	RETAINER	2
79	1009101-00	BLADE DRUM ASSY	1
82	322929	HEX KEY	1
85	327058-01	GAUGE	1
89	574541-00	HEX KEY	1
97	571497-00	CLIP	1

Parts List for DW680-BR Type 1

Item Number	Part Number	Description	Qty Required
108	575963-02	BRUSH & HOLDER	1
109	329775-49	BR.HOLDER,PAIR	1
110	330065-13	SCREW	1
821	569037-00	RATING PLATE	1