



## Parts List for DW882 Type 1

Item Number	Part Number	Description	Qty Required
1	868430-01	ARMATURE	1
2	868531-00	FIELD	1
3	949825-07	SWITCH,TRIGGER	1
4	940160-00	BRUSH	1
4	940160-00	BRUSH	1
5	444518-98	CORD/10FT./16-3	1
6	931073-00	BAFFLE	1
7	931421-00	SCREW	2
8	935746-00	HOLDER,BRUSH	1
9	931076-00	SPRING,BAFFLE	2
10	948134-08	FIELD CASE	1
11	930934-00	ABSORBER,SHOCK	4
12	931297-00	SCREW	4
13	N097875	HANDLE & COVER	1
14	930284-01	SCREW	2
16	46629-01	CONNECTOR	1
17	947964-01	PROTECTOR,CORD	1
18	931477-00	CLAMP,CORD	1
19	931469-02	SCREW	4
20	861721-12	BEARING	2
21	930594-00	WASHER	2
22	937986-00	GEAR	1
23	12952-00	WASHER	1
24	930834-00	WASHER	1
25	860085-09	SCREW	1
26	937984-01	COVER,GEAR CASE	1
27	939484-00	TERMINAL	1

## Parts List for DW882 Type 1

Item Number	Part Number	Description	Qty Required
28	931798-00	WASHER	1
29	931797-00	SCREW	1
30	330003-13	BEARING,BALL	1
31	931067-00	WASHER,FELT	1
32	931062-00	SPACER	1
33	930028-00	RING, O	1
34	931066-00	FLANGE	1
35	938331-00	SPACER	1
36	330003-36	BEARING,BALL	1
37	938332-00	COVER,BEARING	1
38	8535-01	NUT	1
39	939547-00	FLANGE,OUTSIDE	1
40	8899-00	RING	1
41	939519-00	FLANGE,INSIDE	1
42	000000-00	No Longer Available	2
43	930614-00	RING,SPRING	1
44	37667-01	NUT,WING	2
45	400731-00	WHEEL GUARD	1
46	937982-01	SHAFT	1
47	940441-00	KEY	1
48	948122-03	CASE W/GRIP,GR	1
49	940267-00	SCREW	4
51	933364-02	COVER,BRUSH	2
52	930248-00	WASHER	4
53	940443-00	GASKET	1
54	939488-00	ABSORBER,SHOCK	2
55	939955-00	SPACER	1

## Parts List for DW882 Type 1

Item Number	Part Number	Description	Qty Required
57	944562-00	PLATE,INSUL.	1
58	946157-00	LABEL,ID	1
59	403212-00	NAMEPLATE	1
60	57756-00	WHEEL,STR.6X1	1
61	939948-00	WRENCH	1