

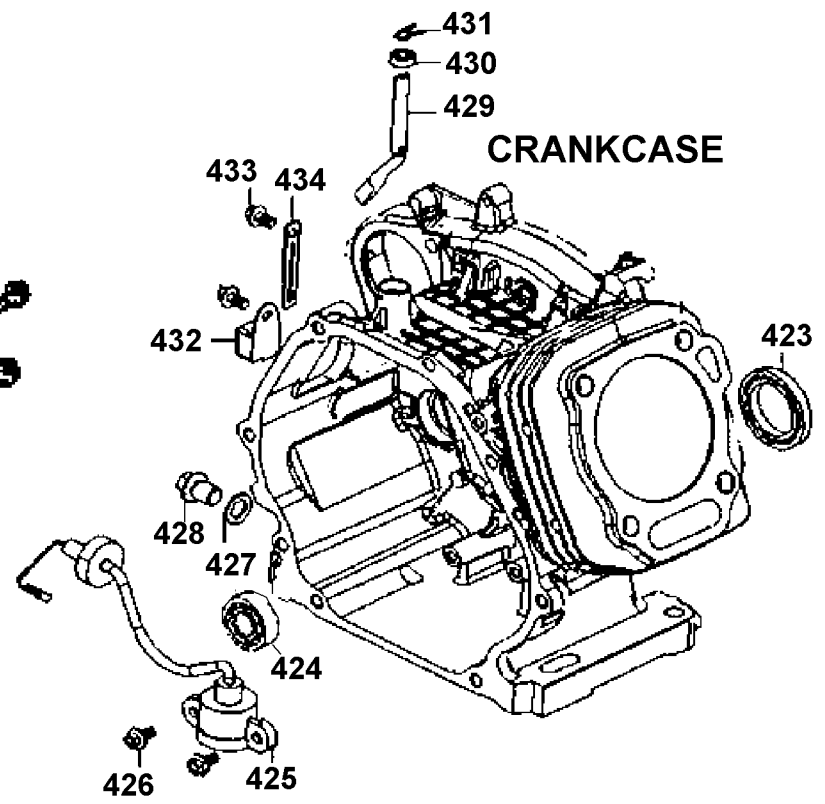



PISTON/CONNECTING ROD

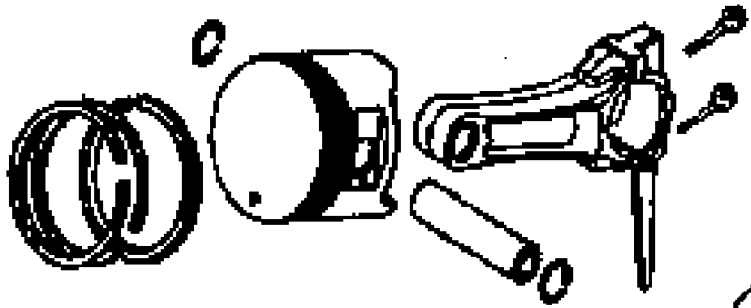


CRANKCASE

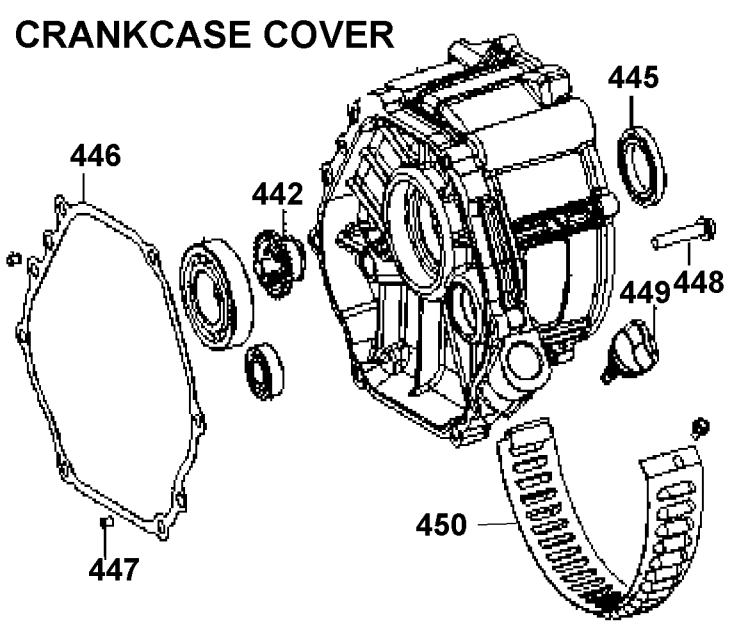


CRANKCASE COVER

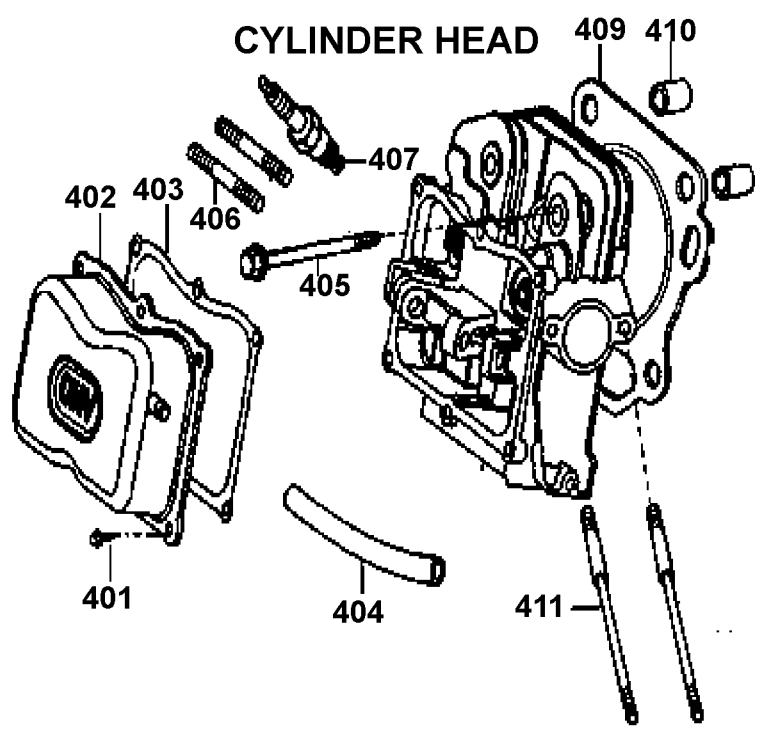


CYLINDER HEAD




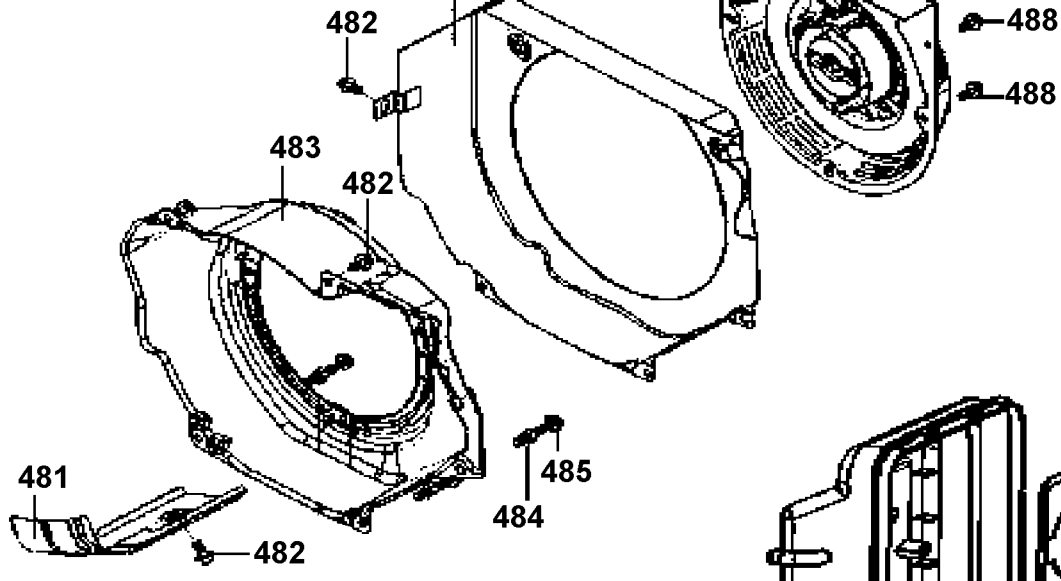


AIR CLEANER

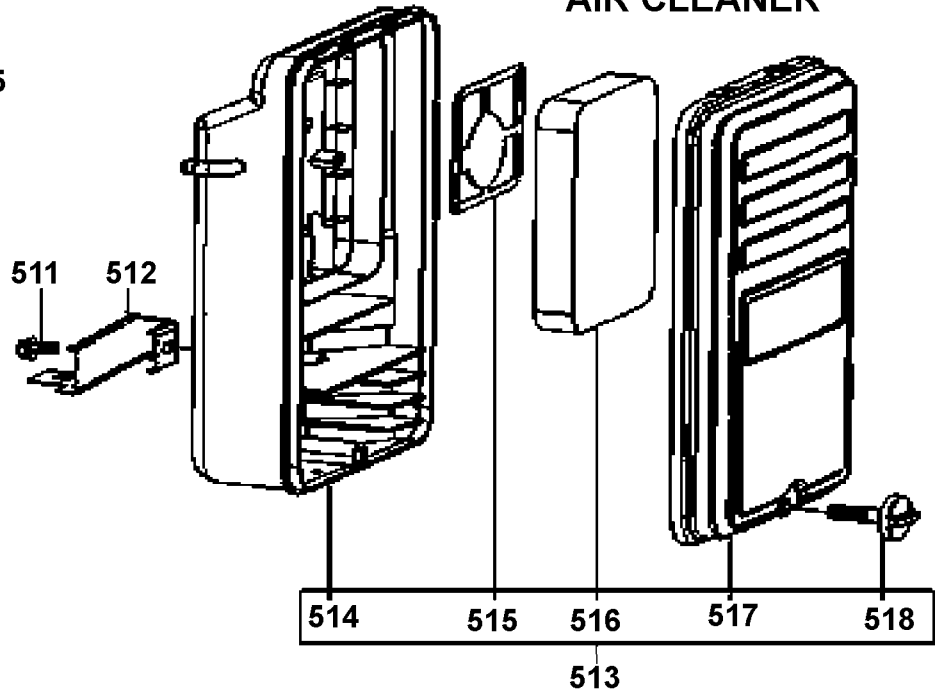

CAMSHAFT/ROCKER ARM ASSEMBLIES

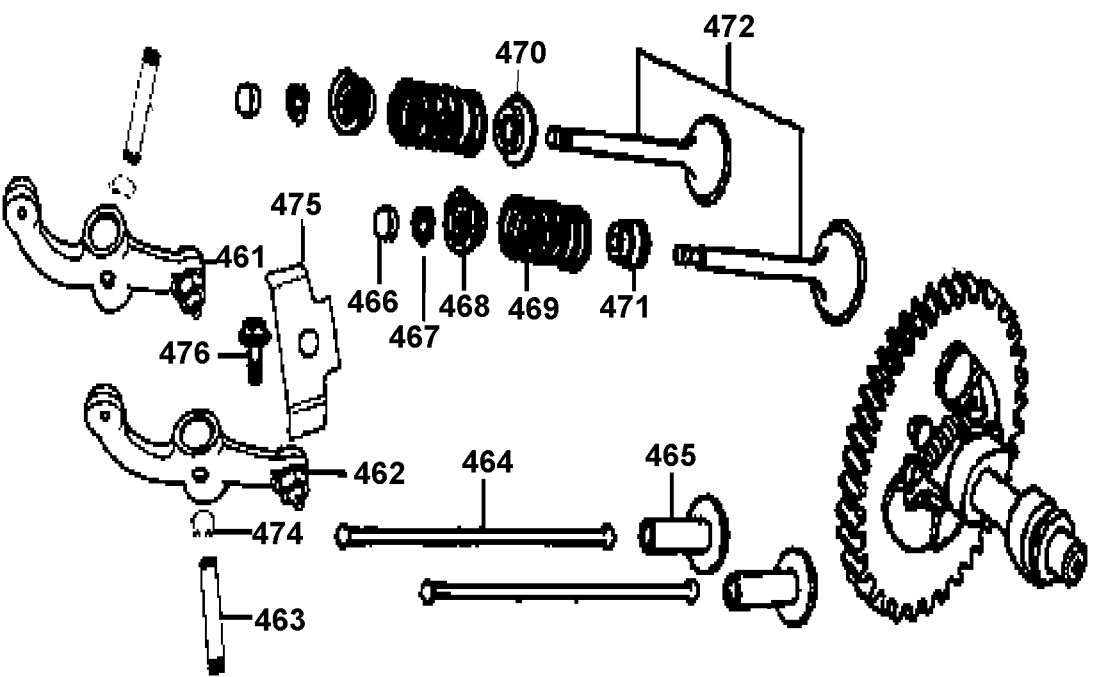

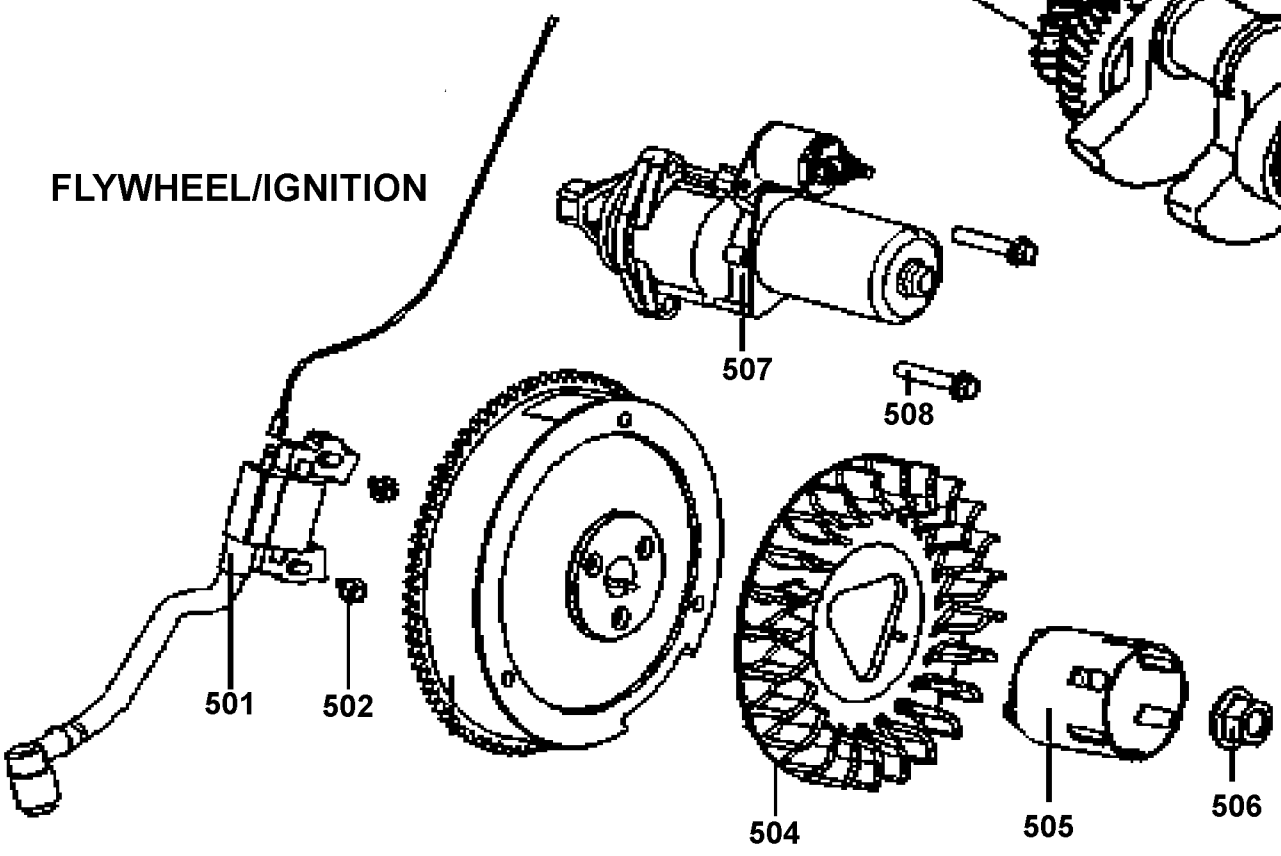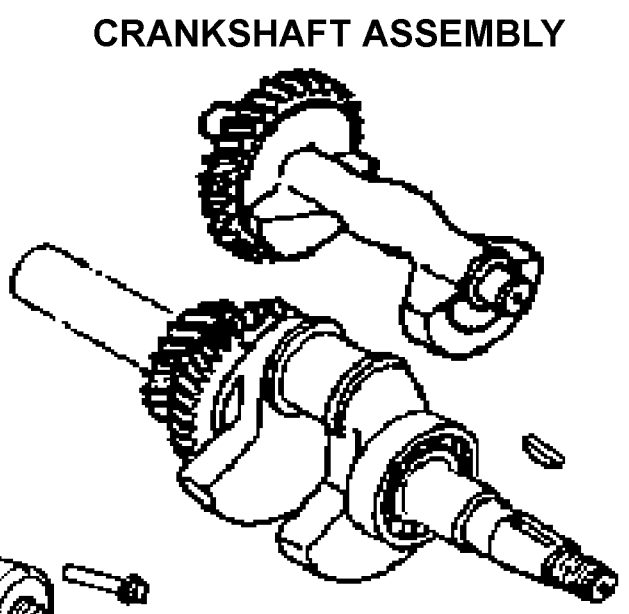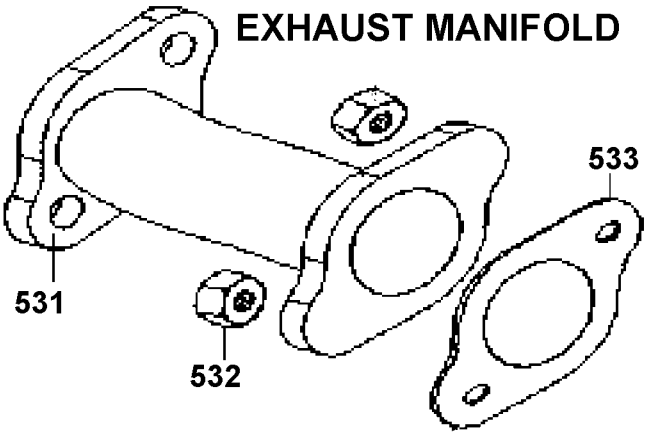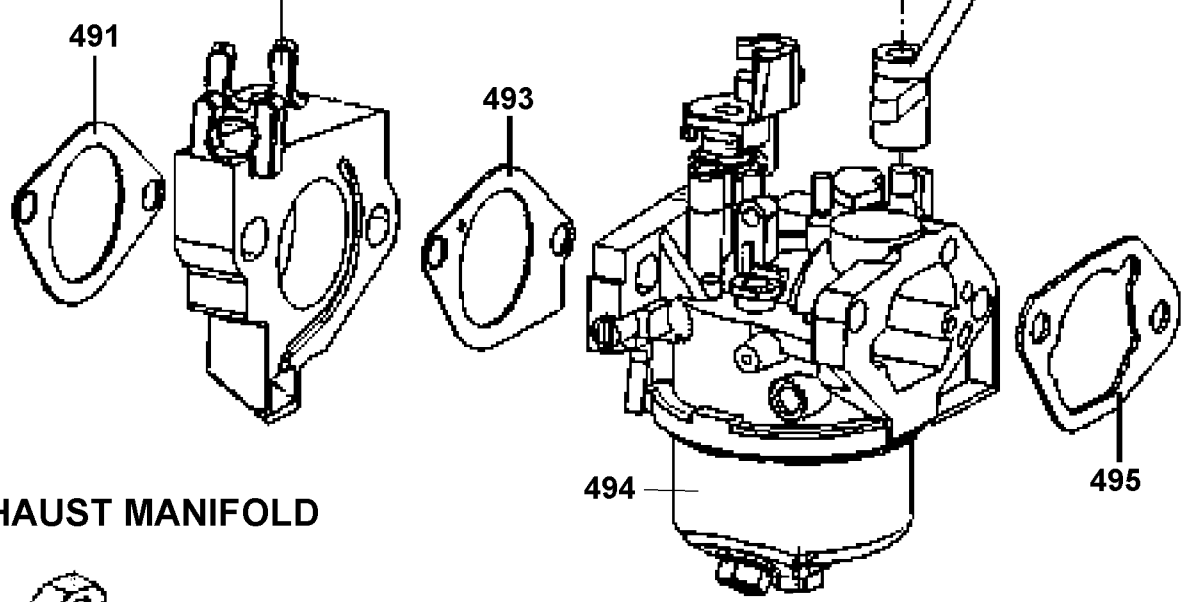

Parts List for DXGNR7000 Type 0

Item Number	Part Number	Description	Qty Required
1	5140174-89	FRAME RAIL	1
2	5140174-90	PAN HEAD SCREW	12
3	5140174-91	CURVED HEAD BOLT	6
4	5140174-92	CONTROL PANEL ASSY	1
5	5140174-93	OUTLET COVER	1
6	5140174-94	NUT	2
7	5140192-78	FACE PLATE	1
8	5140174-96	IDLE SPEED CONTROL	1
9	5140174-97	NUT	2
10	5140174-98	RECEPTACLE	1
11	5140174-99	NUT	10
12	5140175-00	CIRCUIT BREAKER	2
13	5140175-01	CIRCUIT BREAKER	2
14	5140175-02	BACK COVER	1
15	5140175-03	POWERBAR Y20 ASSY.	1
16	5140175-04	RECEPTACLE	2
17	5140175-05	IDLE SPEED SWITCH	1
18	5140175-06	ON/OFF SWITCH	1
19	5140175-07	BATTERY CHARGER SOC.	1
20	5140175-08	OUTLET COVER	2
21	5140175-09	NUT	4
22	5140175-10	COVER	1
23	5140175-11	BOLT	3
25	5140175-13	HANDLE PLUG	2
26	5140175-14	HANDLE	1
27	5140175-15	SNAP BUTTON	1
28	5140175-16	HANDLE BRACKET	1

Parts List for DXGNR7000 Type 0

Item Number	Part Number	Description	Qty Required
29	5140175-17	BOLT	5
30	5140175-18	CARRIAGE HEAD	2
31	5140175-19	FRAME	1
32	5140175-20	NUT	15
33	5140175-21	NUT	4
34	5140175-22	ISOLATOR	4
35	5140175-23	FRAME	2
36	5140175-24	RUBBER FOOT	2
37	5140175-25	SOCKET HEAD CAP SCRE	2
38	5140175-26	AXLE PIN	1
39	5140175-27	AXLE BLOCK	2
40	5140175-28	BOLT	4
41	5140175-29	WHEEL ASSEMBLY	2
42	5140175-30	FLAT WASHER	2
43	5140175-31	COTTER PIN	2
44	5140175-33	BOLT	1
45	5140175-34	LOCK WASHER	1
46	5140175-35	NUT	2
47	5140175-36	FLAT WASHER	1
48	5140175-37	NUT	1
49	5140175-38	GROUND WIRE ASSY	1
50	5140175-39	BAFFLE	1
51	5140175-40	ROTOR/STATOR ASSY.	1
52	5140175-41	BRUSH ASSEMBLY	1
53	5140175-42	WIRE-CONNECTION	1
54	5140175-43	FLAT WASHER	1
55	5140175-44	STATOR BOLT	2

Parts List for DXGNR7000 Type 0

Item Number	Part Number	Description	Qty Required
56	5140175-45	VOLTAGE REGULATOR	1
57	5140175-46	END COVER	1
58	5140175-47	BOLT	8
59	5140175-48	BOLT	3
60	5140175-49	ROTOR BOLT	1
61	5140175-50	STATOR BOLT	4
62	5140175-51	BEARING HOUSING	1
63	5140175-52	MOUNT,RUBBER	4
64	5140175-53	INSERT	4
65	5140175-54	BOLT	4
66	5140175-55	FUEL FILTER	1
67	5140175-56	FUEL CAP	1
68	5140175-57	FUEL SENSOR	1
69	5140175-58	CROSS HEAD SCREW	2
70	5140175-59	FUEL TANK	1
71	5140175-60	FUEL SHUT OFF VALVE	1
72	5140175-61	ROLL OVER VALVE	1
73	5140175-62	FRAME	1
74	5140175-63	BOLT	2
75	5140175-64	GASKET	1
76	5140175-65	MUFFLER	1
77	000000-00	No Longer Available	1
78	5140175-67	BOLT	2
79	5140175-68	HOSE	1
80	5140175-69	HOSE CLAMP	3
81	5140175-70	HOSE CLAMP	1
82	5140175-71	HOSE	1

Parts List for DXGNR7000 Type 0

Item Number	Part Number	Description	Qty Required
83	5140175-72	CARBON CANISTER	1
84	5140175-73	BRACKET	1
85	5140175-74	LIMIT BOARD	1
86	5140175-75	BRACKET	1
87	5140175-76	BOLT	4
88	5140175-77	FUEL HOSE	1
89	5140175-78	FUEL FILTER	1
90	5140175-79	FUEL HOSE	1
91	5140175-80	HOSE CLAMP	4
93	5140175-81	STARTER MOTOR	1
94	5140175-82	STARTER RELAY	1
95	5140175-83	TWO HEADED BOLT	1
96	5140175-84	COVER	1
97	5140175-85	EXHAUST MANIFOLD	1
98	5140175-86	NUT	2
99	5140175-87	GASKET	1
100	5140175-88	BRACKET	1
101	5140175-89	ALTERNATOR SCROLL	1
102	5140175-90	BOLT	1
103	5140175-91	BATTERY CABLE	1
104	5140175-92	BATTERY CABLE	1
105	5140175-93	NUT	2
106	5140175-94	BATTERY CHARGER	1
107	5140175-95	CABLE CLEAT	1
108	5140175-96	PAN HEAD SCREW	1
109	5140208-86	ENGINE	1
401	5140207-80	FLANGE BOLT	6

Parts List for DXGNR7000 Type 0

Item Number	Part Number	Description	Qty Required
402	5140207-81	HEAD COVER	1
403	5140207-82	GASKET	1
404	5140207-83	BREATHER TUBE	1
405	5140207-84	HEAD BOLT	4
406	5140207-85	STUD BOLT	2
407	5140207-86	SPARK PLUG	1
409	5140207-87	GASKET	1
410	5140207-88	DOWEL PIN	2
411	5140207-89	BOLT	2
423	5140207-90	OIL SEAL	1
424	5140207-91	BALL BEARING	1
425	5140207-92	SWITCH ASSEMBLY	1
426	5140207-93	FLANGE BOLT	2
427	5140207-94	WASHER	1
428	5140207-95	BOLT	1
429	5140207-96	SHAFT	1
430	5140207-97	OIL SEAL	1
431	5140207-98	LOCK PIN	1
432	5140207-99	OIL ALERT UNIT	1
433	5140175-11	BOLT	1
434	5140175-95	CABLE CLEAT	1
442	5140208-02	GOVERNOR	1
445	5140207-90	OIL SEAL	1
446	5140208-04	GASKET	1
447	5140207-88	DOWEL PIN	2
448	5140208-06	FLANGE BOLT	1
449	5140208-07	CAP ASSEMBLY	1

Parts List for DXGNR7000 Type 0

Item Number	Part Number	Description	Qty Required
450	5140175-89	ALTERNATOR SCROLL	1
461	5140208-09	ROCKER ARM	1
462	5140208-10	ROCKER ARM	1
463	5140208-11	SHAFT	2
464	5140208-12	PUSH ROD	2
465	5140208-13	VALVE LIFTER	2
466	5140208-14	VALVE DISC	2
467	5140208-15	VALVE RETAINER	4
468	5140208-16	SPRING RETAINER	2
469	5140208-17	SPRING	2
470	5140208-18	SPRING SEAT	1
471	5140208-19	VALVE SEAL	1
472	5140208-20	VALVE SET	1
474	5140208-21	CIRCLIP	4
475	5140208-22	RETAINER	1
476	5140175-11	BOLT	1
481	5140208-24	SHROUD	1
482	5140175-11	BOLT	6
483	5140208-35	BLOWER HOUSING	1
484	5140208-36	STUD BOLT	3
485	5140175-35	NUT	3
486	5140208-38	COVER	1
487	5140208-39	STARTER	1
488	5140208-40	FLANGE BOLT	3
491	5140208-41	VALVE SEAL	1
492	5140208-42	SPRING	1
493	5140208-43	GASKET	1

Parts List for DXGNR7000 Type 0

Item Number	Part Number	Description	Qty Required
494	5140208-44	CARBURETOR	1
495	5140208-45	GASKET	1
501	5140208-46	IGNITION COIL	1
502	5140208-47	FLANGE BOLT	2
504	5140208-49	FAN	1
505	5140208-50	STARTER ASSY	1
506	5140208-51	FLANGE NUT	1
507	5140208-52	STARTER ASSY	1
508	5140208-53	FLANGE BOLT	2
511	5140175-11	BOLT	1
512	5140175-88	BRACKET	1
513	5140208-56	AIR CLEANER	1
514	5140208-57	ELBOW	1
515	5140208-58	SILENCER	1
516	5140208-59	AIR CLEANER	1
517	5140208-60	COVER	1
518	5140208-61	FASTENER	1
521	5140175-11	BOLT	2
522	5140208-63	CONTROL ASSY	1
523	5140208-64	ADJUSTING SPRING	1
524	5140208-65	SCREW	1
525	5140208-66	GOVERNOR	1
526	5140208-67	GOVERNOR	1
527	5140208-68	GOVERNOR	1
528	5140208-69	GOVERNOR	1
529	5140208-70	SOLENOID	1
531	5140175-85	EXHAUST MANIFOLD	1

Parts List for DXGNR7000 Type 0

Item Number	Part Number	Description	Qty Required
532	5140175-86	NUT	2
533	5140175-87	GASKET	1