
Tanaka.

Parts Catalog

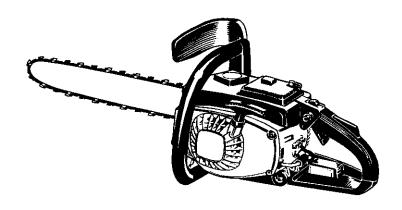

Chain Saw

Model: ECS-4000/B

Part # 11840 9-26-97

ECS-4000/B **OPTIONS AND ACCESSORIES**

 
BARS & CHAINS



16 In. Chain 33SL066X 18 in. Chain 33SL072X


16 In. Bar 160PXBK041 18 In. Bar 180PXBK041

16in, Bar/Chain Kit 844003 18in. Bar/Chain Kit 844008



DEPTH GUAGE CDG-600


PERFECT MIX® 2-Cycle Engine Oil

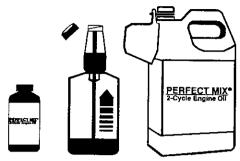

700109 2.8 oz. Bottle, 1 Gallon Size (24*) 700108 16 oz. Self-measuring Bottle (24*) 700110 1 Gallon Jug Commercial Size (6*) * Case Quantity



 FILE ASS'Y 5/32



FLAT FILE 8" CSF-800

Clutch Remover

Tachometer

SPECIAL TOOLS

MANUALS & CATALOGS

Owner's Manual

Parts Catalog

006-29326-000 Flywheel Remover 890-32600-200 009-29323-500 Piston Pin Remover 001-29000-000 Screw Gear Remover 070-2000W-500 Pressure Tester 898-20000-900 002-29323-501 **Screw Gear Inserter** 070-2000W-501 Carb. Tool Kit

24785

11840


 


FIG.1 ENGINE

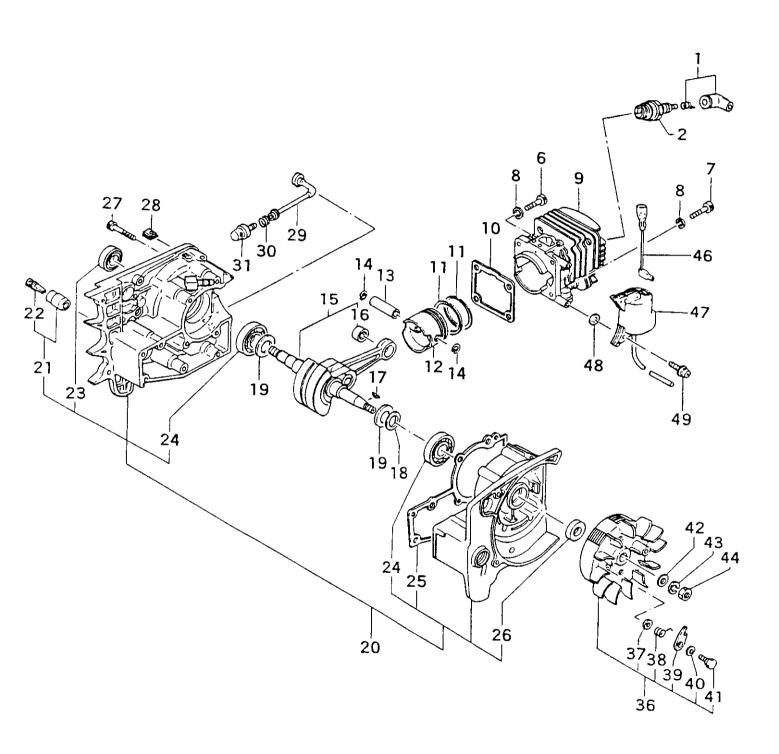

5==	DAD=::=	EC3-4000/B F		, .	_		
REF.		PART DESCRIPTION		С		SERIAL NO	REMARKS
1	157-11666-900	CAP,SPARK PLUG ASS'Y	1	}	С		
2	018-11660-21	PLUG,SPARK	1		В		
6	990-51050-183	BOLT,HEX,5X18	2		D		
7	990-51050-223	BOLT,HEX,5X22	2		С		
8	992-10050-012	WASHER,S,5	4		Α		
9	002-04040-202	CYLINDER	1		D		
10	017-04090-210	GASKET,CYLINDER	1		D		
11		RING, PISTON	2		Α		
12	031-04050-200	PISTON	1		D		
13	037-01400-200	PIN,PISTON	1		С		
1	039-00000-201	CIRCLIP, PISTON PIN	2		A		
15	046-04069-800	CRANKSHAFT	1		D		
	0 10 0 1000 000		'				
16	999-62091-325	BEARING,NEEDLE,F-910			D		
17		KEY,WOODRUFF,3X13X4.5	1		C		
18	071-02007-200		1				
1		SHIM,15.2X20X.05	٧	ĺ	D		
18	071-02007-210	SHIM,15.2X20X.10	٧		D		Shims are "as needed" to obtain
18	071-02007-220	SHIM,15.2X20X.15	٧		D		correct c/s side clearance.
18	071-11600-230	SHIM,16X21X.20	٧		D		
1		SHIM,16X21X.30	٧	1	D		
1		WASHER, CRANKSHAFT 15X22	2		D		
1	072-04080-920	CRANKCASE,ASS'Y	1		D		Includes bearings, seals and gasket
1		HOLDER, VALVE, ASS'Y	1		D		
1	562-04060-200	VALVE,AIR VENT,B	1		С		
23	999-66152-511	SEAL,OIL,#VE15X25X7	1		Α		
				- 1	ļ		
24	999-61620-200	BEARING,BALL,#6202	2		В		
25	090-04060-202	GASKET,CASE,CRANK	1		D		
26	999-66122-240	SEAL,OIL,#12227	1		Α		
27	990-51050-303	BOLT,HEX,5X30	8		D		
28	488-32530-202	GROMMET,OIL ADJUST	1		D		
29	505-32530-220	1	1		D		
		·, - · -, -	.				
30	680-04019-210	CLIP.7	1		в		
31		BODY,OIL FILTER ASS'Y	4		D		
		ROTOR,MAGNETO	1		D		
37		WASHER, RECOIL STARTER	2		- 1		
38		SPRING, STARTER PAWL			D		
39		PAWL,STARTER	2		D	:	
39	/ 50-00001-203	FAVVL,STANTEN	2		Α		
40	922 00601 200	CHIM 7V11 0V 60					
1		SHIM,7X11.8X.60	2	1	C		
		BOLT,STEP	2		C		
42	992-01070-011	WASHER,7	1		D		
L	<u></u>						


^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIGURE 1 cont.

REF.	PART NO.	PART DESCRIPTION	Q	С	s	SERIAL NO.	REMARKS
43	992-10070-012	WASHER,S,7	1		D		
44	066-01800-200	NUT,FLYWHEEL	1		D		
46	178-04080-800	CORD,STOP	1		D		
47	167-21952-800	COIL,IGNITION	1		c		
48	182-0186A-201	WASHER, SPECIAL	2		D		
49	994-16040-226	SCREW,WS,4X22	2		D		
						:	

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.2 ENGINE COMPONENTS

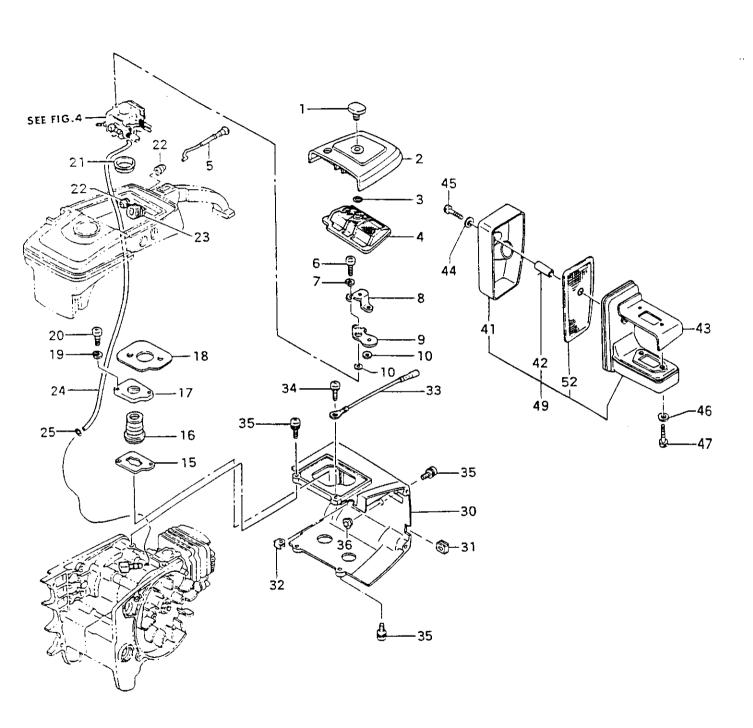

REF.	PART NO.	PART DESCRIPTION				SERIAL NO	REMARKS
		KNOB,CLEANER	1		0	OLITIAL NO.	REMARKS
	!	•			ם		
3		' '	1		C		
4		•	1		С		
5	704-32540-800	BUTTON,CHOKE	1		D		
6	990-11050-401	SCREW,5X40	2		С		
7	992-10050-012	WASHER,S,5	2		Α		
8	476-04060-200	BOARD,BLOW OVER CHECK	1		D		
9	700-32540-200	VALVE,CHOKE	1		C		
10	708-32350-200	SHIM,5.2X8X.80	2		C		
15	403-04080-200	GASKET,INTAKE MANIFOLD	1	ļ	D		
16	393-04090-200	MANIFOLD,INTAKE	1	-	C		
17	392-04090-200	FLANGE,MANIFOLD	1	İ			: •
18	138-04080-200	DEFLECTOR, AIR A	1		D		
19	992-10040-012	WASHER,S,4	2		D		
20	990-11040-141	SCREW,4X14	2		В		
21	400-32540-200	SPACER,INLET MANIFOLD	1		D		
22	202-01003-201	GROMMET, SECONDARY CORE	2		C		
		ROD,THROTTLE	1		D		
	700-12665-110	T -	1		D		
	680-00731-201		1		В		
		COVER,CYLINDER	1		D		
1	203-0604A-202	·	1		C		
32	203-06000-200	GROMMET,PRIMARY CORD	1		С		
	074 04000 000	0000 54571					
	274-04080-800	l '	1		D		
		SCREW,S,5X16	1		C		
		SCREW,5X16/PS	5				
1 3	027-0630A-201		2		C		
	717-04075-800	BODY,MUFFLER,B	1		D		
42	740-01802-200	COLLAR,MUFFLER	1		D		
43	737-04000 200	GASKET,MUFFLER					
1 1		WASHER,5	1		D		1
1 i		BOLT,HEX.HOLE,5X35	1		A		
1 8	992-00050-011	WASHER,SMALL,5	1	1	C		
1 1	990-51050-353	BOLT, HEX. HOLE, 5X35	2		C		
		MUFFLER, ASS'Y	4	- [
		ARRESTER, SPARK	1	- 1			
	. 32 3 107 3 200	A TEO LEIGOT ATTE	'		١		
ч		<u> </u>					

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.3 RECOIL STARTER


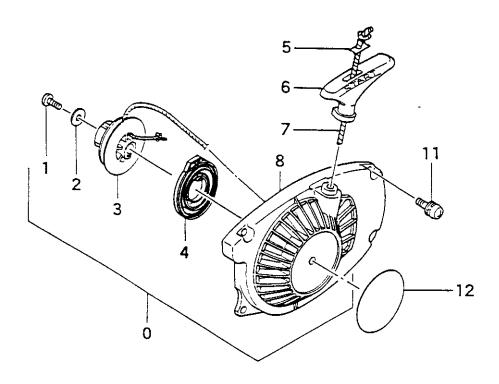


FIGURE 3

REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO	REMARKS
0	756-04080-900	STARTER, RECOIL ASS'Y	1		D		71240 (1440)
1	990-15050-121	SCREW,5X12	11		D		
2	992-08050-006	WASHER,5	1		С		
3	774-04063-800	REEL,STARTER ROPE	1		D		
۷	778-00601-900	SPRING,RECOIL,ASS'Y	1		в	ļ	
5	795-04063-200	STOPPER,ROPE	1		D		
6	785-04063-200	HANDLE,STARTER	1		D		
7	783-04075-200	ROPE,STARTER	1 1		cl	ļ	
8	112-04080-800	CASE,FAN	1		D	İ	
11	994-16050-162	SCREW,5X16/WS	4		ام		
12	950-37900-200	DECAL,PRO-FORCE A	1	ĺ	С		
	<u></u>						


FIG.4 CARBURETOR

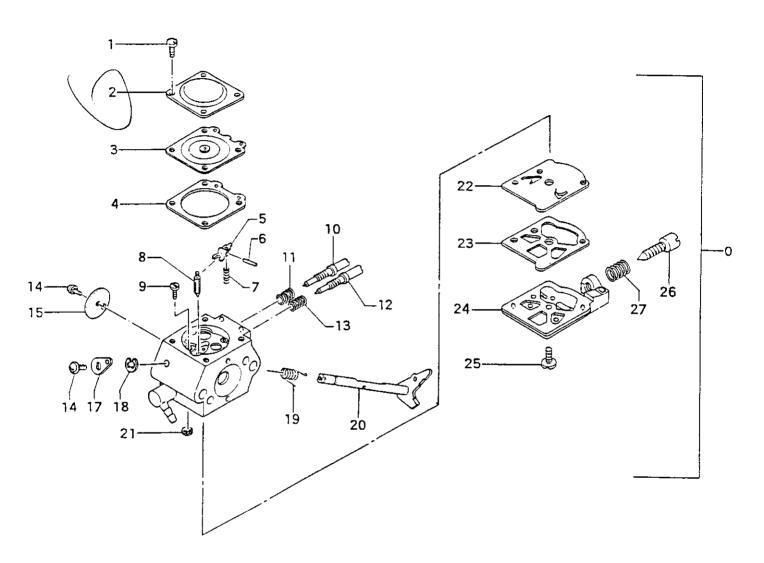

	LCS-4000/B PANTS LISTING									
REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO	REMARKS			
0	455-25052-900	CARBURETOR, ASS'Y	1		D					
1	548-25012-200	SCREW,SET	4		D					
2	476-25004-200	COVER, DIAPHRAGM	1		D					
3	~~~	*DIAPHRAGM,METERING	1	ĺ	A					
4	~~~	*GASKET,DIAPHRAGM	1		A		* Contained in carb repair kit			
5	~~~	*HINGE,VALVE	1		С		650-25001-910			
							(Not availiable individually)			
6	~~~	*PIN,FLOAT	1		D	•	"			
7	477-25013-200	SPRING, VALVE	1		D					
8	~~~	*VALVE,NEEDLE	1		c					
9	546-25001-200	SCREW,SET,HINGE PIN	1		D					
10	461-25043-200	SCREW,LOW ADJUST	1		D					
11	623-25032-200	SPRING,ADJUST,HI/LOW	1		D					
12	460-25027-200	SCREW,HIGH ADJUST	1		D					
13	485-25040-200	SPRING,ADJUST,HIGH	1		ם					
14	467-25003-200	SCREW,SHUTTER	2		С					
15	488-25052-200	VALVE,THROTTLE	1		D					
17	491-25007-200	LEVER,THROTTLE	1		D					
18	489-25007-200	RING,STOP	1	i	С					
					ĺ					
	b .	SPRING,HIGH ADJUST	1	ı	D					
	464-25016-800	SHAFT,THROTTLE	1	}	D					
21	~~~	*SCREEN,INLET	1		C					
22	~~~	*DIAPHRAGM,PUMP	1		С	İ				
23	~~~	*GASKET,PUMP	1		D					
24	575-25043-800	BODY,PUMP	1		D					
		SCREW,SET	1		D					
		SCREW,IDLE ADJUST	1		D	İ				
27	463-25006-200	SPRING,IDLE ADJUST	1		D					
					1					

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.5 HANDLE

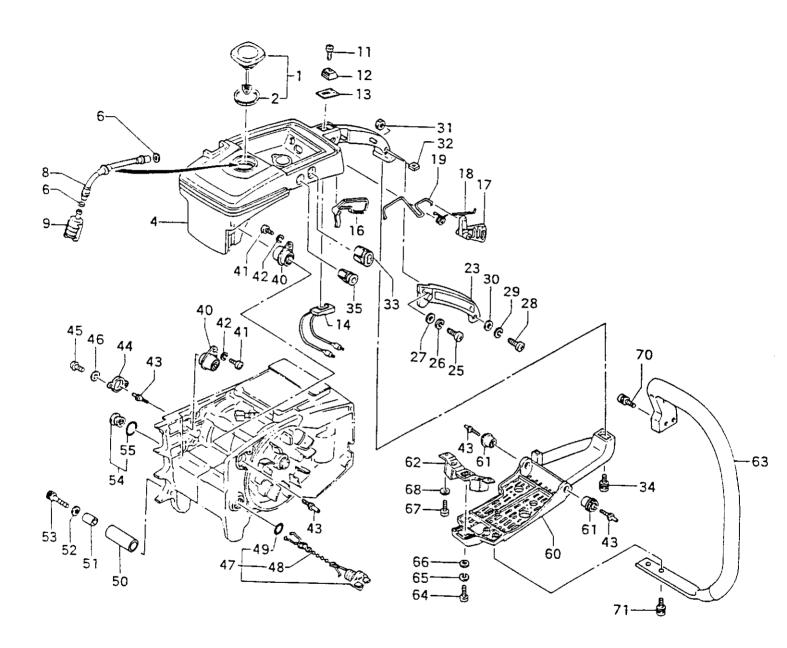

	<u></u>	EC3-4000/B P			_		
REF.		PART DESCRIPTION	Q	С	S	SERIAL NO.	REMARKS
1	635-32615-910	CAP, FUEL TANK ASS'Y	1		С		
2	642-11600-200	GASKET,TANK CAP	1		С		
4	010-32815-800	HANDLE,REAR,A	1		D	1	
6	680-04019-210	CLIP,7	2		В		
8	678-04080-201	PIPE,RUBBER	1		D.		
9	675-04042-80	FILTER,FUEL	1		Α		
11	990-11030-101	SCREW,3X10	1	1	Α		
12	258-11650-20	BUTTON,STOP	1		C		
13	Į.	DECAL,STOP BUTTON			С	:	
14	170-04080-800	BUTTON,STOP	1		D		
	257-32810-200		1		ם		
17	i	LEVER,THROTTLE			D		
''	000 02010 200		'				
18	061-32810-200	SPRING, THROTTLE LEVER					
1		ROD, THROTTLE	1		D		
23			1		D		
	990-11040-301	HANDLE,REAR,B	1		D		
	1	SCREW,4X30	1		D		
	992-10040-012	f i	1		D		
27	992-00040-011	WASHER,4	1		В		
	000 11010 001				_]	
ł	990-11040-221	SCREW,4X22	2		В	i	
	992-10040-012	WASHER,S,4	2		S		
	992-00040-011	WASHER,4	2		В		
		NUT,4	3				
	856-32810-200	· ·	1		D		
33	190-32540-200	CAP,ADJUSTER	1		D		
		SCREW,PS,5X25	1	ı			
1	191-32710-200	;	1	l			
	219-32530-800	1	2		D		
41	990-11050-121	SCREW,5X12	2		A		
42	992-10050-012	WASHER,S,5	2		Α		
43	295-32600-202	BOLT,DAMPER A	4				
44	224-32600-200	CAP,DAMPER	1		D		
45	990-11040-081	SCREW,4X8	2		С		
46	992-00040-011	WASHER,4	2		В		
47	642-32650-901	CAP,OIL ASS'Y	1		c		
48	625-32620-900	CAP,CHAIN,ASS'Y	1		D		
49	999-67020-000	O-RING,P20	1		c		
50	125-32540-200	CATCHER,CHAIN	1		D		
51	478-32540-200	COLLAR	1		D		
52	992-00050-011	WASHER,SMALL,5	1		c	-	
							


^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIGURE 5 cont.

REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO.	REMARKS
53	990-51050-253	BOLT,HEX,5X25	1		В		
54	525-32530-900	CAP,OIL ASS'Y	1		D		
55	999-67020-000	O-RING,P20	1		c		
60	002-32810-800	BASE,ENGINE	1		D		
61	219-32600-821	DAMPER,FRONT	2		С	İ	
62	266-32530-801	DAMPER,B	1		D		
					ı		
63	209-32810-80	HANDLE,FRONT	1		С		
64	990-11050-141	SCREW,5X14	1		D		
65	992-10050-012	WASHER,S,5	1		A	ļ	
66	992-01050-011	WASHER,5	1		Α		
67	990-11050-121	SCREW,5X12	2		Α		
68	992-10050-012	WASHER,S,5	2		Α	1	
70	994-15050-252	SCREW,PS,5X25	2		C		
71	994-15050-162	SCREW,5X16/PS	2		C		

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.6 SIDE CASE

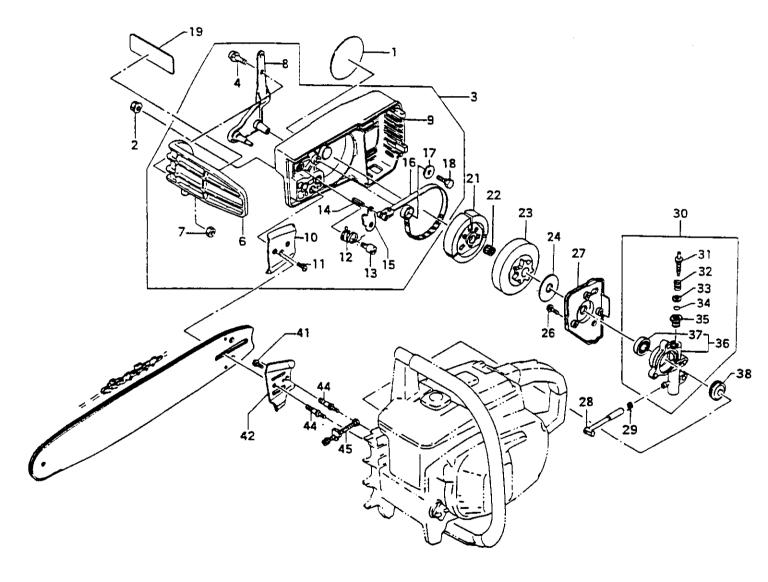

7.10	,	ECS-4000/B		,,,,	,		
REF.		PART DESCRIPTION	Q	С	S	SERIAL NO.	REMARKS
1	906-32842-200	DECAL,ECS-4000B	1		D		
2	121-32530-200	NUT,CLAMP,BAR	2		В		
3	040-32818-910	CASE,SIDE ASS'Y	1		D		
4	994-14050-162	SCREW,S,5X16	2		С		
6	380-32529-200	HANDLE,BRAKE	1		D		
7	991-01050-011	NUT,5	2		Α		
8	361-32750-810	LEVER.BRAKE	1		С		
9	040-32529-810		1		С		
10	462-32525-200	PLATE, GUIDE B	1		С		
11	993-41040-101	SCREW,TAPPING,4X10	1		D		
12	374-32367-210	SPRING, BRAKE	1		D		
13	382-32750-200	BOLT,STEP,A	1		D		
14	993-24040-120	PIN,SPRING,4X12	1		D		
	373-32771-200		1		С		
16	378-32529-800	BAND,BRAKE	1		D		
17	1	WASHER, BRAKE SHAFT	1		С		
1	383-32367-210		1		D		
	907-32842-210	DECAL,ECS-4000B	1		D		
-			'		_]	
21	287-01801-801	CLUTCH	1		D		
]		BEARING,NEEDLE,101310	1		В		
į		HOUSING,CLUTCH,.325"			В		
1	358-04050-201	WASHER, CLUTCH	1		D		
i	990-11050-221	SCREW,5X22	3		В		
27	097-32530-810	COVER,OIL PUMP	1		D		
	051 02000 010		'		ا		
28	515-32530-221	PIPE OIL A	1		D		
i i	680-04060-200	1			D		
1		CASE,OIL PUMP ASS'Y					
31	501-32530-201	PUMP, ADJUSTER OIL					
		SPRING, ADJUSTER	1				
	992-01050-011	WASHER,5	1		A		
	01000-011	TYAOLIELI,U	1		$^{\sim}$		
34	999-67005-000	O-BING P5	1		D		
i		CAP,ADJUST,OIL PUMP					
36	145-32530-200	i e					
37	999-66132-420	SEAL,OIL,#AC13246					
1	084-32350-200	1			į		
41	990-11040-081	SCREW,4X8					
''		10011244,470					
42	461-32540-200	PLATE GUIDE A			c		
44		BOLT, STUD, BAR/CHAIN	2		c		
45	116-32382-900	BOLT, TENSION, CHAIN, ASS'Y	1		В		
	<u> </u>		Ь				

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.7 TOOLS & OPTIONAL PARTS

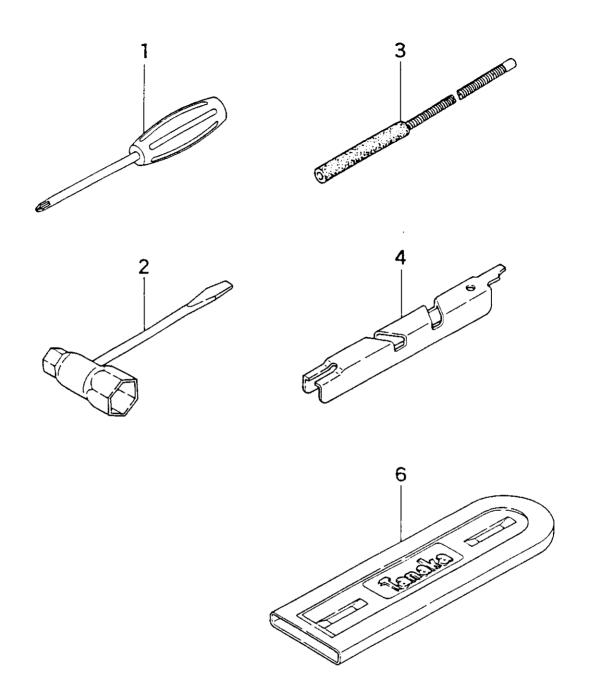


FIGURE 7

	T						
REF.	PART NO.	PART DESCRIPTION	Q	C	s	SERIAL NO.	REMARKS
1	862-20000-200	SCREW DRIVER, PHILLIPS	1		D		12.000
2	013-29325-400	SPANNER,BOX,10X19	1		c		
3	CSF-450	FILE,ROUND,4.5MM	1		Ы		
۷	CDG-300	GUAGE,DEPTH	1		D		
€	BCC-160	COVER,BAR/CHAIN,16"	1		Ы		
€	BCC-160	COVER,BAR/CHAIN,16"	1		D		