



## Parts List for EH1000 Type 5

Item Number	Part Number	Description	Qty Required
1	90535584SV	GEARCASE	1
2	158472-00	SCREW	4
3	158436-00	SCREW	3
4	243404-00	GEARCASE COVER	1
5	659071-00	SELF TAPPING SCREW	4
6	599074-00SV	SPINDLE & GEAR	1
10	132254-07	BRUSH&HOLDER	2
11	243424-02	IDENT. LABEL	1
12	90579273	NAME PLATE	1
14	90555882	FIELD CASE	1
15	90518973	BAFFLE	1
16	90524568	MOTOR ASSY	1
17	158438-00	SCREW	2
18	32699-00	NUT	6
21	90524568	MOTOR ASSY	1
24	151046-00	WASHER,PLAIN	1
25	243454-00	V-RING	1
26	90574535	CABLE ASSY	1
28	90517805	SWITCH & TRIG.	1
30	90517802	HANDLE	1
31	243424-02	IDENT. LABEL	1
32	121640-00	NUT,LOCK	1
33	241204-06	PIVOT BOLT	1
35	330019-12	SCREW	7
36	90517807-01	TUBE	1
37	90517806-01	UPPER TUBE	1
38	241947-02	SCREW	1

## Parts List for EH1000 Type 5

Item Number	Part Number	Description	Qty Required
39	90518859	KNOB	3
40	90517810-01	FRAME	1
41	242961-01	AXLE	1
42	241658-02	RING,PUSH	2
43	598955-00	REAR WHEEL	2
44	90517797-01	LOWER TUBE	1
45	90517814	WHEEL ASSEMBLY	1
48	243394-00	SHOULDER BOLT	1
49	243563-00	PIVOT ARM	1
51	241204-05	PIVOT BOLT	1
52	99370-04	NUT	2
53	243331-00	BLADE GUARD	1
54	330019-13	SCREW,M4X19	1
55	90559242	GUARD LABEL	1
56	243332-01	MOTOR COVER	1
57	EB-007AL	REPLACEMENT BLADE	1
57	243801-02	BLADE	1
58	243797-00	WASHER	1
60	093914-00	NUT	1
61	87205-00	PLUG	2
62	244276-00	EDGE GUIDE	1
63	243336-00	ADJ. LEVER	1
64	243675-00	COMPRESSION SPR	1
65	90559428	LEVER ASSEMBLY	1
67	243966-00	DEPTH LABEL	1
70	90559240	LABEL, EDGING	1
71	330005-06	PROTECTOR CORD	1

## Parts List for EH1000 Type 5

Item Number	Part Number	Description	Qty Required
72	243710-00	POWER CORD	1
74	133876-00	RING,RETAINING	1
75	390462-00	SCREW	1
76	90519997	HANDLE KNOB	1
77	598387-01	HEX NUT	1
78	90580288	AUXILIARY HANDLE	1
79	330003-99	BALL BEARING	1
80	144494-00	BEARING,SLEEVE	1
82	242783-04	CONDUIT	1
800	429698-00	GREASE:4 LB CAN	1